

4 Indicator Description

Indicator	Status	Description
Power	Steady green	The power supply is working properly.
	Blinking green (1s on and 1s off)	The downstream PoF port has no power output.
	Off	The power supply is off or faulty.
Uplink-LOS	Blinking red	The receive optical power is lower than the optical receiver sensitivity.
	Off	The receive optical power is normal or the upstream optical port is not connected.
Uplink-PON	Steady green	The device has been activated.
	Blinking green	The device is being activated.
	Off	The device is not activated or the upstream optical port is not connected.
Downlink-PON	Steady green	There are online ONUs or running services on the corresponding PON port.
	Off	There is no online ONU on the corresponding PON port.
WAN/LAN1 to LAN4	Steady green	The port is connected.
	Off	The port is not connected.