


Wiring Diagram: HCVR-AB Ancillary Board

Connections for all HCVR-AB models

The operation of this product is intended for indoor use only.

The wiring diagram below illustrates connections for all HCVR-AB models of the HCVR-AB Ancillary Board:

Wiring Diagram 1-1 HCVR-AB Ancillary Board Connections

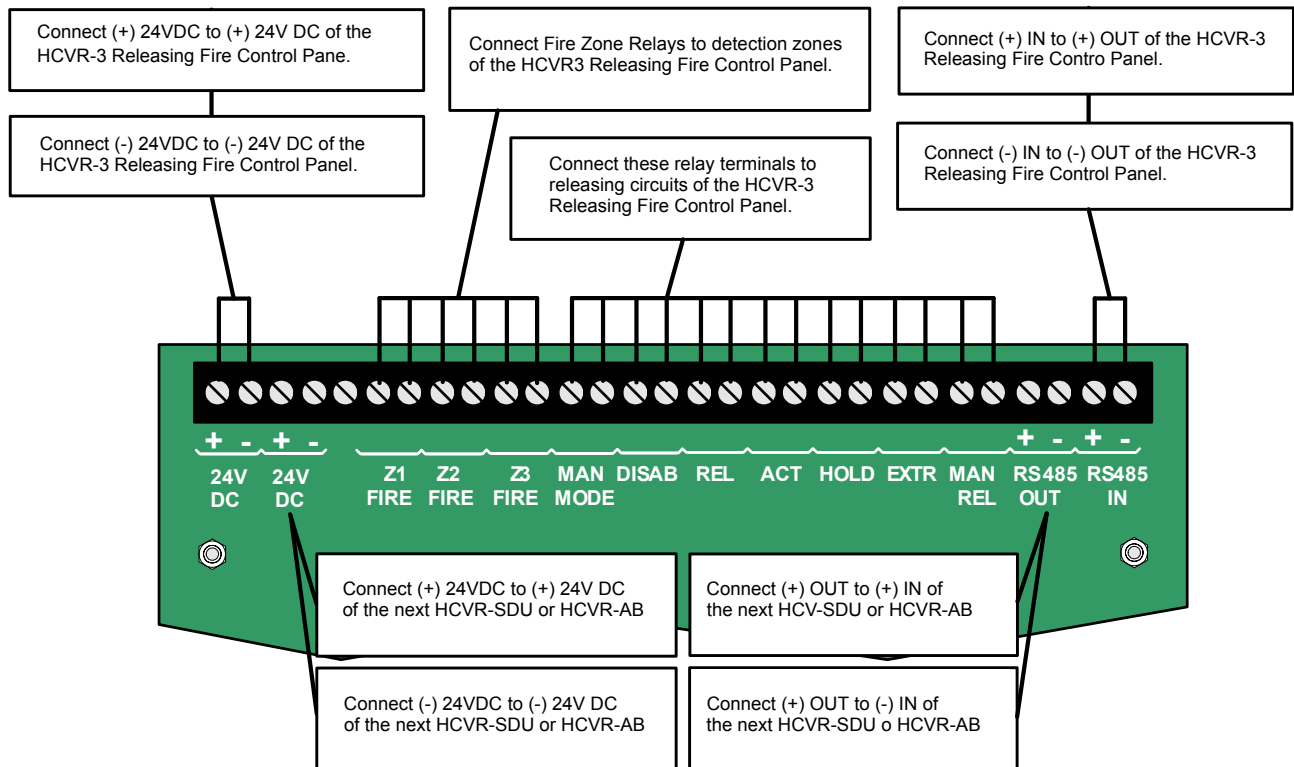

Reference the following documentation for installing, operating and configuring this device with the HCVR-3 Releasing Fire Control Panel:

- *Installation and Operation Manual of the HCVR-3 Releasing Fire Control Panel, HA-06-294, V1.XX*
- *Wiring Diagram of the HCVR-SDU Status Display Unit, HA-03-393, V1.XX*
- *Wiring Diagram of the HCVR-AS Abort Switch, HA-03-395, V1.XX*

If You Need Help

If you need technical support contact Hochiki America at (800) 845 - 6692 or e-mail technicalsupport@hochiki.com. Technical support is available Monday through Friday, 7:00 AM to 5:00 PM, Pacific Standard Time.

