


5 Device Removal

When removing the device, place both hands on both sides of the device. Hold the device with one hand and press the ejector lever on the mounting bracket with the other hand to unlock the device. Slide the device in the reverse direction to unlock it.

Figure 5-1 Removing the device

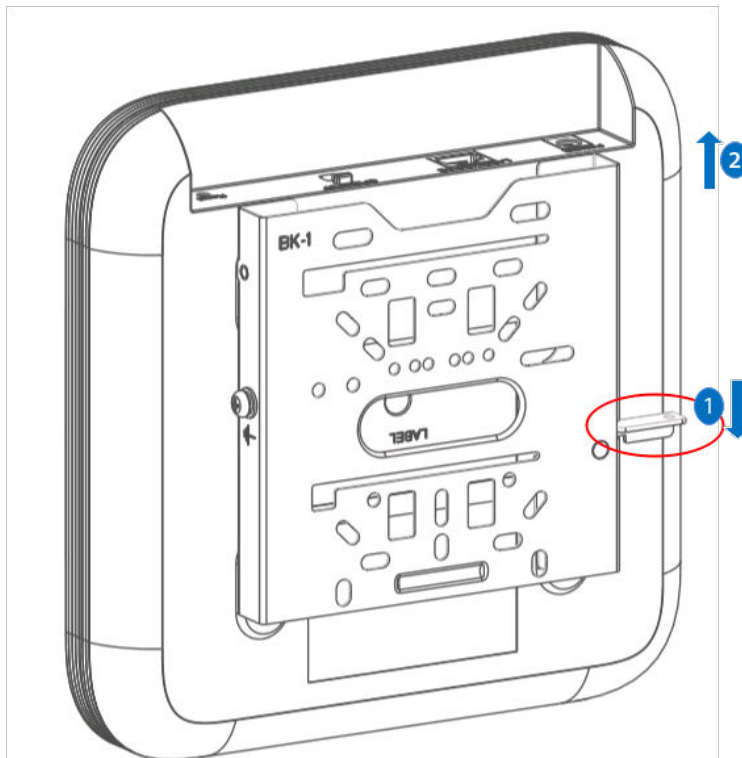

NOTE

If screws are installed, remove the screws and then follow the preceding steps to remove the device.