

BLINKCAST Programmer

Quick Configuration Tool



INTRODUCTION


The BlinkCast Programmer brings operational simplicity to configure flash pattern, phase, and colour of warning lightheades. It can program multiple lightheades at the same time to deliver simple-to-operate and easily managed programming as needed. Comparing with traditional wire tapping, you can also activate the wire functions easier by pressing a Wire Function Button on the BlinkCast Programmer. This tool can save your installation time!

WIRING

It is essential to wire the unit properly to ensure safe and reliable operation. Please read through all instructions thoroughly and carefully before using the unit. The correct wiring and operation is the key to the effectiveness of BlinkCast Programmer. Users must read and follow instructions and precautions in the manual from original manufacturer. Ensure that all connections are tight and double check wiring before using. Failure to follow instructions may void warranties, and/or cause product damage.


The BlinkCast Programmer has two programming modes, "Express" and "Save & Burn":

Option 1 Express Mode

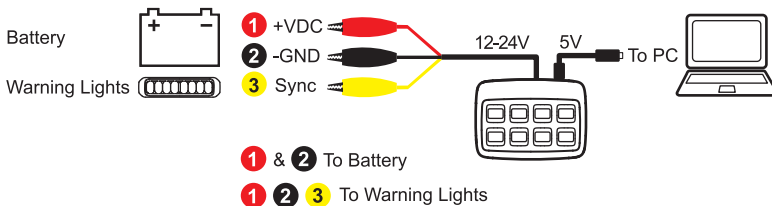


* **NOTE:** Source of power (e.g. vehicle battery) for BlinkCast Programmer and lightheades must be the same. Check the input voltage range of your lightheades & BlinkCast Programmer before you supply the power!

Option 2 Save & Burn Mode: Save

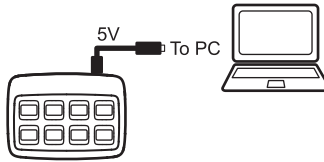

* **NOTE:** PC supplies power to your BlinkCast Programmer via a USB cable.

Save & Burn Mode: Burn

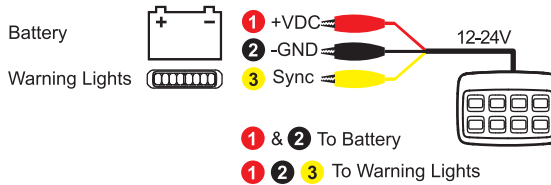


* **NOTE:** Source of power (e.g. vehicle battery) for BlinkCast Programmer and lightheads must be the same.

Check the input voltage range of your lightheads & BlinkCast Programmer before you supply power!

* **NOTE:** For more instructions, refer to [Software Manual] from the support utility site.

PROGRAMMER PANEL / FUNCTION

To turn on the programmer panel, supply power to your BlinkCast Programmer via a USB cable or vehicle battery. See WIRING section for detailed instructions.

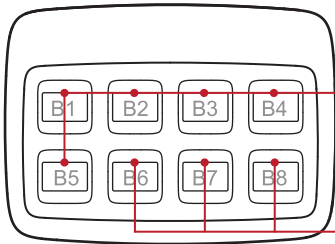

Memory Button B1, B2, B3, B4, B5:

Each button of B1~B5 may be programmed and store a Setting Item (lighthead configuration). Press one button to configure multiple lightheads instantly.

Wire Function Button B6, B7, B8:

Press B6~B8 to activate current function of wire 1~3 respectively.

* **NOTE:** For more instructions, refer to [Software Manual] from the support utility site.

PROGRAMMING

Each memory button may be customized and re-programmed to user's preference (Setting Item) with a combination of settings including:

- Flash Pattern
- Phase
- Colour Mode

BlinkCast Programmer Configuration Utility is the software that can be used to program your BlinkCast Programmer quickly and intuitively. For More information about PC programming and Software, please refer to Software Manual or contact your sales representative.