



How to upgrade the digital signage via USB flash


1. Background

The purpose of this documents is to guide users how to upgrade the digital signage via USB flash.

2. Use the usb disk with FAT32 format. put the version in the root of the usb disk.

名称	修改日期	类型	大小
LOST.DIR	2023/02/27 20:11	文件夹	
update.zip	2023/02/04 20:17	WinRAR ZIP 压缩...	783,510 KB
FocSignPlayer.apk	2023/02/27 15:31	APK 文件	72,792 KB
FOCSIGN_PLAYER_4.0.0_20230227.zip	2023/02/27 15:34	WinRAR ZIP 压缩...	70,827 KB

3. Insert the USB Flash into the device and click upgrade, The upgrade will be successful in about 20 minutes

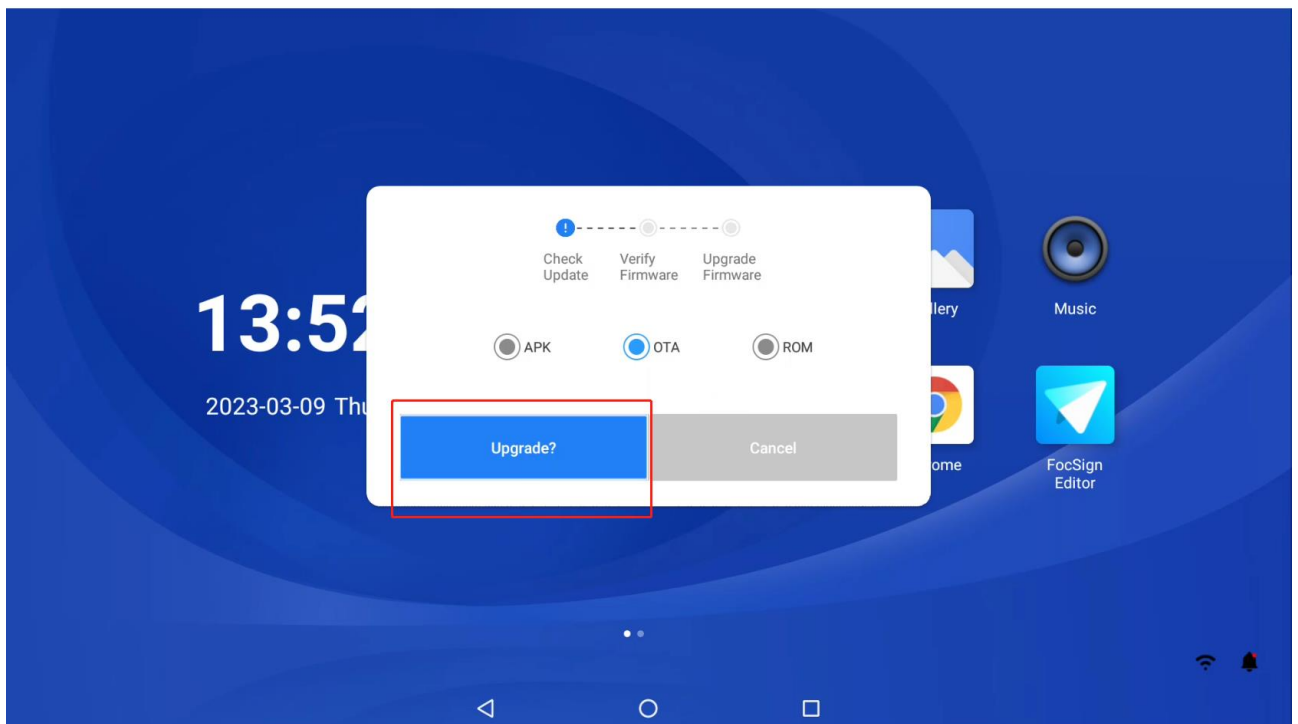



See Far, Go Further