



Yep/USER MANUAL

MODELS:

KDS-EN7 / KDS-DEC7

4K AVoIP Encoder / Decoder



Contents

Contents	2
Introduction	3
Getting Started	3
Overview	4
Typical Applications	5
Controlling your KDS-EN7 / KDS-DEC7	5
Defining KDS-EN7 4K AVoIP Encoder	6
Defining KDS-DEC7 4K AVoIP Decoder	7
Mounting KDS-EN7	8
Connecting KDS-EN7	9
Connecting the Audio/Input Output	10
Understanding LED Functionality	11
Connecting to KDS-EN7 via RS-232	11
Operating and Controlling KDS-EN7	12
Configuring the Network Switch	12
Using Menu Navigation Buttons	13
Operating via Ethernet	17
KDS-EN7 Embedded Web Pages	20
Main (KDS-EN7): AV Routing	21
AV Settings (KDS-EN7): Video, Audio, EDID	22
Device Settings (KDS-EN7): General, Network, Time and Date, Security, Users	27
Control Settings (KDS-EN7): CEC, RS-232, IR	38
Diagnostics (KDS-EN7): Status, Connections	40
About KDS-EN7	42
KDS-DEC7 Embedded Web Pages	43
Main (KDS-DEC7): AV Routing, OSD Configuration, KVM Combiner, Video Wall, Overlay	45
AV Settings (KDS-DEC7): Video	55
Device Settings (KDS-DEC7): General, Network, Time and Date, Security, Users	58
Control Settings (KDS-DEC7)	65
Diagnostics (KDS-DEC7): Status, Connections	66
About KDS-DEC7	68
KVM Roaming, OSD menu and Fast Switching	69
Configuring KVM Roaming	70
KVM and OSD Menu Switching	73
Fast switching configuration	74
Upgrading Firmware	75
Technical Specifications	76
KDS-EN7 Specifications	76
KDS-DEC7 Specifications	77
Default Communication Parameters	79
Default EDID	79
Default Parameters	82
KDS-DEC7 Default Parameters	83
Protocol 3000	85
Understanding Protocol 3000	85
Protocol 3000 Commands	86
Result and Error Codes	104
KDS JSON Configuration API	105

Introduction

Welcome to Kramer Electronics! Since 1981, Kramer Electronics has been providing a world of unique, creative, and affordable solutions to the vast range of problems that confront the video, audio, presentation, and broadcasting professional on a daily basis. In recent years, we have redesigned and upgraded most of our line, making the best even better!

Getting Started

We recommend that you:

- Unpack the equipment carefully and save the original box and packaging materials for possible future shipment.
- Review the contents of this user manual.



Go to www.kramerav.com/downloads/KDS-EN7 or www.kramerav.com/downloads/KDS-DEC7 to check for up-to-date user manuals, application programs, and to check if firmware upgrades are available (where appropriate).

Achieving Best Performance

- Use only good quality connection cables (we recommend Kramer high-performance, high-resolution cables) to avoid interference, deterioration in signal quality due to poor matching, and elevated noise levels (often associated with low quality cables).
- Do not secure the cables in tight bundles or roll the slack into tight coils.
- Avoid interference from neighboring electrical appliances that may adversely influence signal quality.
- Position your Kramer **KDS-EN7** / **KDS-DEC7** away from moisture, excessive sunlight and dust.

Safety Instructions



Caution:

- This equipment is to be used only inside a building. It may only be connected to other equipment that is installed inside a building.
- For products with relay terminals and GPI\O ports, please refer to the permitted rating for an external connection, located next to the terminal or in the User Manual.
- There are no operator serviceable parts inside the unit.



Warning:

- Use only the power cord that is supplied with the unit.
- To ensure continuous risk protection, replace fuses only according to the rating specified on the product label which is located on the bottom of the unit.

Recycling Kramer Products

The Waste Electrical and Electronic Equipment (WEEE) Directive 2002/96/EC aims to reduce the amount of WEEE sent for disposal to landfill or incineration by requiring it to be collected and recycled. To comply with the WEEE Directive, Kramer Electronics has made arrangements with the European Advanced Recycling Network (EARN) and will cover any costs of treatment, recycling and recovery of waste Kramer Electronics branded equipment on arrival at the EARN facility. For details of Kramer's recycling arrangements in your particular country go to our recycling pages at www.kramerav.com/quality/environment.

Overview

Congratulations on purchasing your Kramer **KDS-EN7** / **KDS-DEC7** is an advanced encoder/decoder for streaming 4K video signals, USB, IR, RS-232, or CEC signals via Ethernet over copper cable in unicast (one-to-one) or multicast (one-to-many) configurations.

KDS-EN7 encodes and streams the video signal, and transmits USB, IR, RS-232, or CEC signals over an IP network. **KDS-DEC7** decodes the video signal and receives USB, IR, RS-232, or CEC signals.

KDS-EN7 and **KDS-DEC7** provide exceptional quality, advanced and user-friendly operation, and flexible control.

Exceptional Quality

- Video Streaming Transmitter/Receiver - Streams up to 4K@30Hz (4:4:4) resolution signals over a 1G network interface.
- Streaming Support – Provides unicast and multicast streaming.
- Flexible Analog Audio Embedding and De-embedding - Select the balanced analog audio as input to embed into the streaming and HDMI output signal, or as output to extract the HDMI audio signal and output it as balanced analog audio.
- Analog Audio De-embedding – **KDS-DEC7** extracts the HDMI audio signal or LAN streaming audio and outputs it as balanced analog audio.
- Video Wall Support – **KDS-DEC7** can create a grid and/or mosaic video wall of up to 16x16 displays.
- KVM and OSD Menu Switching - **KDS-DEC7** On Screen Display Menu triggered by USB hotkey for quick switching between different encoders.

Advanced and User-friendly Operation

- Convenient and Comprehensive Control – Control the unit using intuitive embedded web pages, Protocol 3000 API commands via Ethernet, or front panel LCD and navigation buttons.
- Supports Grid or Mosaic Video Wall.
- Built-in Resilient Security Features - Preserves the integrity, availability and confidentiality of the IT network via a highly secured and resilient AVoIP solution. **KDS-EN7** and **KDS-DEC7** comply with IT security requirements, including 802.1x and HTTPS/TLS.
- PoE Support – Powered with PoE connection from PoE switch.
- Keyboard and Mouse Roaming.
- Control Gateway - Through P3K or special TCP connection, users can control/communicate with IR, RS-232, or CEC to the connected devices.
- Separate Service LAN Port – can be used for physical separation between AV and command streams to separate LAN for security and reliability purposes.

Flexible Connectivity

- Analog/embedded audio inputs and outputs.

Typical Applications

KDS-EN7 / KDS-DEC7 is ideal for the following typical applications:

- Real-time essential installations such as command and control rooms.
- Large scale AV content sharing installations using existing wires and infrastructure in corporate offices and government applications.
- AV distribution systems with one or more sources and multiple displays in schools, universities, and public venues.
- AV installations where low latency KM/KVM capabilities are required.

Controlling your **KDS-EN7 / KDS-DEC7**

Control your **KDS-EN7 / KDS-DEC7** directly via Navigation buttons, or via:

- The Ethernet using built-in user-friendly web pages.
- Protocol commands.

Defining KDS-EN7 4K AVoIP Encoder

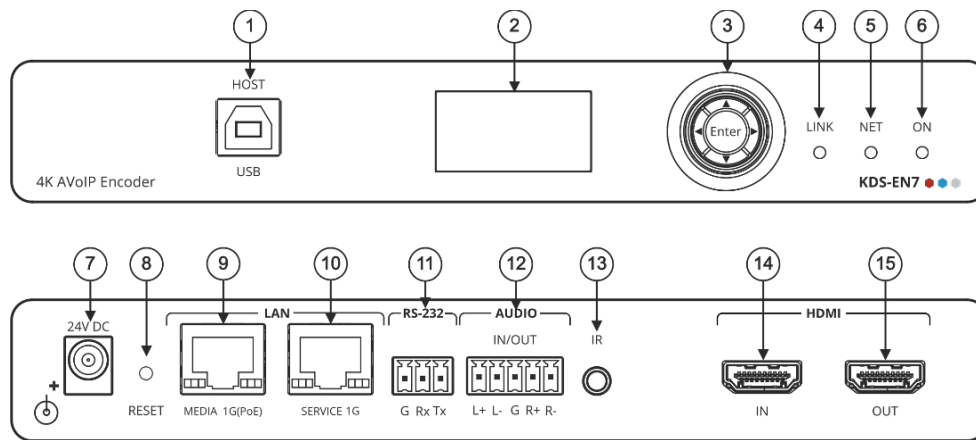


Figure 1: KDS-EN7 4K AVoIP Encoder

#	Feature	Function	
①	HOST USB Type B Port	Connect to a USB host, for example, a PC for KVM/USB support.	
②	LCD Display	Use for device configuration such as unique channel/AV stream setting on encoder and channel tuning on decoder.	
③	Menu Navigation Button	◀	Press to return to the previous menu.
		▲	Press to move up to the next configuration parameter.
		▶	Press to go to the next menu.
		▼	Press to move down to the next configuration parameter.
		Enter	Press to accept changes.
④	LINK LED	See Understanding LED Functionality on page 11.	
⑤	NET LED		
⑥	ON LED		
⑦	24V/5A DC Connector	Connect to the power adapter (purchased separately).	
⑧	RESET Recessed Button	Press and hold for 10 seconds to reset the device to its factory default values. All LEDs flash.	
⑨	LAN MEDIA 1G(PoE) RJ-45 Port	Unicast: connect for streaming either directly to a decoder or via LAN. Multicast: connect to multiple decoders or connect to one decoder to which multiple decoders are daisy-chained via SERVICE (1G) port.	
⑩	LAN SERVICE 1G RJ-45 Port	Used optionally for physical separation between AV and command streams to separate LAN for security and reliability purposes.	
⑪	RS-232 3-pin Terminal Block Connector	Connect to an RS-232 device to use as a Gateway and bi-directional signal extension (even when no AV signal is extended).	
⑫	AUDIO IN/OUT 5-pin Terminal Block Connector	Connect to a balanced analog stereo audio source/acceptor.	
⑬	IR 3.5 Mini Jack	Connect to an IR sensor or emitter for bi-directional signal extension (even when no AV signal is extended). Expected voltage for IR receiver - (3.3V).	
⑭	HDMI IN Connector	Connect to an HDMI source.	
⑮	HDMI OUT Connector	Connect to an additional KDS-EN7 device to loop the signal, or to a local acceptor.	

Defining KDS-DEC7 4K AVoIP Decoder

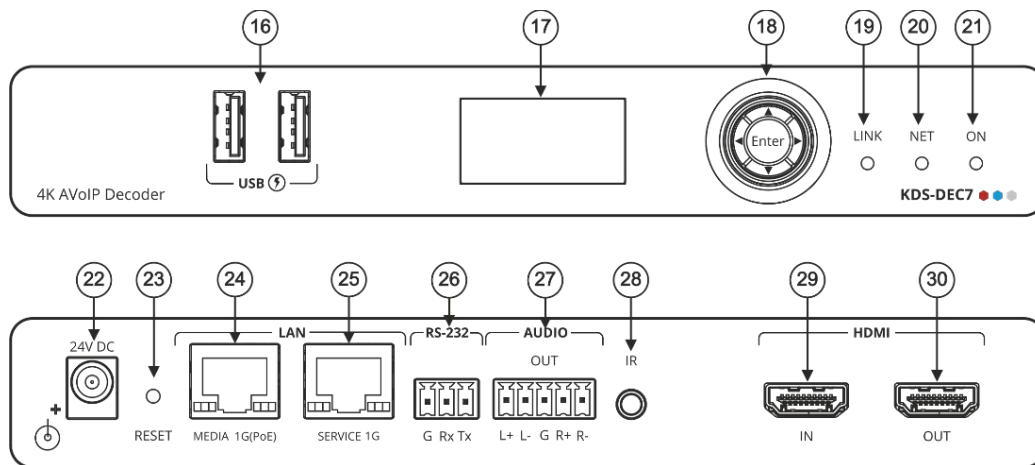


Figure 2: KDS-DEC7 4K AVoIP Decoder

#	Feature	Function	
16	USB Type A Port	Connect to a keyboard and mouse.	
17	LCD Display	Upon power up, displays the last video source. Use for device information and configuration.	
18	Menu Navigation Button	◀	Press to return to the previous menu.
		▲	Press to move up to the next configuration parameter.
		▶	Press to go to the next menu.
		▼	Press to move down to the next configuration parameter.
	Enter	Press to accept changes.	
19	LINK LED	See Understanding LED Functionality on page 11.	
20	NET LED		
21	ON LED		
22	24V/5A DC Connector	Connect to the power adapter (purchased separately).	
23	RESET Recessed Button	Press and hold for 10 seconds to reset the device to its factory default values. All LEDs flash.	
24	LAN MEDIA 1G(PoE) RJ-45 Port	Connect for streaming.	
25	LAN SERVICE 1G RJ-45 Port	Use, optionally, to create a physical separation between AV streams (MEDIA) and command streams (SERVICE), for enhancing security and reliability.	
26	RS-232 3-pin Terminal Block Connector	Connect to an RS-232 device to use as a Gateway and bi-directional signal extension (even when no AV signal is extended).	
27	AUDIO OUT 5-pin Terminal Block Connector	Connect to a balanced analog stereo audio acceptor.	
28	IR 3.5 Mini Jack	Connect to an IR sensor or emitter for bi-directional signal extension (even when no AV signal is extended). Expected voltage for IR receiver – (3.3V).	
29	HDMI IN Connector	Connect to an HDMI source.	
30	HDMI OUT Connector	Connect to an HDMI acceptor.	

Mounting KDS-EN7

This section provides instructions for mounting **KDS-EN7**. Before installing, verify that the environment is within the recommended range:



- Operation temperature – 0° to 40°C (32 to 104°F).
- Storage temperature – -40° to +70°C (-40 to +158°F).
- Humidity – 10% to 90%, RHL non-condensing.



Caution:

- Mount **KDS-EN7** before connecting any cables or power.



Warning:


- Ensure that the environment (e.g., maximum ambient temperature & air flow) is compatible for the device.
- Avoid uneven mechanical loading.
- Appropriate consideration of equipment nameplate ratings should be used for avoiding overloading of the circuits.
- Reliable earthing of rack-mounted equipment should be maintained.
- Maximum mounting height for the device is 2 meters.

Mount KDS-EN7 in a rack:


- Use the recommended rack adapter
(see www.kramerav.com/product/KDS-EN7).

Mount KDS-EN7 on a surface using one of the following methods:

- Attach the rubber feet and place the unit on a flat surface.
- Fasten a bracket (included) on each side of the unit and attach it to a flat surface. For more information go to www.kramerav.com/downloads/KDS-EN7.

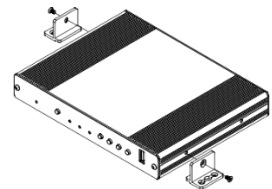

Connecting KDS-EN7

 By-default, the device uses PoE for powering the device. Optionally, you can separately purchase a power adapter to connect to the product and plug into the mains electricity.

Always switch off the power to each device before connecting it to your **KDS-EN7** and **KDS-DEC7**. After connecting your devices, connect their power and then switch on the power to each device.

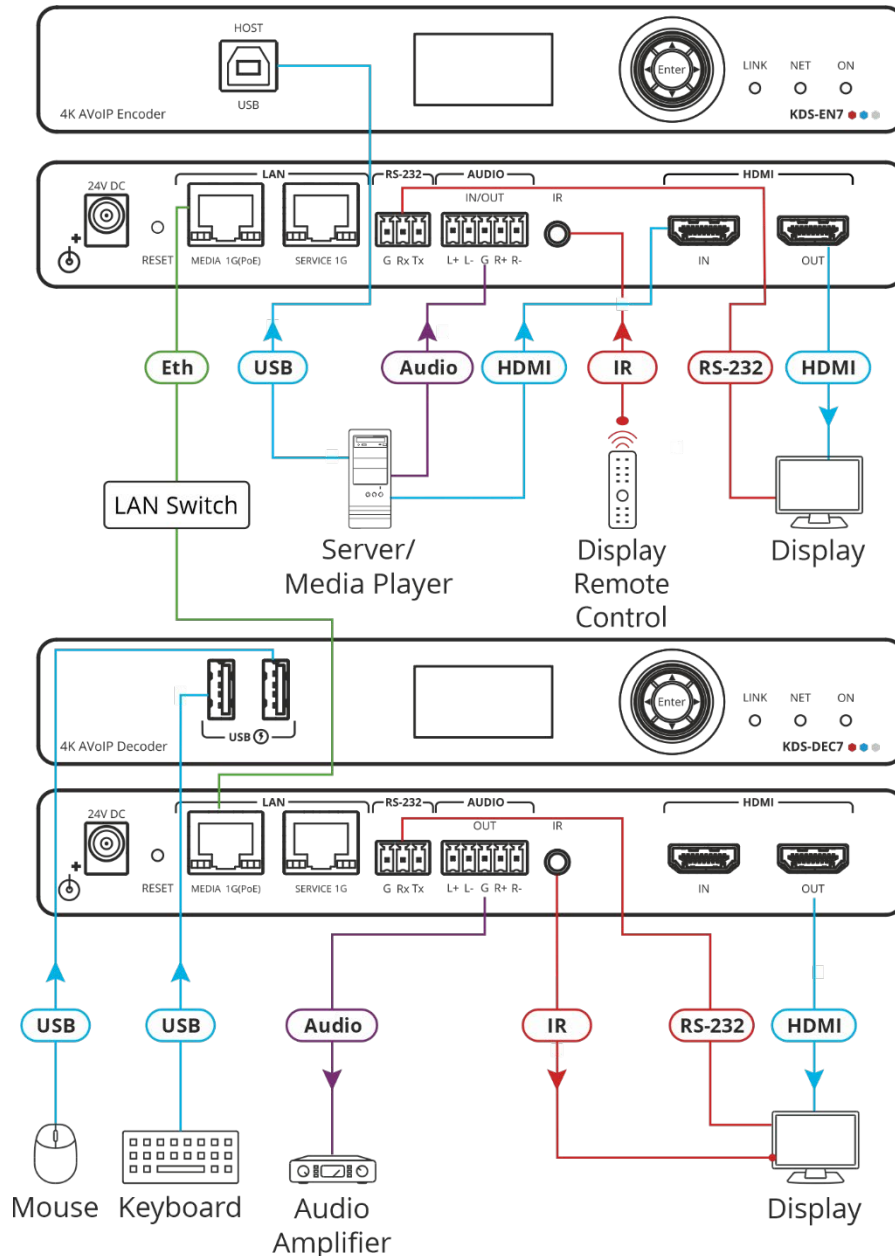


Figure 3: Connecting the KDS-EN7 to a KDS-DEC7

To connect KDS-EN7 as illustrated in the example in [Figure 3](#):

1. Connect an HDMI source (for example, a server or a media player) to the HDMI IN connector (14) on the **KDS-EN7**.

2. Connect a balanced stereo audio source (for example, the server audio connector) to the AUDIO IN/OUT 5-pin terminal block connector (12) on the **KDS-EN7**.
3. Connect the LAN MEDIA 1G(PoE) RJ-45 port (9) on the **KDS-EN7** to the LAN MEDIA 1G(PoE) RJ-45 port (24) on the **KDS-DEC7** via a LAN switch.
4. Connect the HDMI OUT connector (30) on the **KDS-DEC7** to an HDMI acceptor (for example, a display).
5. Connect the AUDIO OUT 5-pin terminal block connector (27) on the **KDS-DEC7** to a balanced stereo audio acceptor (for example, an audio amplifier).
6. Connect the USB ports:
 - On **KDS-EN7**, connect the HDMI input (for example, the server) to the USB HOST port (1).
 - On **KDS-DEC7**, connect a mouse and a keyboard to the two USB type A ports (16).
7. Control the display connected to **KDS-DEC7** from the encoder side via IR:
 - On **KDS-EN7**, connect an IR sensor cable to the IR 3.5mm mini jack (13).
 - On **KDS-DEC7**, connect the IR 3.5mm mini jack (28) to an emitter cable and attach the emitter side to the IR sensor of the display.
8. Connect RS-232 3-pin terminal block connectors:
 - On the **KDS-EN7**, connect the RS-232 port (11) to a laptop/controller.
 - On the **KDS-DEC7**, connect RS-232 (26) to the display.



RS-232 bidirectional signals can be sent between the display and the laptop connected to the HDMI OUT connector on the **KDS-DEC7**.


Connecting the Audio/Input Output

The following are the pinouts for connecting the input/output to a balanced or unbalanced stereo audio acceptor:




L+ L- G R+ R-

Figure 4: Connecting to a Balanced Stereo Audio Source/Acceptor

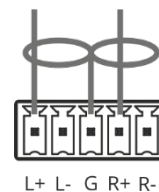

L+ L- G R+ R-

Figure 5: Connecting to an Unbalanced Stereo Audio Acceptor

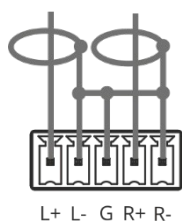

L+ L- G R+ R-

Figure 6: Connecting an Unbalanced Stereo Audio Source to the Balanced Input

Understanding LED Functionality

KDS-EN7 and KDS-DEC7 LEDs function as follows:

LED	Color	Definition
LINK LED	Lights Green	A link is established between KDS-EN7 and KDS-DEC7 and is transmitting A/V signals.
	Flashes Green	A signal is established, and a problem is detected.
NET LED	Off	No IP address is acquired.
	Lights green	A valid IP address has been acquired.
	Flashes Green very fast (for 60sec)	A device identification command is sent (Flag me).
	Lights Yellow	Device falls back to default IP address.
	Lights Red	Security is blocking IP access.
ON LED	Flashes Red	On fallback address acquiring, device 'ON' LED flashes continuously in slow 0.5/10sec cadence.
	Lights Green	When power is on.
	Flashes Green Slowly	Device is in standby mode.
	Flashes green fast	FW is downloaded in the background.
	Flashes Green very fast (for 60sec)	A device identification command is sent (Flag me).
	Lights Yellow	Device falls back to default IP address.
	Lights Red	Security is blocking IP access.
Post reboot, all LEDs light for 3 seconds then return to their normal LED display mode.		

Connecting to KDS-EN7 via RS-232

You can connect to **KDS-EN7** via an RS-232 connection ⁽¹³⁾ using, for example, a PC.




This section applies to **KDS-DEC7** too.

KDS-EN7 features an RS-232 3-pin terminal block connector allowing the RS-232 to control **KDS-EN7**.

Connect the RS-232 terminal block on the rear panel of **KDS-EN7** to a PC/controller, as follows:

From the RS-232 9-pin D-sub serial port connect:

- Pin 2 to the TX pin on the **KDS-EN7** RS-232 terminal block
- Pin 3 to the RX pin on the **KDS-EN7** RS-232 terminal block
- Pin 5 to the G pin on the **KDS-EN7** RS-232 terminal block

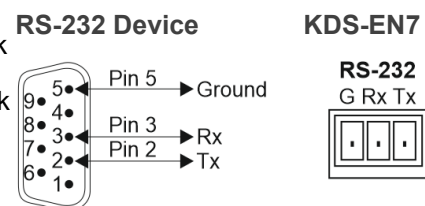

Operating and Controlling KDS-EN7

This section describes the following actions:

- [Configuring the Network Switch](#) on page [12](#).
- [Using Menu Navigation Buttons](#) on page [13](#).
- [Operating via Ethernet](#) on page [17](#).

Configuring the Network Switch

Before setting the system, make sure that your AV over IP network switch meets the following minimum requirements:

- Jumbo Frames – On. (at least 8000 bytes).
- IGMP Snooping – On.
- IGMP Querier – On.
- IGMP Immediate/Fast Leave – On.
- Unregistered Multicast Filtering – On.

Using Menu Navigation Buttons

Connect the device to the 24V DC power adapter and connect the adapter to the mains electricity. The ON LED lights green, and the LINK LED flashes (indicating that no streaming activity is detected).

Use the navigation button to easily view and set basic device parameters via the Device menu, appearing on the device LCD display (2), see:

- [Using KDS-EN7 Navigation Buttons](#) on page [13](#).
- [Using KDS-DEC7 Navigation Buttons](#) on page [15](#).



KDS-EN7 and KDS-DEC7 have slightly different menus.

Use the Navigation buttons (3) / Use the:

- Up arrow – to move to the next configuration parameter.
- Left arrow – to return to the previous menu.
- Right arrow – to go to the next menu.
- Enter button – accept and save the change.
- Defining device settings.

Using KDS-EN7 Navigation Buttons

- [Defining Device Status](#) on page [13](#).
- [Viewing Device Information](#) on page [14](#).
- [Selecting the EDID](#) on page [14](#).
- [Defining HDCP Settings](#) on page [14](#).
- [Defining Encoder Device Channel Number](#) on page [14](#).

Defining Device Status

View the device parameters.

To view device parameters:

1. Press the left or right arrows to access the device status (DEV STATUS) menu.
2. Press the up or down arrows to view the following information:
 - LAN1 STATUS, including IP address, Subnet mask and Gateway address
 - LAN2 STATUS, including IP address, Subnet mask and Gateway address.
 - HDMI STATUS, including video input resolution and HDCP settings status.
 - View Device channel ID (CH DEFINE).
 - Device internal TEMPERATURE (°C).

Device status is viewed.

Viewing Device Information

To view device parameters:

1. Press the left or right arrows to access the device status menu.
2. Press the up or down arrows to view the device firmware and hardware information:
 - Firmware version (FW).
 - Bootloader information (BL).
 - Hardware version (HW).

Device information is viewed.

Selecting the EDID

To select the EDID:

1. Press the left or right arrows to access the device setting menu.
2. Press the up or down arrows to select the EDID settings menu.
3. Select the EDID from the following options:

Select	EDID Setting
0	Default
1	4K30_2.0CH
2	4K30_Dolby
3	1080P50_Dolby
4	720P50_2.0
5	720P50_Dolby

4. Press **Enter** to accept change.

EDID on the input is set.

Defining HDCP Settings

Enable or disable HDCP on the input via the navigation buttons.

To define HDCP settings:

1. Press the left or right arrows to access the HDCP Settings menu.
2. Press the up or down arrows to select HDCP support mode:
 - Select ON to enable HDCP support.
 - Select OFF to disable HDCP support.
3. Press **Enter** to accept HDCP mode.

Defining Encoder Device Channel Number

Set a device channel number from 1 to 999.

To define the encoder channel number:

1. Press the left or right arrows to access the CH DEFINE menu.

2. Press the up or down arrows to set a first digit (0 to 9).
3. Press left and right arrows to add another digit (0 to 9).
4. Press **Enter** to accept channel number.

Channel number for this device is defined.

Using KDS-DEC7 Navigation Buttons

Defining Device Status

You can view the device parameters.

To view device parameters:

1. Press the left or right arrows to access the device status menu.
2. Press the up or down arrows to view the following information:
 - LAN 1 status, including IP address, Subnet mask and Gateway address
 - LAN2 status, including IP address, Subnet mask and Gateway address.
 - HDMI status, including video input resolution and HDCP settings status.
 - View the encoder channel that was selected.
 - Device internal temperature (°C).

Device status is viewed.

Viewing Device Information

To view device parameters:

1. Press the left or right arrows to access the device status menu.
2. Press the up or down arrows to view the device firmware and hardware information:
 - Firmware version.
 - Bootloader information.
 - Hardware version.

Device information is viewed.

Selecting the video input signal

You can either select the streaming input or the local HDMI input signal to route to the HDMI output.

To select the streaming input:

1. Press the left or right arrows to access the device setting menu.
2. Press the up or down arrows to select Input Setting.
3. Select one of the HDMI inputs:
 - STREAM IN
 - HDMI IN

4. Press **Enter** to accept change.

The input is selected.

Defining Output Resolution

Select the display resolution.

To select the output resolution:

1. Press the left or right arrows to access the Device Settings menu.
2. Press the up or down arrows to select RESOLUTION Setting:
 - Pass-through
 - 720P60
 - 1080P60
 - 1080P50
 - 2160P25
 - 2160P30
3. Press **Enter** to accept output resolution.

Resolution is selected.

Selecting an Encoder Device Channel Number on the decoder

Select the channel number of a specific encoder.

To select an encoder channel number:

1. Press the left or right arrows to access the encoder CH Select menu.
2. Press the up or down arrows to select the first digit (0 to 9).
3. Press left and right arrows to add another digit (0 to 9).

Channel number for the specific encoder is selected.

Operating via Ethernet

This section describes the following actions:

- [Allocating the IP Address via LCD screen menu](#) on page [17](#).
- [Accessing the Web UI](#) on page [18](#).
- [Connecting the Ethernet Port via a Network Hub or Switch](#) on page [19](#).
- [Configuring the Ethernet Port](#) on page [19](#).

Allocating the IP Address via LCD screen menu

KDS-EN7 / KDS-DEC7 IP default static addresses are: 192.168.1.39 for the Encoder and 192.168.1.40 for the Decoder. By default, DHCP is enabled, and assigns an IP address to the device. If DHCP Server is not available, for example, in case a device is connected directly to the laptop, that device gets the default IP address. If these IP addresses are already in use, the system searches for a random unique IP in the range of 192.168.X.Y. the allocated IP address can be identified using the LCD screen menu.

Setting Channel Number

Each encoder requires a unique channel number, and the connected decoders should be tuned to that encoder channel. You can set the channel number via the LCD screen menu or the embedded web pages.

To set the channel number for KDS-EN7/KDS-DEC7, via LCD screen menu:

1. Connect the device to the 24V DC power adapter and connect the adapter to the mains electricity. The ON LED lights green, and the LINK LED flashes (indicating that no streaming activity is detected).
2. In the LCD screen menu, go to DEV SETTINGS > CH DEFINE.
3. Change channel number using arrow buttons:
 - For the **KDS-EN7** set a unique channel number.
 - For each of the **KDS-DEC7** devices, set to the defined **KDS-EN7** channel number.
4. Press **Enter** to save your selection.

To set the channel number via web pages:

1. Connect the **KDS-EN7 / KDS-DEC7** Ethernet port to the network and power the device.
2. Access the embedded web pages.
3. In the **Main** page:
 - For **KDS-EN7**:
 - Go to **AV Routing** page.
 - Select **Channel ID** and define the channel ID number.

- For **KDS-DEC7**:
 - Go to **AV Routing** page.
 - Select **Channel ID** (corresponding to the desired encoder channel ID).

By default, **KDS-EN7** and **KDS-DEC7** are DHCP-enabled. This section describes how to operate via the Ethernet and access the IP address when DHCP is enabled and when a static IP address is used.

You can connect to **KDS-EN7** via Ethernet using either of the following methods:

- When DHCP is enabled (see, for example, [Network Settings](#) on page [29](#)).

When using a static IP Address (DHCP is disabled):

- Directly to the PC using a crossover cable (see on page [19](#)).
- Via a network hub, switch, or router, (using a static IP address) using a straight-through cable (see [Connecting the Ethernet Port via a Network Hub](#) on page [19](#)).


Note: If you want to connect via a router and your IT system is based on IPv6, speak to your IT department for specific installation instructions.

Accessing the Web UI

By default, IP setting for KDS-7 Decoders is DHCP.

To access the Web UI, perform the following:

1. Connect the LAN port of the device to a local area network.
Make sure that there is a DHCP server in the Network so that the device can obtain a valid IP address.
2. Connect your PC to the same network as the device.
3. Input the device's IP address in the browser and press Enter, the following window pops up.
The allocated IP address can be checked using LCD screen menu.

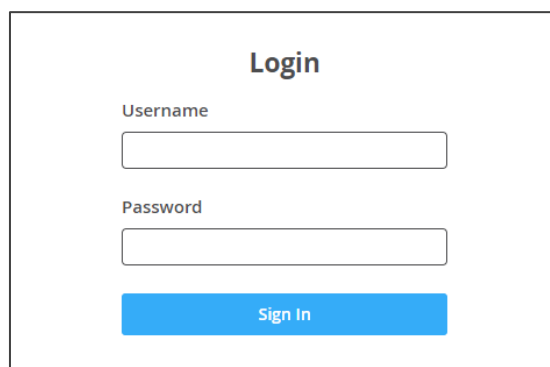

The image shows a web browser window titled "Login". It contains two input fields: "Username" and "Password". Below the "Password" field is a blue button labeled "Sign In".

Figure 7: Login Window

4. Input username and password (default username / password: admin / admin) and click **Sign In** to enter the main page of web UI.

Connecting the Ethernet Port Directly to a PC




You can connect the Ethernet port directly to the Ethernet port on your PC using LAN 1 (use a crossover cable with RJ 45 connectors).

This type of connection is recommended for identifying KDS-7 devices with the factory configured default IP addresses.

After connecting the device to the Ethernet port, configure your PC as follows:

1. Click **Start > Settings > Network and Internet**.
2. Click **Change Adapter Settings**.
3. Highlight the network adapter you want to use to connect to the device and click **Change settings of this connection**. The **Local Area Connection Properties** window appears (see image on the right).
4. Highlight **Internet Protocol Version 4 (TCP/IPv4)**.

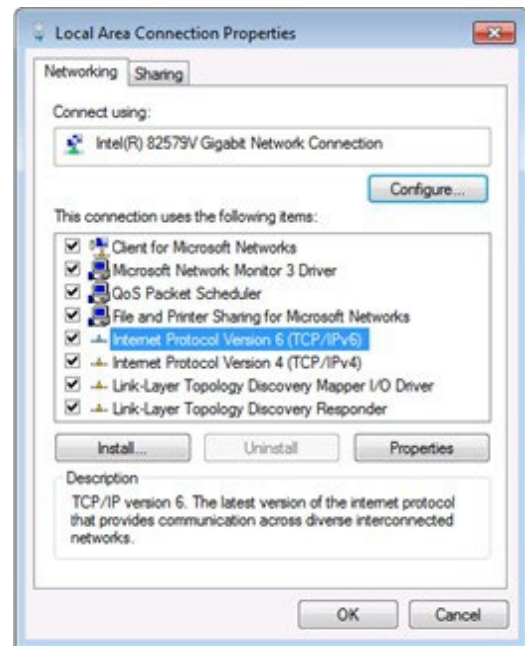

Connecting the Ethernet Port via a Network Hub or Switch

You can connect the Ethernet ports of the KDS-7 devices to the Ethernet port on a network hub/switch (they must both be connected to the same network) or connect them directly to one another using a cable with RJ 45 connectors.

Configuring the Ethernet Port



You can set the Ethernet parameters via the embedded web pages (requires a network hub or switch connection).

KDS-EN7 Embedded Web Pages

KDS-EN7 enables you to configure settings via Ethernet using built-in, user-friendly web pages. The Web pages are accessed using a Web browser and an Ethernet connection.

-  You can also configure **KDS-EN7** via Protocol 3000 commands (see [Protocol 3000 Commands](#) on page [86](#)).

Before attempting to connect, perform the procedure in [Operating via Ethernet](#) on page [17](#).

-  If a web page does not update correctly, clear your Web browser's cache.
-  Some features might not be supported by some mobile device operating systems.

To Browse the KDS-EN7 Web Pages:

1. Open your Internet browser and type the IP number of the device in the address bar of your browser. For example, the default IP number,



The Login window appears:

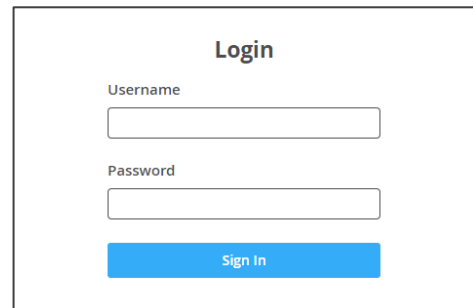


Figure 8: Login Window

2. Enter the Username and Password (Admin/Admin, by default).
The **KDS-EN7** page appears.

3. Click the tabs on the left side of the screen to access the relevant web pages.

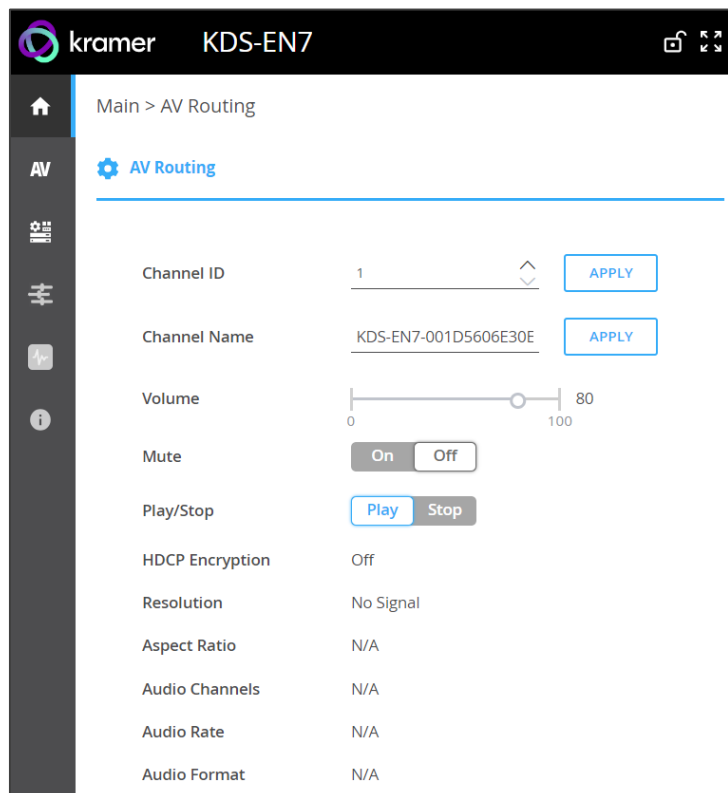


Figure 9: Controller Application Page with Navigation List on Left

Main (KDS-EN7): AV Routing

To set AV routing parameters:

1. In the Navigation pane, Select **Main>AV Routing**. The AV Routing page appears.
2. Define the following settings:
 - **Channel ID:** Set Channel ID and click **APPLY**. Channel ID defines the device input ID (1 to 999).
 - **Channel Name:** Enter the Stream Name and click **APPLY**. By default, the name is the model name and MAC address connected by “-“. Stream name is identical to the Host name (see [Device Settings \(KDS-EN7\): General, Network, Time and Date, Security, Users](#) on page 27) and can include up to 24 characters; “-“ and “_” are allowed within the name.
 - **Volume:** Use the slider to adjust the analog audio output volume (0 to 100%). Default is 80 (0dB), 100% (12dB) and 0 is mute.
 - **Mute:** Mute/unmute all audio outputs (HDMI OUT, AUDIO OUT, and MEDIA ports).
 - **Play/Stop:** Start or stop streaming of video, audio, IR, RS-232 and USB signals.
3. View the following streaming parameters: HDCP Encryption, Resolution, Aspect Ratio, Audio Channels, Audio Rate and Audio Format.

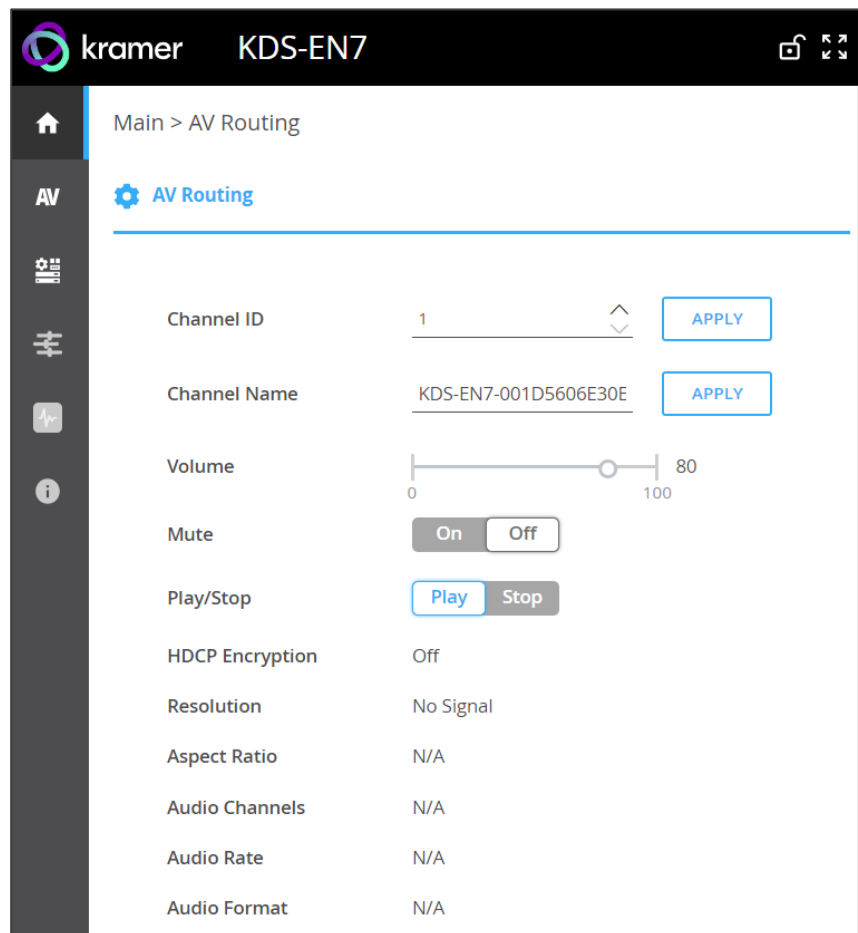


Figure 10: Controller Application Page with Navigation List on Left

AV Settings (KDS-EN7): Video, Audio, EDID

Video Settings

To define HDMI input settings:

1. In the Navigation pane, Select **AV**. The Video tab in the AV Routing page appears.

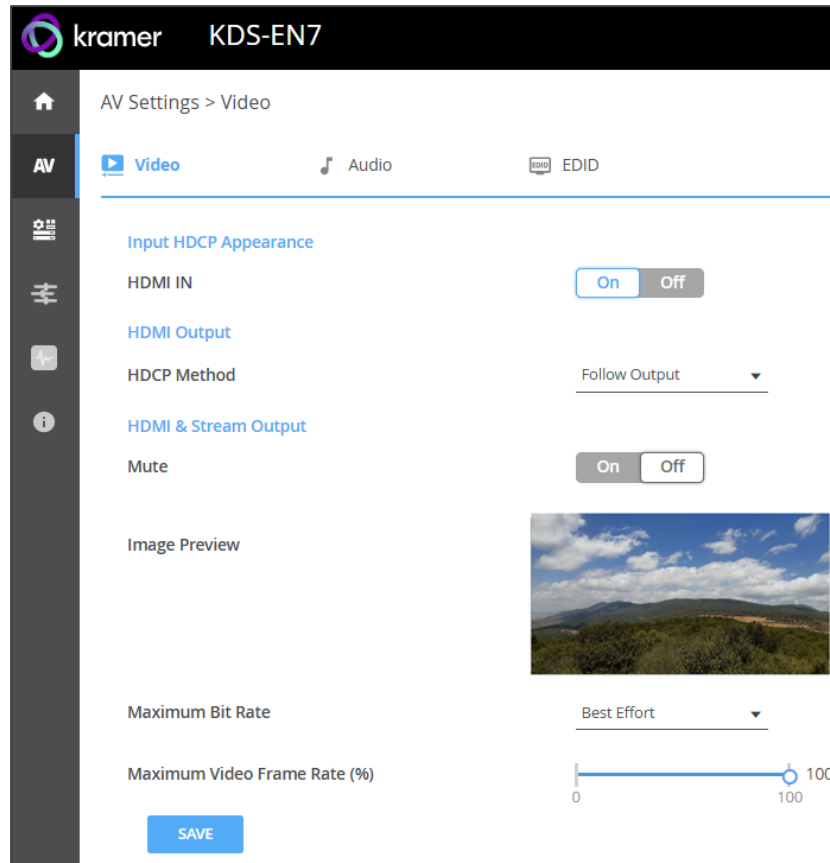


Figure 11: AV Settings – Video Settings Tab

2. Define the following settings:

- **HDMI IN:** Set On/Off HDCP (copyright protection) on the HDMI input.
- **HDCP Method:** Decide whether HDCP activation follows the video input or the output device.
- **Mute:** Disable audio on HDMI and stream.
- **Image Preview:** Preview the output video stream.
- **Maximum Bit Rate:** Select the maximum transmission bandwidth. Select bandwidth (10Mbps, 50Mbps, 100Mbps, 150Mbps and 200Mbps) or Best Effort to set bandwidth for best video quality output.



After setting the maximum bit rate you need to restart the device.

- **Maximum Video Frame Rate (%):** use the slider to configure the maximum frame rate in proportion. 100% (default) means zero compression on the frame rate.

3. Click **SAVE**; HDMI input settings are defined.

Audio Settings

Define KDS-EN7 audio settings.

To define Audio settings:

1. In the Navigation pane, select **AV**. The Video tab in the AV Settings page appears.
2. Select the **Audio** tab. The Audio tab appears.

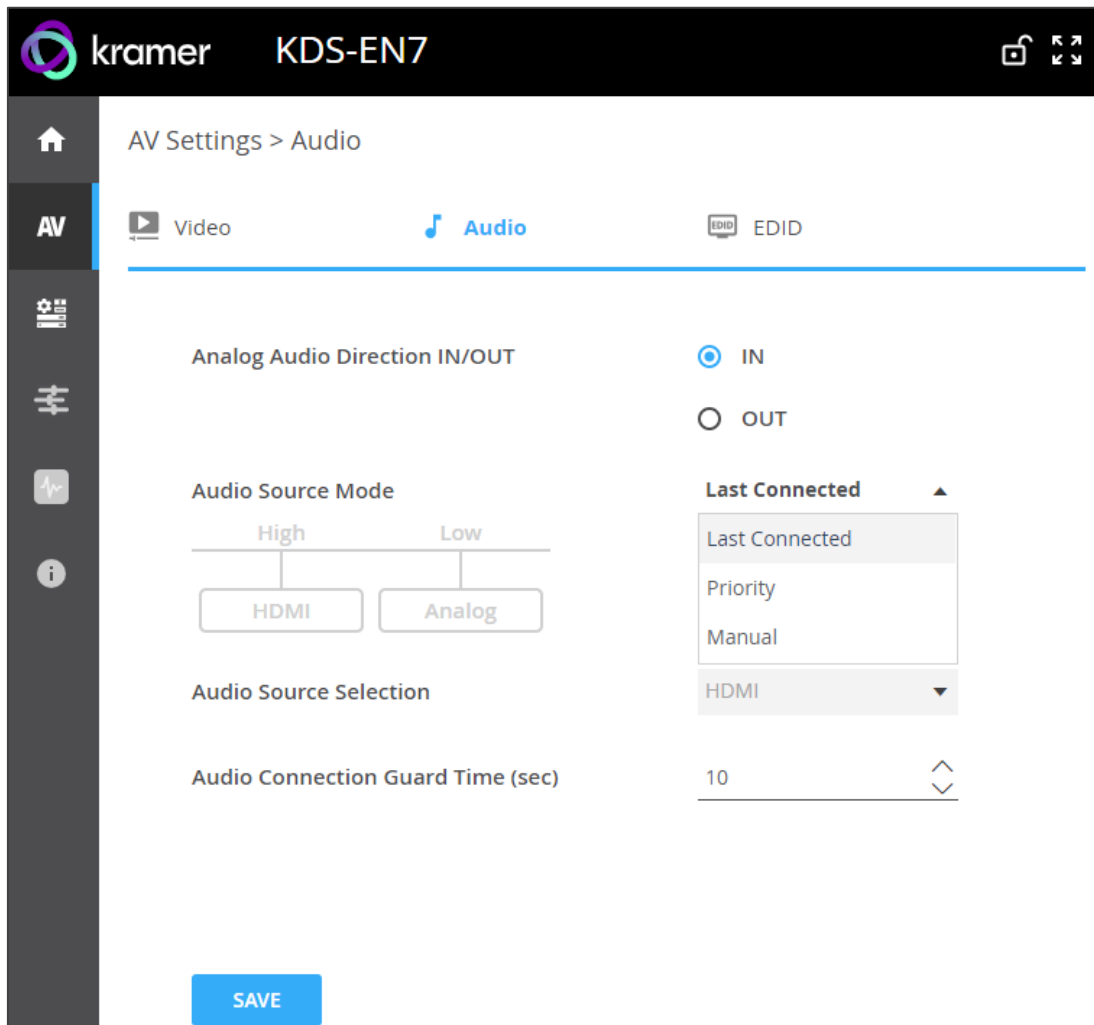


Figure 12: AV Settings – Audio Tab


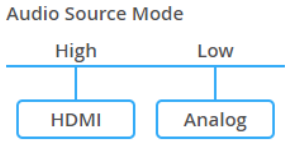
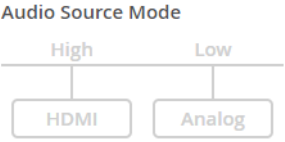
3. Select IN or OUT to set the analog audio direction.



If IN is selected, the analog audio port is set as an input and **KDS-EN7** outputs 2 optional audio sources.

If OUT is selected, the analog audio port is set as an output and **KDS-EN7** outputs only the HDMI audio source.

4. Define the Audio Source (HDMI or analog audio when the analog port is set as IN) selection mode:

<p>Last Connected: the device switches the last connected audio source to the output.</p>		Last Connected ▼
<p>Priority: Set the connection priority by clicking and dragging an input to set its priority order. The device switches the highest priority audio input to the output.</p>		Priority ▼
<p>Manual: manually select the audio source. The device switches an audio source only when selected manually.</p>	 <p>Audio Source Selection</p> <p>Audio Connection Guard Time (sec)</p>	Manual ▼ HDMI ▲ HDMI Analog None

5. Set the Audio Connection Guard Time (10 seconds, by default), which is the audio signal loss time interval.
For example, when in the Last Connected or Priority modes, the currently selected analog audio signal is lost (either becomes silent or is unplugged), the HDMI audio source is automatically selected.

6. Click **SAVE**.

Audio settings are defined.

EDID Settings

You can select the EDID and lock it if required.

To manage EDID:

1. In the Navigation pane, select **AV**: The Video tab in the AV Routing page appears.
2. Select the **EDID** tab. The EDID Management tab appears.

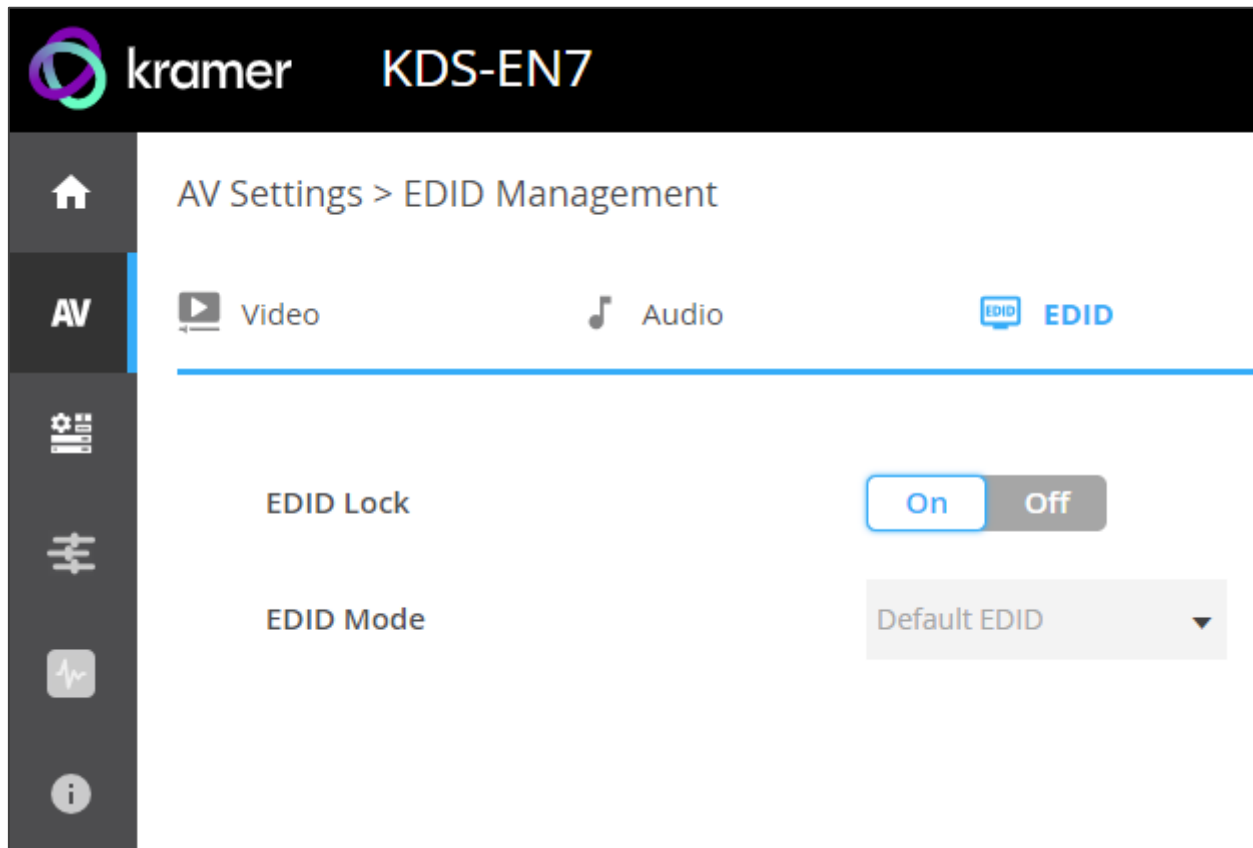


Figure 13: AV Settings – EDID Management Tab

3. Set EDID Lock:
 - Click **ON**, to lock to the last acquired EDID.
 - Click **OFF**, to unlock and acquire a new EDID.

4. Select EDID mode from the drop-down box:



EDID mode is only relevant if the EDID Lock is **OFF**.

Default Mode: set to the default, built-in, EDID.

EDID Lock	<input type="checkbox"/> On <input checked="" type="checkbox"/> Off
EDID Mode	Default EDID ▼

Passthrough: acquire EDID from a specific decoder:

- Enter the decoder IP address.
- Click **READ**.

The EDID is copied from the decoder to the encoder.

EDID Lock	<input type="checkbox"/> On <input checked="" type="checkbox"/> Off
EDID Mode	Passthrough ▼
Read EDID from Specific Decoder	0.0.0.0 <input type="button" value="READ"/>

EDID Lock	<input type="checkbox"/> On <input checked="" type="checkbox"/> Off
EDID Mode	Passthrough ▼
Read EDID from Specific Decoder	192.168.1.40 <input type="button" value="READ"/>

Custom: download the EDID file from an external source.

To remove an EDID from the list:

- Select an EDID file from the list.
- Click **REMOVE**.

To upload an EDID file:

- Click **UPLOAD**.
- Select an EDID file from the Open window.
- Click **UPLOAD**. the EDID file is added to the list.
- Select the file and click **UPLOAD**.

EDID Mode	Custom ▼												
User EDID	<table border="1" style="width: 100%;"> <tr> <td>default.bin</td> <td><input type="button" value="UPLOAD"/></td> </tr> <tr> <td>4K30_2.0CH_SDR.bin</td> <td><input type="button" value="REMOVE"/></td> </tr> <tr> <td>4K30_Dolby_DTS7.1_SDR.bin</td> <td><input type="button" value="REMOVE"/></td> </tr> <tr> <td>1080P50_Dolby_DTS7.1_SDR.bin</td> <td><input type="button" value="REMOVE"/></td> </tr> <tr> <td>720P50_2.0CH_SDR.bin</td> <td><input type="button" value="APPLY"/></td> </tr> <tr> <td>720P50_Dolby_DTS7.1_SDR.bin</td> <td><input type="button" value="APPLY"/></td> </tr> </table>	default.bin	<input type="button" value="UPLOAD"/>	4K30_2.0CH_SDR.bin	<input type="button" value="REMOVE"/>	4K30_Dolby_DTS7.1_SDR.bin	<input type="button" value="REMOVE"/>	1080P50_Dolby_DTS7.1_SDR.bin	<input type="button" value="REMOVE"/>	720P50_2.0CH_SDR.bin	<input type="button" value="APPLY"/>	720P50_Dolby_DTS7.1_SDR.bin	<input type="button" value="APPLY"/>
default.bin	<input type="button" value="UPLOAD"/>												
4K30_2.0CH_SDR.bin	<input type="button" value="REMOVE"/>												
4K30_Dolby_DTS7.1_SDR.bin	<input type="button" value="REMOVE"/>												
1080P50_Dolby_DTS7.1_SDR.bin	<input type="button" value="REMOVE"/>												
720P50_2.0CH_SDR.bin	<input type="button" value="APPLY"/>												
720P50_Dolby_DTS7.1_SDR.bin	<input type="button" value="APPLY"/>												



You can load up to 8 EDID files. If 8 files are loaded, you need to remove a file from the list. default.bin cannot be deleted.

The list returns to its default list upon factory reset.

EDID is managed.

Device Settings (KDS-EN7): General, Network, Time and Date, Security, Users

General Settings

To lock/unlock the front panel:

1. In the Navigation pane, select **Device Settings**. The General tab in the Device Settings page appears.

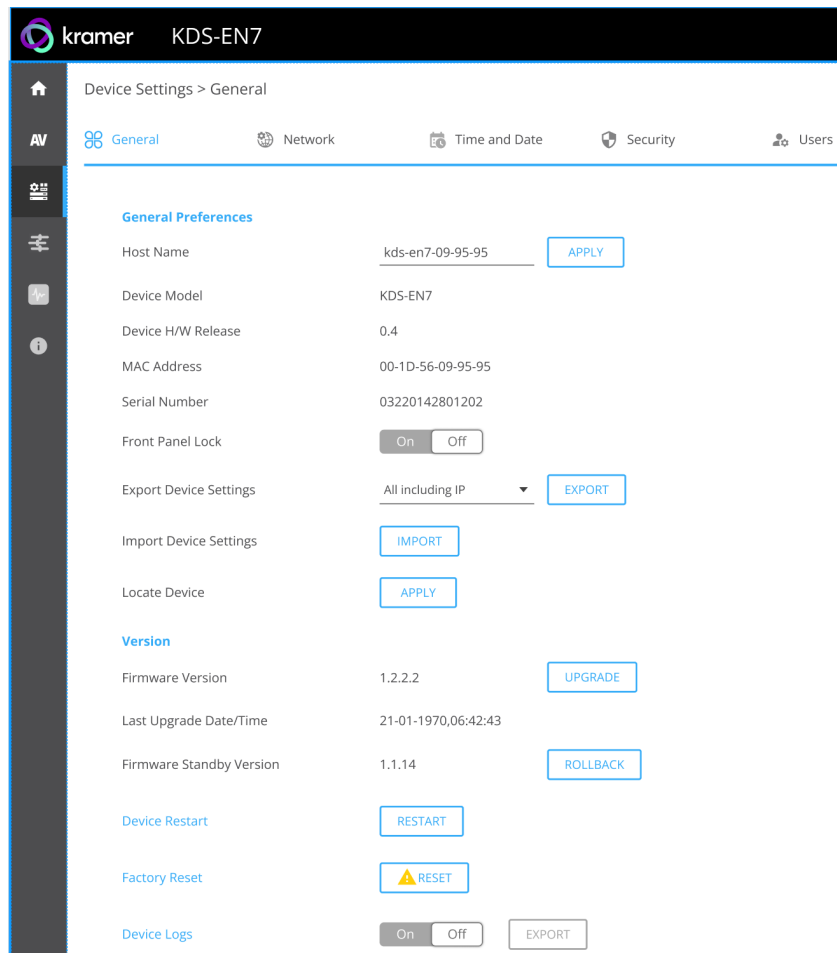


Figure 14: Device Settings – General Tab

2. Lock/Unlock the device front panel:
 - Click **Off**, to enable device control from the front panel via the LCD screen and the navigation buttons (see [Using Menu Navigation Buttons](#) on page 13).
 - Click **On**, to disable device control via the navigation buttons.

Importing/Exporting Device Settings

You can select the type of device settings to export/import from/to the device.

To import or export the device settings:

1. In the Navigation pane, select **Device Settings**. The General tab in the Device Settings page appears (see [Figure 14](#)).

2. In the General Device Settings page, select the setting types to import or export.
 - **All without IP** – Select all the settings, excluding the IP address.
 - **Streams** – Select video, audio, IR, CEC and RS-232 settings.
 - **AV Settings Only** – Select only video and audio settings.
 - **All including IP** – Select all the settings including the IP address.
3. When importing, do the following (when exporting, go to the next step):
 - Click **IMPORT**. An Open file appears.
 - Select the file to import (settings.tar.gz).
 - Click **Open** to import the file.
4. To export settings, click **EXPORT**.
The settings file is created (settings.tar.gz).

The settings file is imported/exported.

Locating the Device

Locate the specific device in the system.

To locate the device:

1. In the Navigation pane, select **Device Settings**. The General tab in the Device Settings page appears (see [Figure 14](#)).
2. In the General tab, click **APPLY** next to Locate Device.
The located device NET and ON LEDs on the front panel flashes for 60 seconds.

The device is located in the system.

Managing the Firmware Version

To upgrade the firmware, view the date of the last upgrade, or rollback to the previous firmware revision in case of a problem, see [Upgrading Firmware](#) on page [75](#).



Click **ROLLBACK** to update to the previous FW version.

Restarting or Resetting the Device

Click **RESTART** to reboot the device and click **RESET** to restore device factory default settings.

Exporting Device Activity Logs

Device activity logs are essential features to troubleshoot potential problems and/or receive technical support.

This feature is disabled by default to save system resources.

Enable feature, then run scenario, which is to be reviewed and “export” the log file.

Disable feature when logs are not required anymore.

Network Settings

Defining Interface Settings

KDS-EN7 has two Ethernet ports, LAN **Media** and LAN **Stream** (9 and 10 in [Defining KDS-EN7 4K AVoIP Encoder](#) on page 6). By default, all network connections use LAN Media. Different stream types can be separated and sent to/from each port using different IP addresses for each port.

For example, use one port for AV (“Stream”) and the other for Protocol 3000 (“Control”) commands.

To define interface settings:

1. In the Navigation pane, select **Device Settings** and open the **Network** tab:

The screenshot displays the Network configuration page for the KDS-EN7 device. The 'Interface Settings' section contains the following data:

Service Name	Port	802.1Q	VLAN Tag	CoS	DSCP	DHCP	IP Address	Mask Address	Gateway Address	DNS Address
Control	Media	On / Off	2	7	56	On / Off	192.168.1.39	255.255.0.0	0.0.0.0	0.0.0.0
Stream	Media	On / Off	2	5	46	On / Off	192.168.1.39	255.255.0.0	0.0.0.0	0.0.0.0

Additional settings shown include:

- IP Casting Mode:** Multicast (selected)
- Multicast Address Prefix:** 225
- TTL:** 64
- TCP/UDP Management:** TCP Port 5000, UDP Port 50000

Figure 15: Device Settings – Network Tab

2. Set the **Control** and **Stream** service parameters:

- **Port** – Set each service to use the **Media** LAN port (default) or the **Service** LAN port.



If all network communication is assigned to the Media port, then both Control and Stream will share the same IP address.

Otherwise, Control and Stream should use different IP addresses, with different subnets.

- **802.1Q** – If set to On (off by default), the data transmission uses VLAN tags.
 - **VLAN Tag** – VLAN (virtual local area network) tags (range 2 – 4000) are

used to separate the network into smaller virtual networks. Requires 802.1Q to be set to On.

- **CoS** – Class of Service, requires a unique VLAN tag. CoS sets the priority (0-7) of each of the VLAN options within the local network (layer 2 of the OSI model). Higher priority traffic is prioritized and provides a more reliable service.

If Stream and Control share the same LAN, the stream will follow control configuration.

- **DSCP** – The DSCP (Differentiated Services Code Point) value is used to mark the priority (0-63) of packets in a WAN network layer (layer 3 of the OSI model). It is used for large-scale networks (or across the Internet) and increases the quality of service. By default DSCP is 56 for the Control stream.
- **DHCP** – If set to On, the service's IP address is generated by the network. If set Off, you may need to define a static IP address for the service.
- **IP Address** – When DHCP mode is set to Off, the device uses a static IP address. This requires entering the **Mask**, **Gateway** and **DNS** addresses.

Click **Save** after making any changes.

Defining IP Casting Mode Setting

Unicast / Multicast (default) – Multicast communication transmits the data stream to multiple receivers simultaneously, select unicast if your stream is intended for a single receiver.

- **Multicast Address Prefix** – Select a prefix for the multicast stream's IP between 224 and 239 (default prefix is 226.x.x.x). Routers identify multicast streams by their IP prefix and handle the stream's packets as data which is not directed to a specific recipient: It is a general stream addressed to the entire network.
- **TTL** - Time to Live (TTL) restricts the number of times a packet/data can be forwarded by network routers before it is discarded. It stops the stream data from circulating endlessly in the network. Select a value between 1 and 255 (Default 64).

Click **Save** after making any changes.

Defining TCP/UDP Ports

TCP and UDP are two different protocols used in streaming. TCP establishes a connection before streaming and UDP simply outputs the stream, which has lower latency but less reliability. In both cases, the network switch and firewall will allocate certain ports for their use and block the traffic if they are on other ports.

Use the default ports (TCP – 5000 and UDP – 50000), unless you have specific reasons to make changes.

Click **Save** after making any changes.

Time and Date Settings

You can sync the device time and date to any server around the world. If no NTP Time Server is defined, the time will be set to 1970 every time the device reboots.

To sync device time and date to a server:

1. In the Navigation pane, click **Device Settings** and select the **Time and Date** tab.

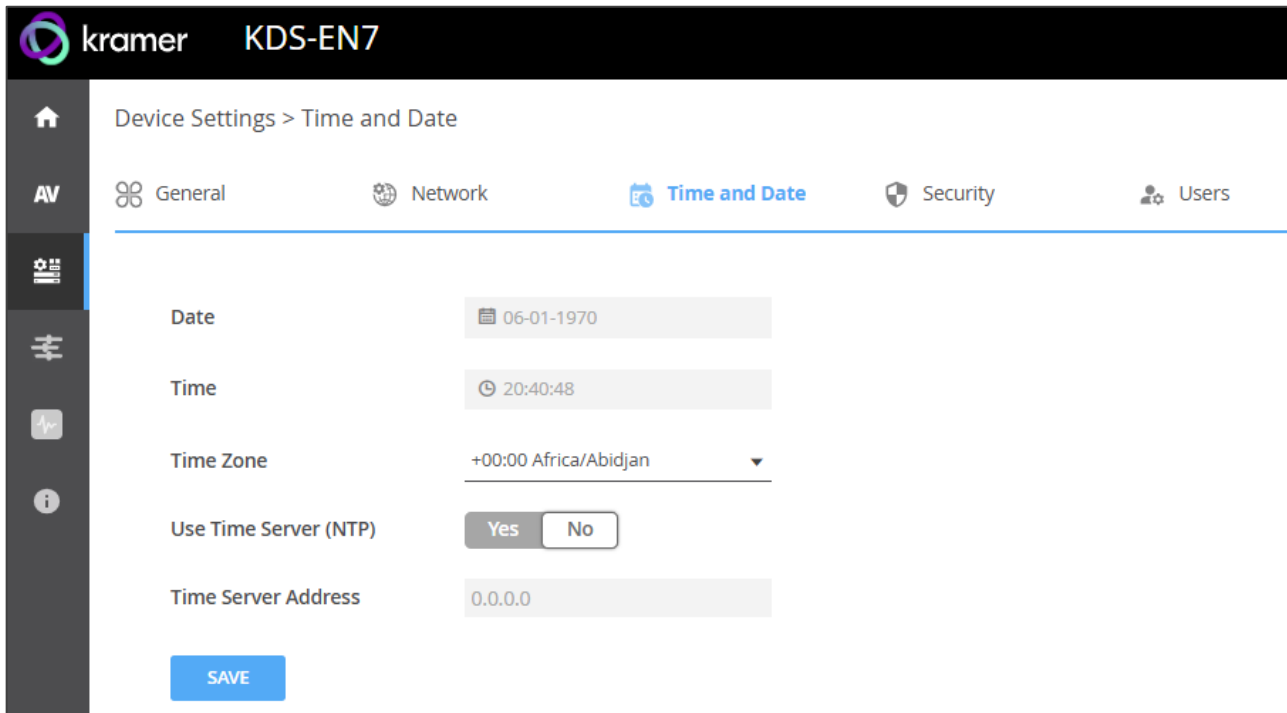


Figure 16: Device Settings – Time and Date Tab

2. Set **Use Time Server (NTP)**, to **YES**.
3. Enter the **Time Server Address** IP or URL.
5. Click **SAVE**.

The devices date and time are synchronized to the server address entered.

Security Settings

The Security tab configures device 802.1x authentication to limit unauthorized access, and HTTPS/TLS for establishing an encrypted connection to an authenticated peer over the network.



Contact your IT administrator for the network access authentication.

Configuring HTTPS

1. In the Navigation pane, click **Device Settings**. The General tab in the Device Settings page appears (see [Figure 14](#)).
2. Select **Security** tab. The Security tab appears.

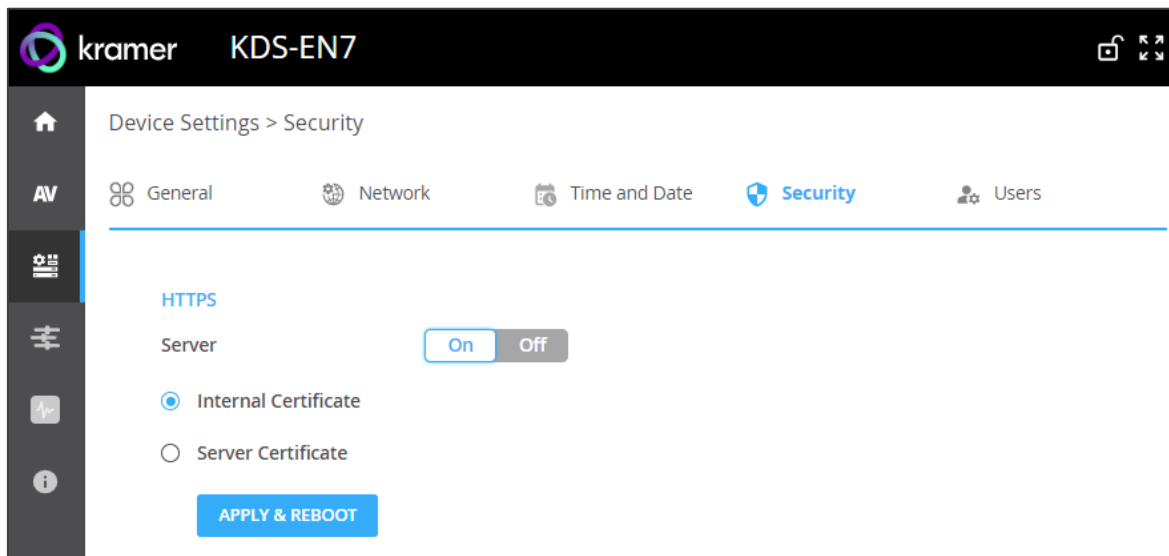


Figure 17: Device Settings – Security Tab

3. For HTTPS server, click **ON** to enable HTTPS authentication service (default) or **Off** to disable HTTPS authentication.
4. When set to ON check one of the following settings:
 - **Internal Certificate** – To use the factory default certificate for authentication.
 - **Server Certificate** – To submit certificate from the server for authentication. To do so, click to upload the certificate. enter the private key password (assigned by the IT administrator) and click **APPLY & REBOOT**.

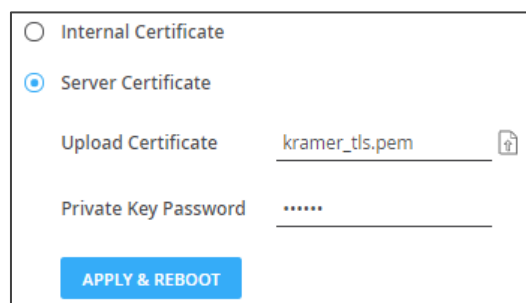


Figure 18: Security Tab – Server Certificate

5. Click **APPLY**; HTTPS is configured.


Defining 802.1x Authentication

802.1x must be activated and defined separately for each LAN port (Stream or Media). 802.1x is a port-based authentication protocol that authenticates devices accessing the network by matching their MAC address and password to a RADIUS network access server.

To configure security:

This example configures the Media port, the Service port has identical settings, lower down in the Security tab.

1. In the Navigation pane, click **Device Settings**, and select the **Security** tab. The Security tab appears (see [Figure 17](#)).
2. Click **ON** to enable IEEE 802.1x authentication.
3. When set to ON check one of the following settings:
 - **PEAP-MSCHAP V2** – To use this authentication method, enter a Username (up to 24 alphanumeric characters, including “_” and “-“ characters within the username) and Password (up to 24 ASCII characters):

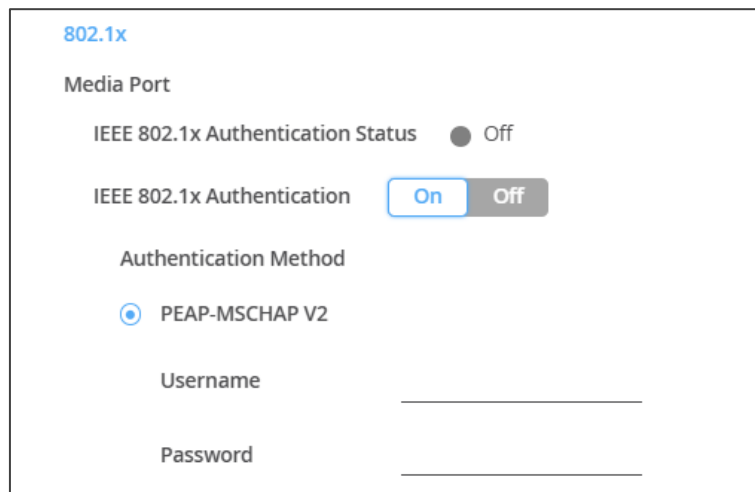

802.1x

Media Port

IEEE 802.1x Authentication Status Off

IEEE 802.1x Authentication


Authentication Method

PEAP-MSCHAP V2

Username _____

Password _____


Figure 19: Security Tab – EAP-MSCHAP V2 Authentication

- **EAP-TLS** – To submit a certificate from the server for authentication. To do so, enter the Username, click  to upload the certificates and keys, and enter the private key password (assigned by IT administrator). Set Server Certificate **On**.

4. Click **APPLY**.

Security is configured.

If you are using separate LANs for the Media port and the Service port, you will need to enter separate 802.1X for the Service port.

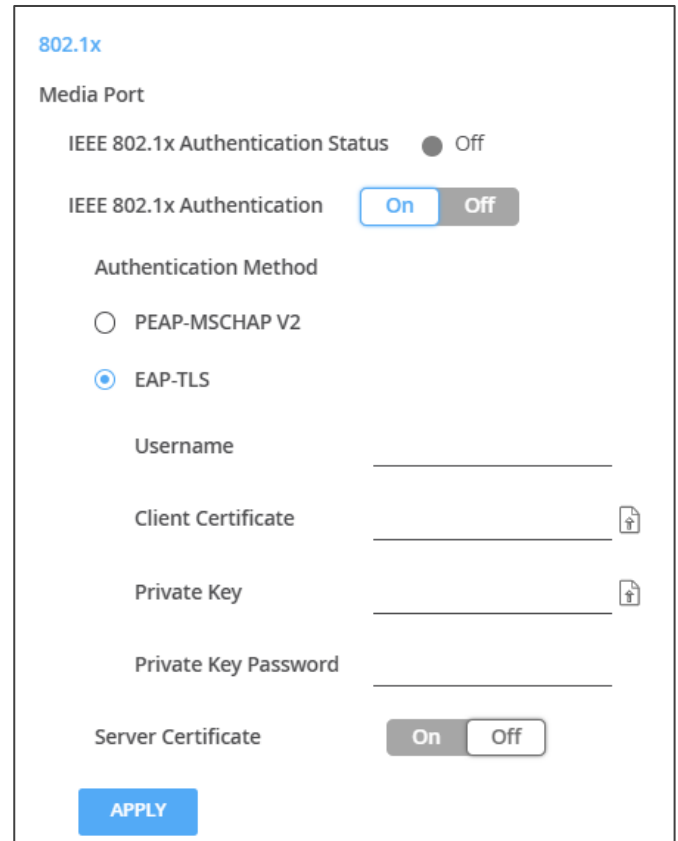

The screenshot shows the configuration page for 802.1x authentication. The page is titled "802.1x" and "Media Port". It includes the following settings:


- IEEE 802.1x Authentication Status:** A radio button set to "Off".
- IEEE 802.1x Authentication:** A toggle switch set to "On".
- Authentication Method:** Radio buttons for "PEAP-MSCHAP V2" and "EAP-TLS", with "EAP-TLS" selected.
- Username:** An empty text input field.
- Client Certificate:** An empty text input field with an upload icon.
- Private Key:** An empty text input field with an upload icon.
- Private Key Password:** An empty text input field.
- Server Certificate:** A toggle switch set to "Off".
- APPLY:** A blue button at the bottom left.

Figure 20: EAP-TLS – Certificates and Password

Defining an AES-128 Key

When Device Security is enabled, AES-128 encryption is used to encrypt packet headers.

A default system key is used for encryption and decryption. If you want to enter a custom key, make sure both encoder and decoders are updated to use the same key. Enter a 16 byte hexadecimal string (32 characters using only the characters 0 – 9 and A to F). No hex code identifier is required before the string.

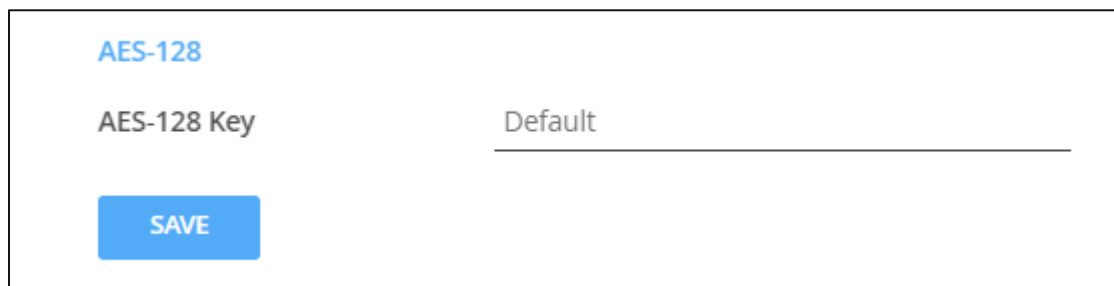

The screenshot shows the configuration page for the AES-128 key. It is titled "AES-128" and includes the following settings:

- AES-128 Key:** A text input field containing the word "Default".
- SAVE:** A blue button at the bottom left.

Figure 21: EAP-TLS – Certificates and Password

Users Settings

The Users tab enables activating device security and defining logon authentication details. When device security is on, web page access requires authentication upon initial landing on operation page. The default user/password is **admin/admin**. By default, security is disabled.

Enabling User Access

To enable security:

1. In the Navigation pane, click **Device Settings**. The General tab appears/
2. Select Users tab.

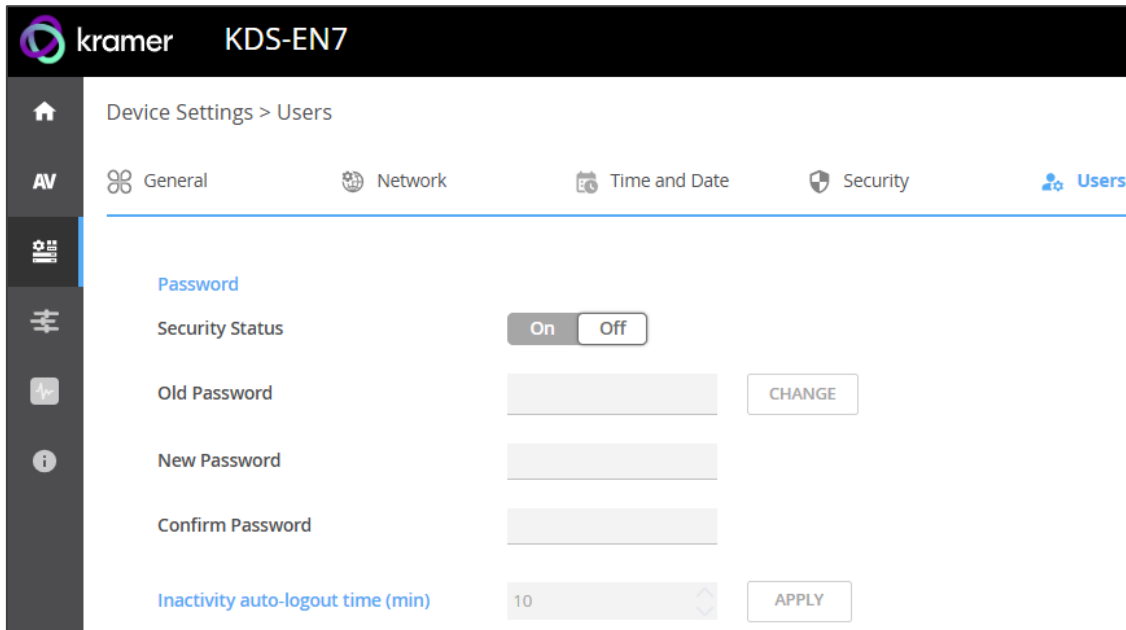


Figure 22: Device Settings – Users Tab

3. Click **On** next to Security Status to enable web page authentication (Off by default). The following message appears.

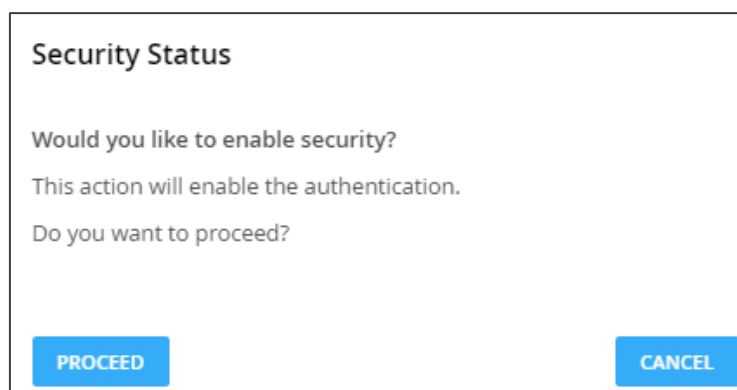


Figure 23: Security Tab – Security Status

4. Click **PROCEED**. The web page is reloaded and the password (admin) is requested. Security is enabled and access requires authentication.

Disabling User Access

To enable security:

1. In the Navigation pane, click **Device Settings**. The General tab in the Device Settings page appears (see [Figure 14](#)).
2. Select Users tab (see [Figure 22](#)).

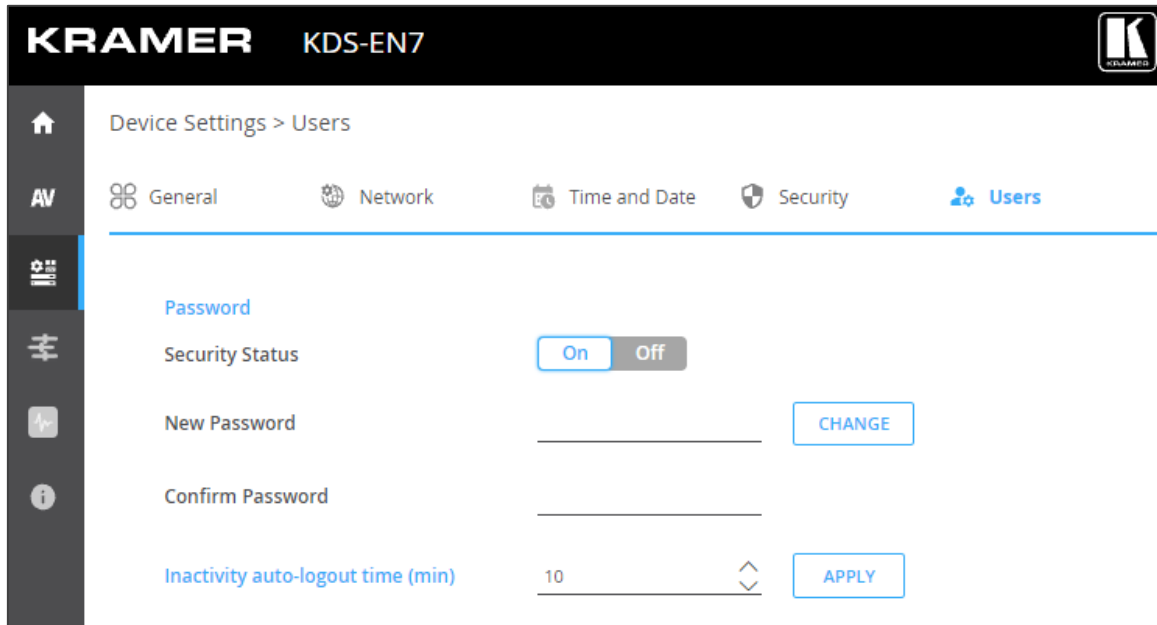


Figure 24: Device Settings – Users Tab

3. Click **Off** next to Security Status to enable web page authentication. The following message appears.

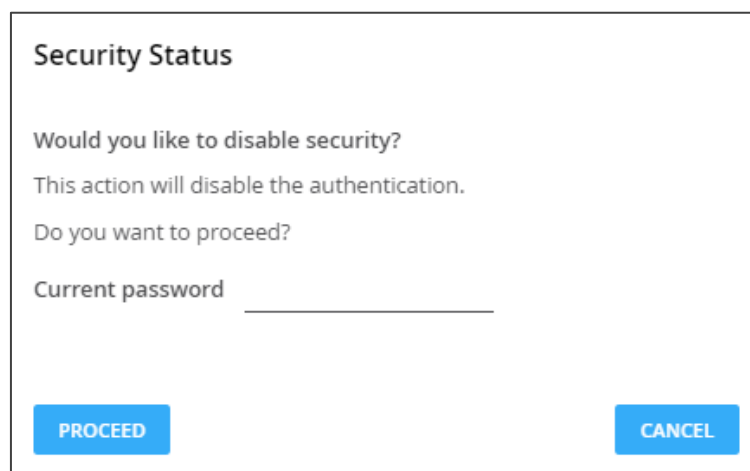


Figure 25: Security Tab – Security Status

4. Enter the current password.
 5. Click **PROCEED**.
- Security is disabled.

Logging Out

You can define the time of inactivity before the page logs out automatically by setting the Inactivity auto-logout time (in minutes).

Changing the Password

To change the password:

1. In the Navigation pane, click **Device Settings** and select the **Users** tab (see [Figure 22](#)).

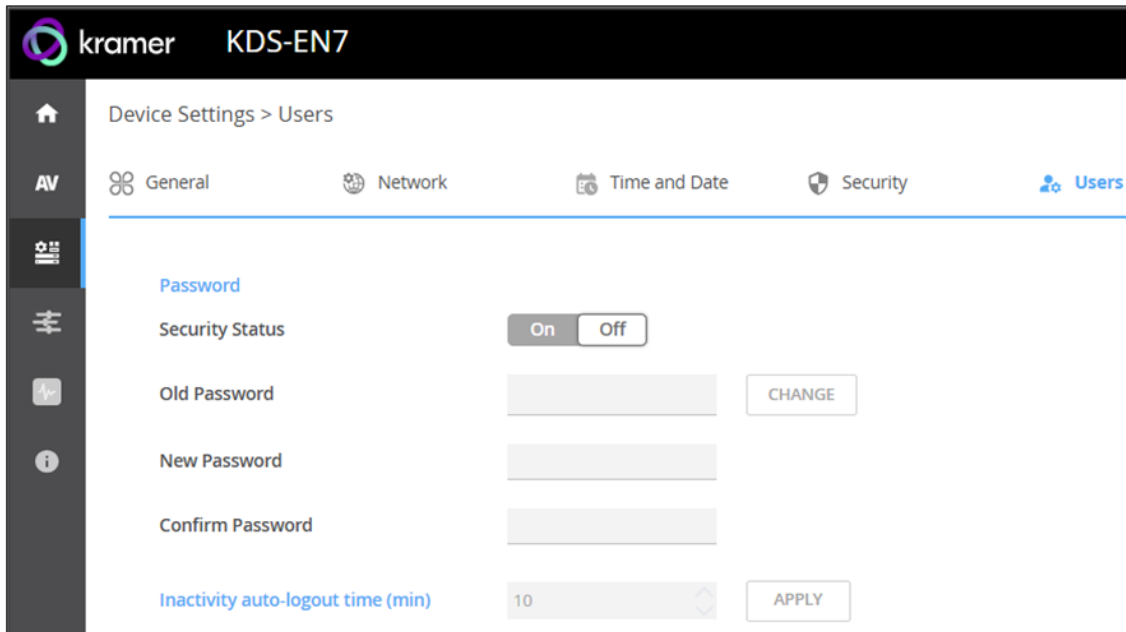


Figure 26: Device Settings – Users Tab

2. In **Old Password**, enter the old password.
3. Enter the **New password** and repeat in the **Confirm Password** field.
4. Click **CHANGE**.

Password has changed.

Control Settings (KDS-EN7): CEC, RS-232, IR

KDS-EN7 enables configuring CEC, RS-232 and/or IR gateway Control. You can perform the following actions:

- [Configuring CEC Settings](#) on page [38](#).
- [Configuring RS-232 Settings](#) on page [39](#).
- [Configuring IR Settings](#) on page [40](#).

Configuring CEC Settings

KDS-EN7 sends CEC commands from a control system, connected by LAN, via the KDS-EN7 built-in control gateway, to control CEC enabled devices that are connected to the KDS-EN7 HDMI output and input.

CEC Gateway

1. In the Navigation pane, click **Control**. The Control>Settings page appears.

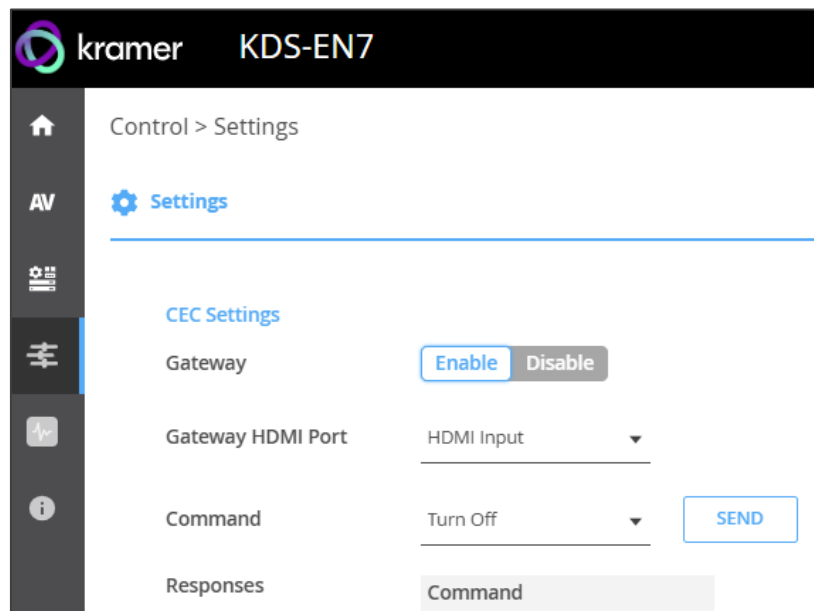


Figure 27: Control > Settings Page – CEC Settings

2. Click **Enable** to enable CEC gateway or click **Disable**.
3. Select the HDMI port from the drop-down list to which CEC commands are sent:
 - HDMI Input (HDMI IN).
 - HDMI Loop Through (HDMI OUT).
4. Enter the CEC command.
Use hex format for the CEC command, up to 32 hex digits.
5. Click **SEND**.
6. View the CEC-enabled device response; CEC Gateway is configured.

Configuring RS-232 Settings

KDS-EN7 sends RS-232 commands from a control system, connected by LAN, via the KDS-EN7 built-in control gateway, to devices that are connected to the KDS-EN7 RS-232 port.

To set RS-232 Gateway:

1. In the Navigation pane, click **Control**. The Control>Settings page appears (see [Figure 27](#)).

The screenshot shows the 'RS-232 Settings' configuration page. At the top, the title 'RS-232 Settings' is displayed. Below it, the 'Gateway' status is set to 'Enable', with a 'Disable' button also visible. The 'Gateway Port' is set to 5001, 'Baud Rate' is 115200, 'Data Bits' is 8, 'Parity' is None, and 'Stop Bits' is 1. A blue 'SAVE' button is located at the bottom left of the settings area.

Figure 28: Control > Settings Page – RS-232 Settings

2. Click **Enable** to enable RS-232 gateway or click **Disable**.
3. Define the RS-232 gateway port (5001, by default).
4. Enter the Baud Rate: 9600, 19200, 38400, 57600 or 115200 (default).
5. Enter the Data Bits: 5, 6, 7 or 8 (default).
6. Enter Parity: None (default), Odd or Even.
7. Enter Stop Bits: 1 (default) or 2.
8. Click **SAVE**.

RS-232 Gateway is configured.

Configuring IR Settings

KDS-EN7 sends IR commands from a control system, connected by LAN, via the KDS-EN7 built-in control gateway, to IR connected devices.

To set RS-232 Gateway:

1. In the Navigation pane, click **Control**. The Control>Settings page appears.

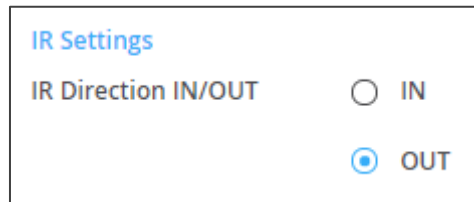


Figure 29: Control > Settings Page – IR Settings

2. Set IR direction:

- **IN** – Configure the IR port as an input port that is connected to an IR receiver cable.
- **OUT** – Configure the IR port as an output port that is connected to an IR emitter cable.

IR Gateway is configured.

Diagnostics (KDS-EN7): Status, Connections

Device status

To view device status:

1. In the Navigation pane, click **Diagnostics**. The Status tab appears.

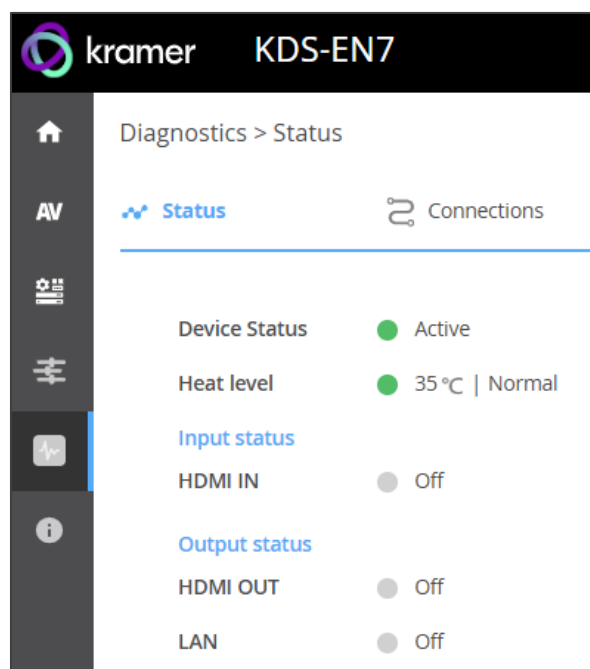


Figure 30: Diagnostics – Status Tab

2. View the Device Status:

- **Active**, for normal operation (green indication).
 - **Standby**, when device is powered Off, booting or in standby mode (yellow indication).
3. View device internal Heat level:
 - **Normal**, for temperatures under 45°C (green indication).
 - **High**, for temperatures between 45°C and 60°C (orange indication).
 - **Overheat**, for temperatures higher than 60°C (red indication).
 4. View the Input status:
 - **On**, when the HDMI IN port has a valid signal and is transmitting a signal (green indication).
 - **Off**, when an input is not connected or there is no valid signal (gray indication).
 5. View the Output status:
 - **On**, when HDMI Out or the LAN are transmitting a signal (green indication).
 - **Off**, when HDMI Out or the LAN have no signal output (gray indication).


Device status is viewed.

Connections Status

View the connection information status

To view Connections status:

1. In the Navigation pane, click **Diagnostics**. The Status tab appears (see [Figure 30](#)).
2. Select the Connections tab.

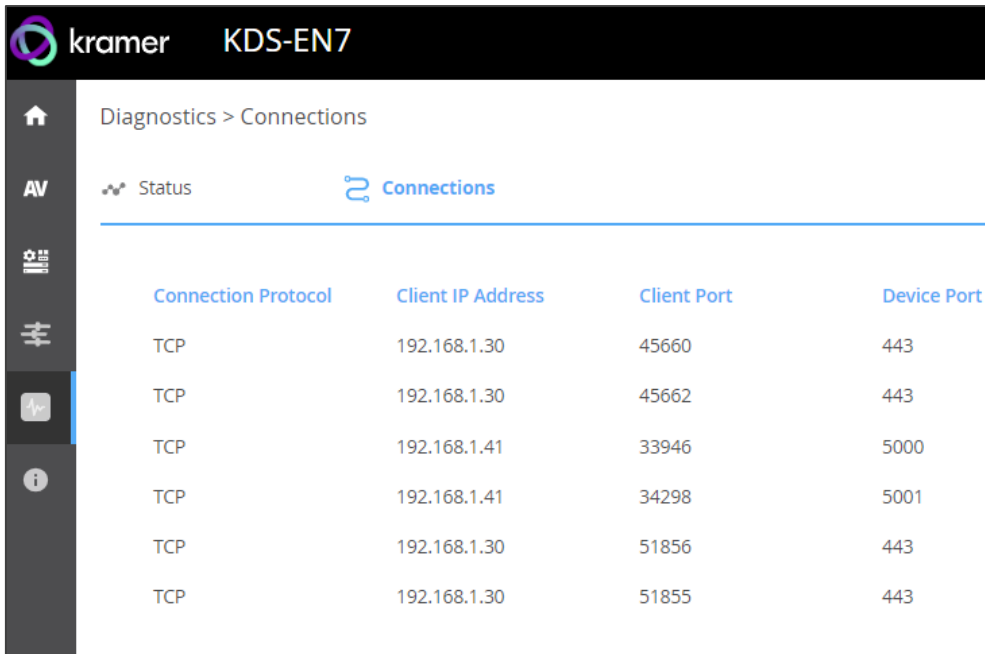

Connection Protocol	Client IP Address	Client Port	Device Port
TCP	192.168.1.30	45660	443
TCP	192.168.1.30	45662	443
TCP	192.168.1.41	33946	5000
TCP	192.168.1.41	34298	5001
TCP	192.168.1.30	51856	443
TCP	192.168.1.30	51855	443

Figure 31: Diagnostics – Status Tab

3. View the Connections status, including protocol type, client IP address and port, and the device port. Connections' status is viewed.

About KDS-EN7

View the web page hardware release, firmware version and Kramer Electronics Ltd details in the About page.

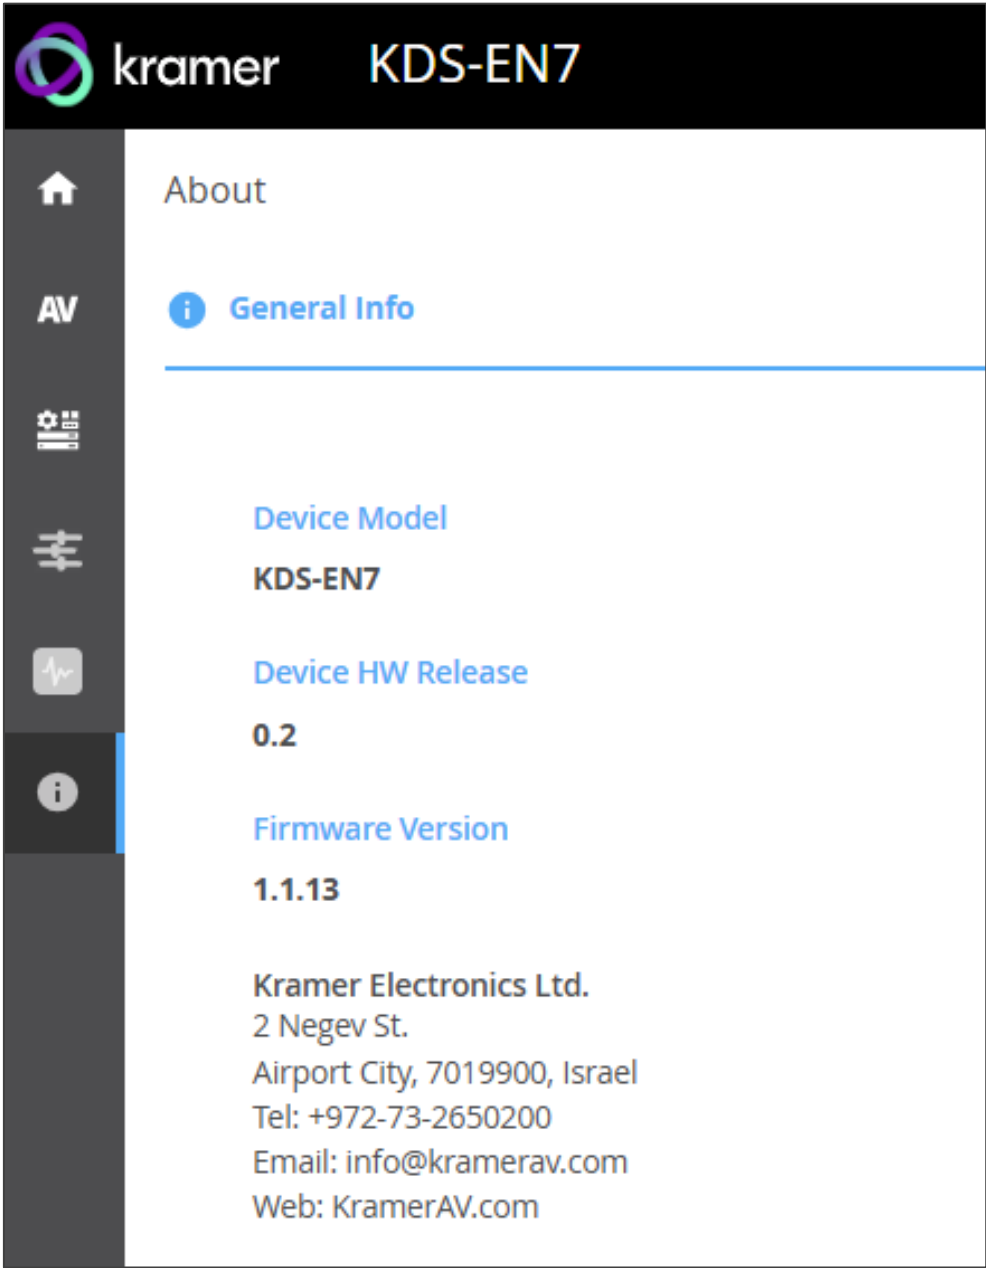




Figure 32: About Page

KDS-DEC7 Embedded Web Pages

KDS-DEC7 can be operated remotely using the embedded web pages. The web pages are accessed using a Web browser and an Ethernet connection.

Before attempting to connect, perform the procedures in [Operating via Ethernet](#) on page [17](#).

-  Some features might not be supported by some mobile device operating systems.
-  Some features might not be supported by some mobile device operating systems.


To Browse the KDS-DEC7 Web Pages:

1. Connect the LAN port of the device

Open your Internet browser.

2. Type the IP number of the device in the Address bar of your browser. For example, the default IP number:

. The Login window appears.

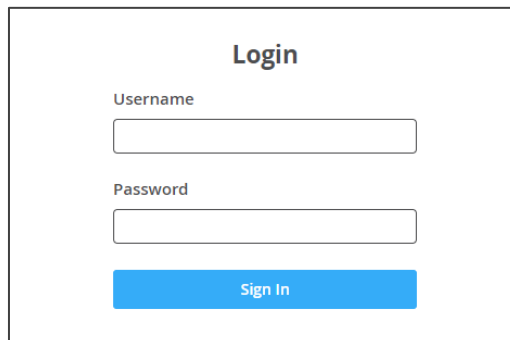

Login

Username

Password

Sign In

Figure 33: Login Window

- 3. Enter the Username and Password (admin/admin, by default).
The KDS-DEC7 page appears.

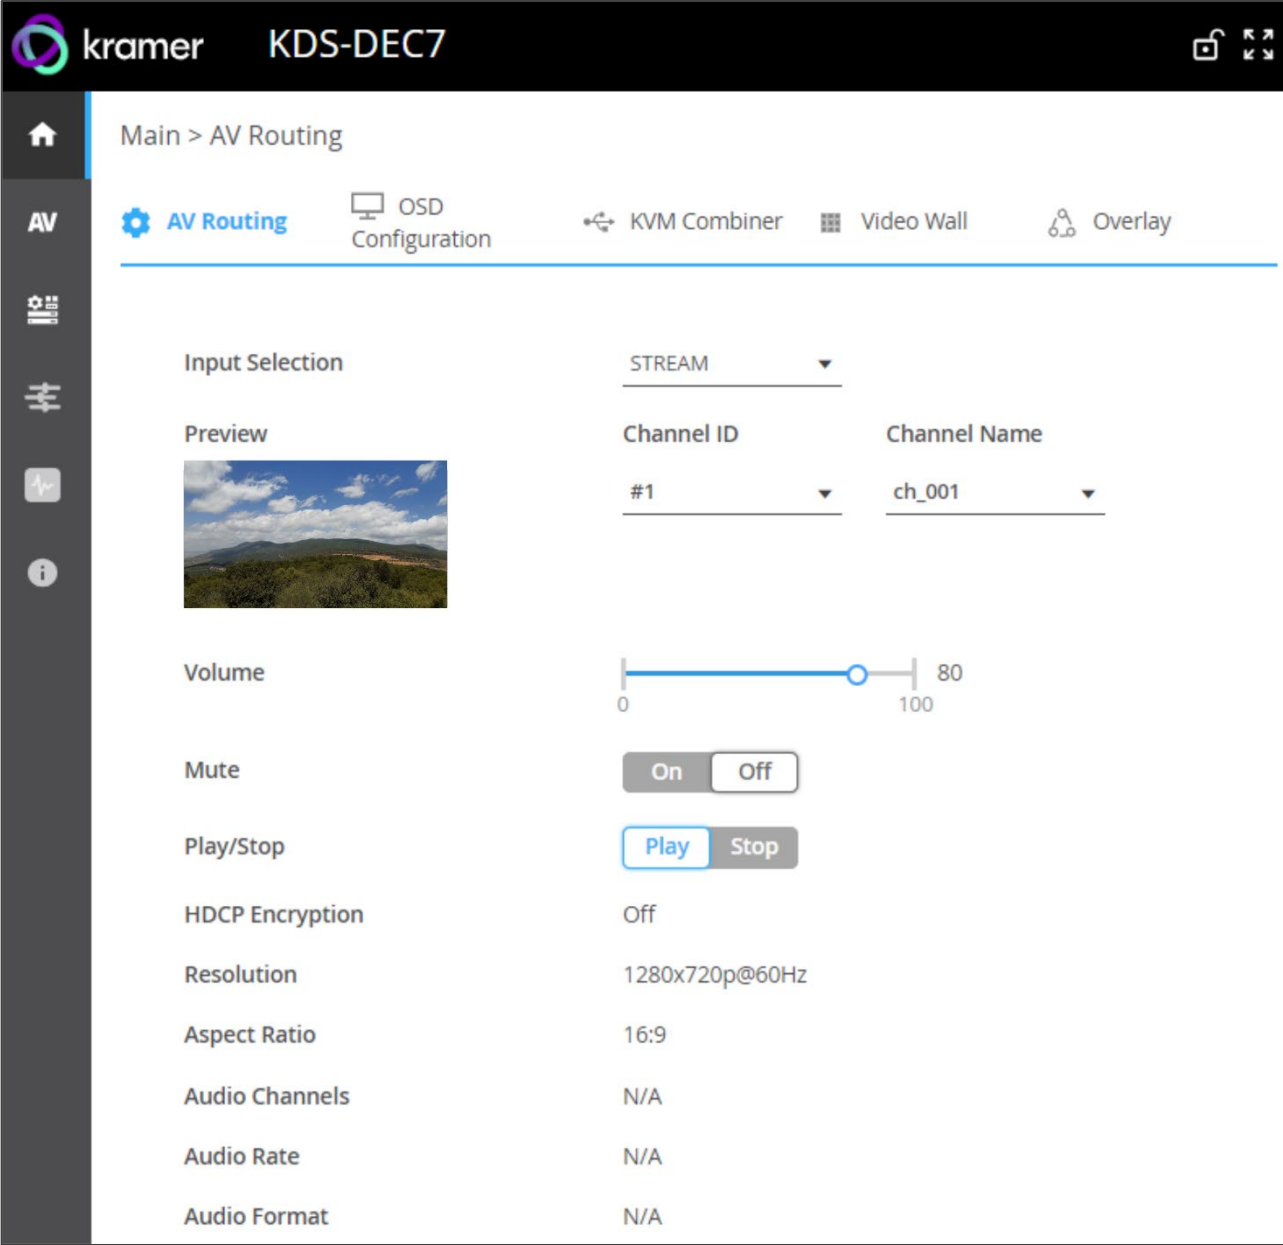


Figure 34: KDS-DEC7 Main Page with Navigation List on Left

- 4. Click the tabs on the left side of the screen to access the relevant web page.

Main (KDS-DEC7): AV Routing, OSD Configuration, KVM Combiner, Video Wall, Overlay

AV routing parameters

To set AV routing parameters:

1. In the Navigation pane, Select **Main>AV Routing**. The AV Routing page appears (see [Figure 34](#)).
2. From the drop-down list next to Input Selection, set the input source to STREAM or HDMI.
3. If STREAM is selected next to Input Selection, set the Channel ID and Channel Name as defined in Main > OSD Configuration > Channel List (see [OSD Configuration](#) on page 46).

Preview will show a preview of the streamed video.



If HDMI is selected next to Input Selection, the preview window and Channel ID and name are hidden.

4. Use the slider next to Volume to adjust the analog audio output volume (0 to 100%). Default is 80 (0dB), 100% (12dB) and 0 is mute.
5. Mute/unmute all audio outputs (HDMI OUT, AUDIO OUT, and LAN output).
 - Play (default) or stop streaming of video, audio, IR, RS-232 and USB signals.
6. View the following streaming parameters: HDCP Encryption, Resolution, Aspect Ratio, Audio Channels, Audio Rate and Audio Format.

Routing Parameters are defined.

OSD Configuration

Configure the KDS-DEC7 OSD settings.

To configure the OSD:

1. In the Navigation pane, Select **Main>AV Routing**. The AV Routing page appears (see [Figure 34](#)).
2. Select the OSD Configuration tab.

kr amer KDS-DEC7

Main > OSD Configuration

AV Routing OSD Configuration KVM Combiner Video Wall Overlay

OSD Menu

Menu Timeout (sec) 30

Channels per Page 5

Maximum Channels 999

Text Color #ffffff

Background Color #a9a9a9

Transparency (%) 0 50 100

Hot Key Caps Lock CHANGE


Channel List

#ID	Name		
1	ch_001		
2	ch_002		
3	ch_003		
4	ch_004		
5	ch_005		

Page 1 of 10 <>

Figure 35: Main Page – OSD Configuration Tab

3. Set the menu timeout in seconds.
4. Define the number of channels that are displayed per page in the channel list. you can select 5 (default) to 10 per page (for 3840x2160 resolution, you can select up to 7 items per page).
5. Define the maximum number of channels that can be displayed (up to 999).

6. Set the text color.
 7. Set the background color.
 8. Use the slider to define the text transparency from 0 to 100% (invisible).
 9. View the channel list and perform the following actions:
 - Click **ADD** to add the channel ID and name one by one to the Channel List.
 - Click **IMPORT** to import a preset channel list (.json) to this channel list.
 - Click **EXPORT** to export the channel list to your PC.
 10. Set the menu font size and position.
 11. Next to Display Device Information, click **On** to display Device Information on the screen (including device version, IP address and MAC address, etc.) or click **Off**.
 12. Click **DISPLAY NOW** (when device information is set to On).
 13. Set the device information timeout.
 If video is lost, and the sleep image is displayed, Device Information appears, and at this state cannot be turned off.
 14. Click **SAVE**.
- OSD is configured.

KVM Combiner

Configure the **KDS-DEC7** KVM settings.

To activate the KVM:

1. In the Navigation pane, open the **Main** page and select the **KVM Combiner** tab.

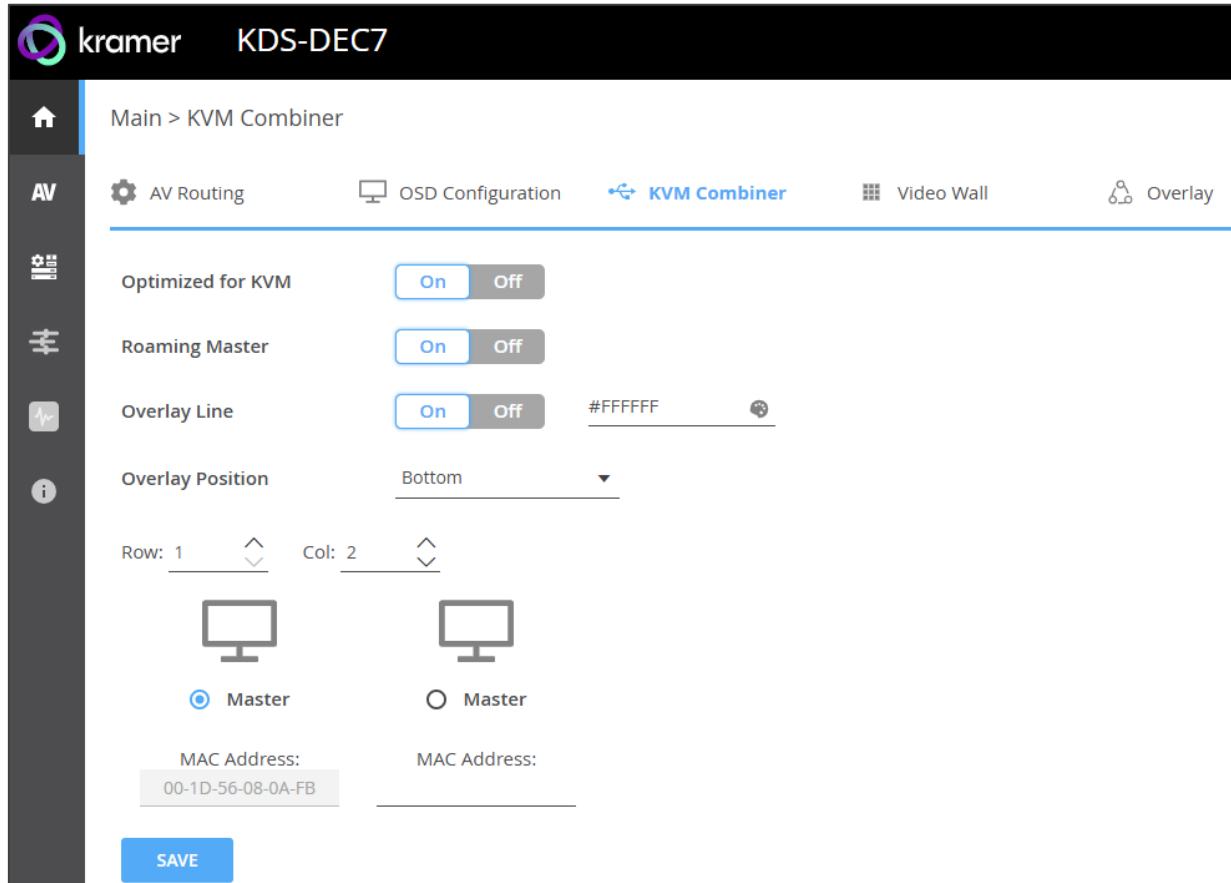


Figure 36: Main Page – KVM Combiner Tab

2. To use a KVM, set On **Optimized for KVM** (enabled by default).
3. Set **Roaming Master** On to configure the device as the Master (see [Configuring the Master](#) on page 49).



Only available if **Optimized for KVM** is On.

4. Set **Overlay Line** to On, to have the Master's screen display a line indicating its location. Choose a line color and the position of the line.

Click **SAVE**.

KVM settings are configured.

Configuring the Master

When this **KDS-DEC7** device is set as the Master, the following window appears showing this device and its MAC address.

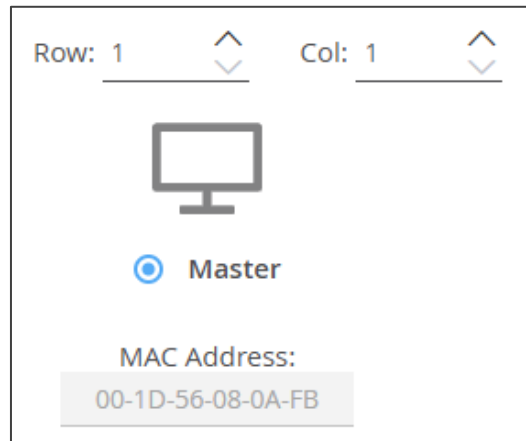


Figure 37: Roaming Master Window

1. Define the number of rows and columns for additional displays (for example, 2 rows and 2 columns).

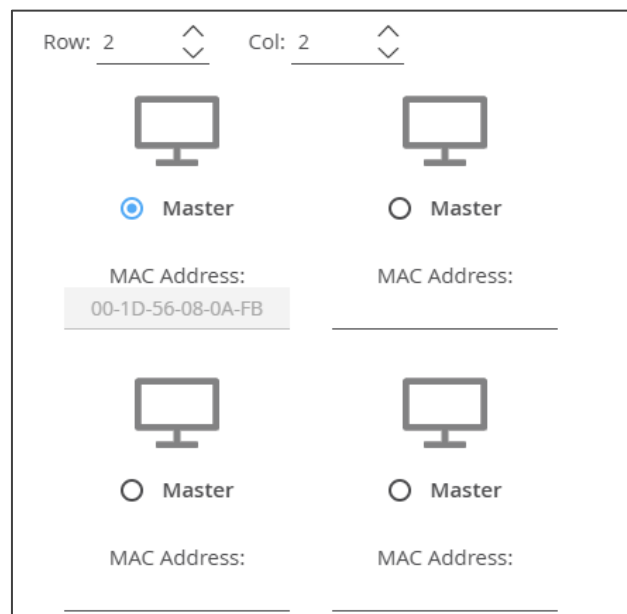


Figure 38: Roaming Master Window

5. Select as Master the device to which the keyboard and mouse are connected.
6. Enter the MAC address of the roaming device(s).
7. Click **SAVE**.

Roaming Master configuration is defined.

Video Wall

The **KDS-7** video wall can be configured as a:

- Grid Video Wall – with a defined number of horizontal and vertical screens that create a complete video wall.
- Mosaic Video Wall – displays different orientations of same-size screens which do not typically cover 100% of the content area and are in either landscape or portrait orientation (via **KDS-7-MNGR**).



Set the video wall source by setting the (Channel ID), see

[Main \(KDS-DEC7\): AV Routing, OSD Configuration, KVM Combiner, Video Wall, Overlay](#) on page [45](#).

Set the Video wall source is set via



Figure 39: Grid and Mosaic Video Walls



Note that The Mosaic Video Wall can be configured only from the Kramer **KDS-7-MNGR**.

If Mosaic Video Wall is selected (via **KDS-7-MNGR**), **KDS-DEC7** shows the status in the Video Wall tab.

You can change to Grid Video Wall from Mosaic Video Wall on **KDS-7-MNGR** or on **KDS-DEC7**.

To configure the KDS-DEC7 video wall:

- 1. In the Navigation pane, open the **Main** page and select the **Video Wall** tab.

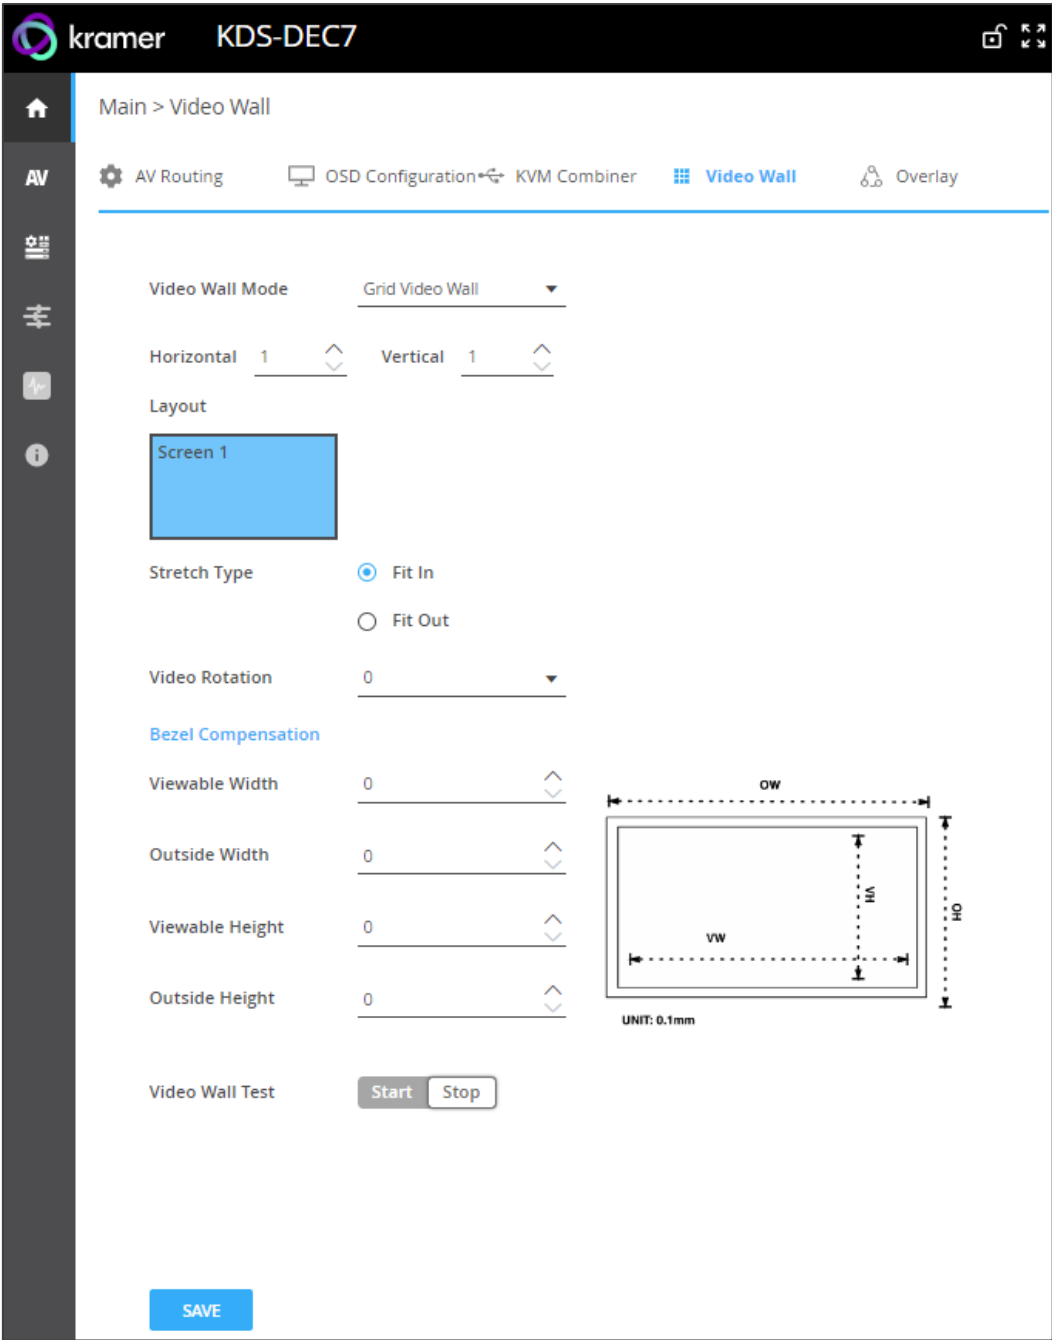


Figure 40: Main Page – Video Wall Tab

- 2. Select Grid Video Wall mode from the drop-down box.



If Mosaic video wall is configured (only via **KDS-7-MNGR**), Grid video wall can be selected to override **KDS-7-MNGR** settings.

- Set the video wall horizontal and vertical size (up to 16x16). For example, select a 2x3 video wall and view the layout.

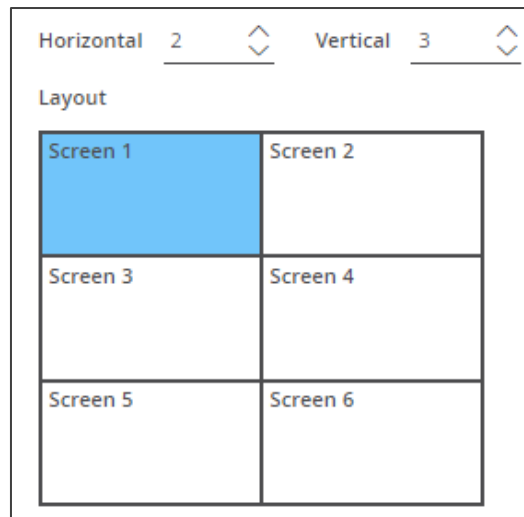


Figure 41: 2x3 Video Wall Configuration

- Define the Image stretch type over the video wall. Check:
 - Fit In**, to stretch the video to fit the screen.
 - Fit Out**, to maintain the source video aspect ratio and fill the video to the screen. Note that part of the video may be cut out.
- If required, rotate the video image by 90, 180 or 270 degrees (default is 0).
- Set Bezel Compensation: the Viewable Width (VW), Outside Width (OW), Viewable Height (VH) and Outside Height (OH).



Bezel Compensation – is used to avoid video display distortion by setting up the dimensions of connected displays for bezel compensation. Enter the outside screen width and length (which includes the bezel) and inside visual width and length (excluding bezel) for auto compensation.

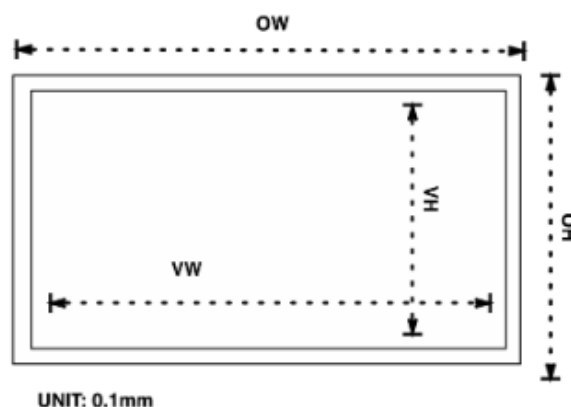


Figure 42: Bezel and Gap Compensation

- Click **Start/Stop** to test the video wall.
- Click **SAVE**, Video wall is configured.

Overlay

Image Overlay

To configure the image overlay:

1. In the Navigation pane, open the **Main** page and select the **Overlay** tab.

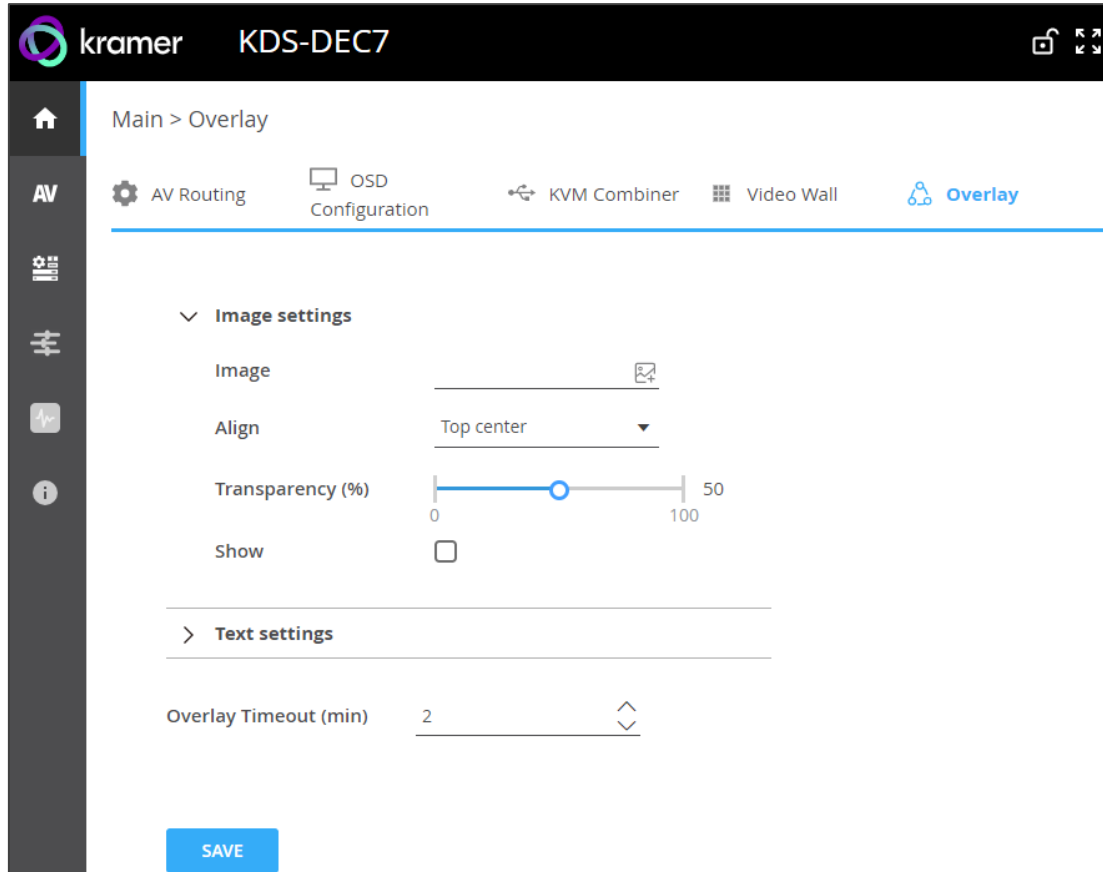


Figure 43: Main – Overlay Tab (Image Settings)

2. Click  (image icon) to upload an image.



The image format must be PNG, the resolution up to 640x360, and file size up to 256KB.

3. Set the image location from the drop-down box (default is Top center).
4. Use the slider to define the image transparency from 0 to 100% (invisible).
5. Check **Show** to display the image.
6. Click **SAVE**.

Image overlay is configured.

Text Overlay

To configure overlay text:

1. In the Navigation pane, open the **Main** page and open select the Overlay tab.

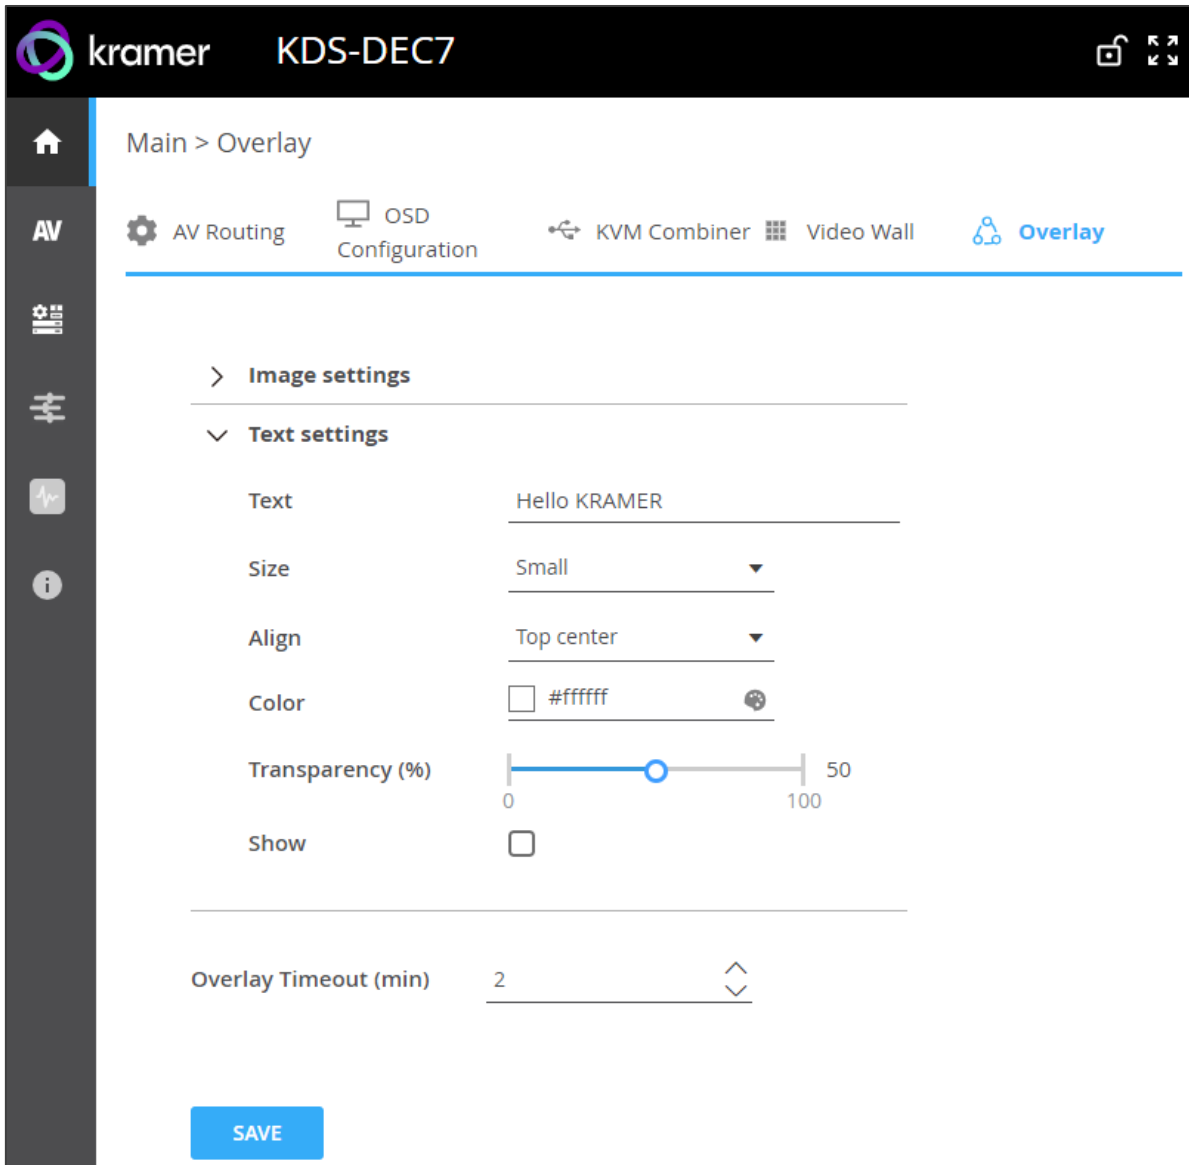


Figure 44: Main Page – Text Overlay Tab

2. Enter the overlay text (for example, Hello KRAMER).
3. Set the text size.
4. Set the text location from the drop-down box (default is Top center).
5. Set the text color.
6. Use the slider to define the text transparency from 0 to 100% (invisible).
7. Check **Show** to display the text.
8. Set the Overlay timeout (min). Set 0 to make the overlay permanent.
9. Click **SAVE**; Text overlay is configured.

AV Settings (KDS-DEC7): Video

To define Video settings:

- 1. In the Navigation pane, Select **AV**. The Video page appears.

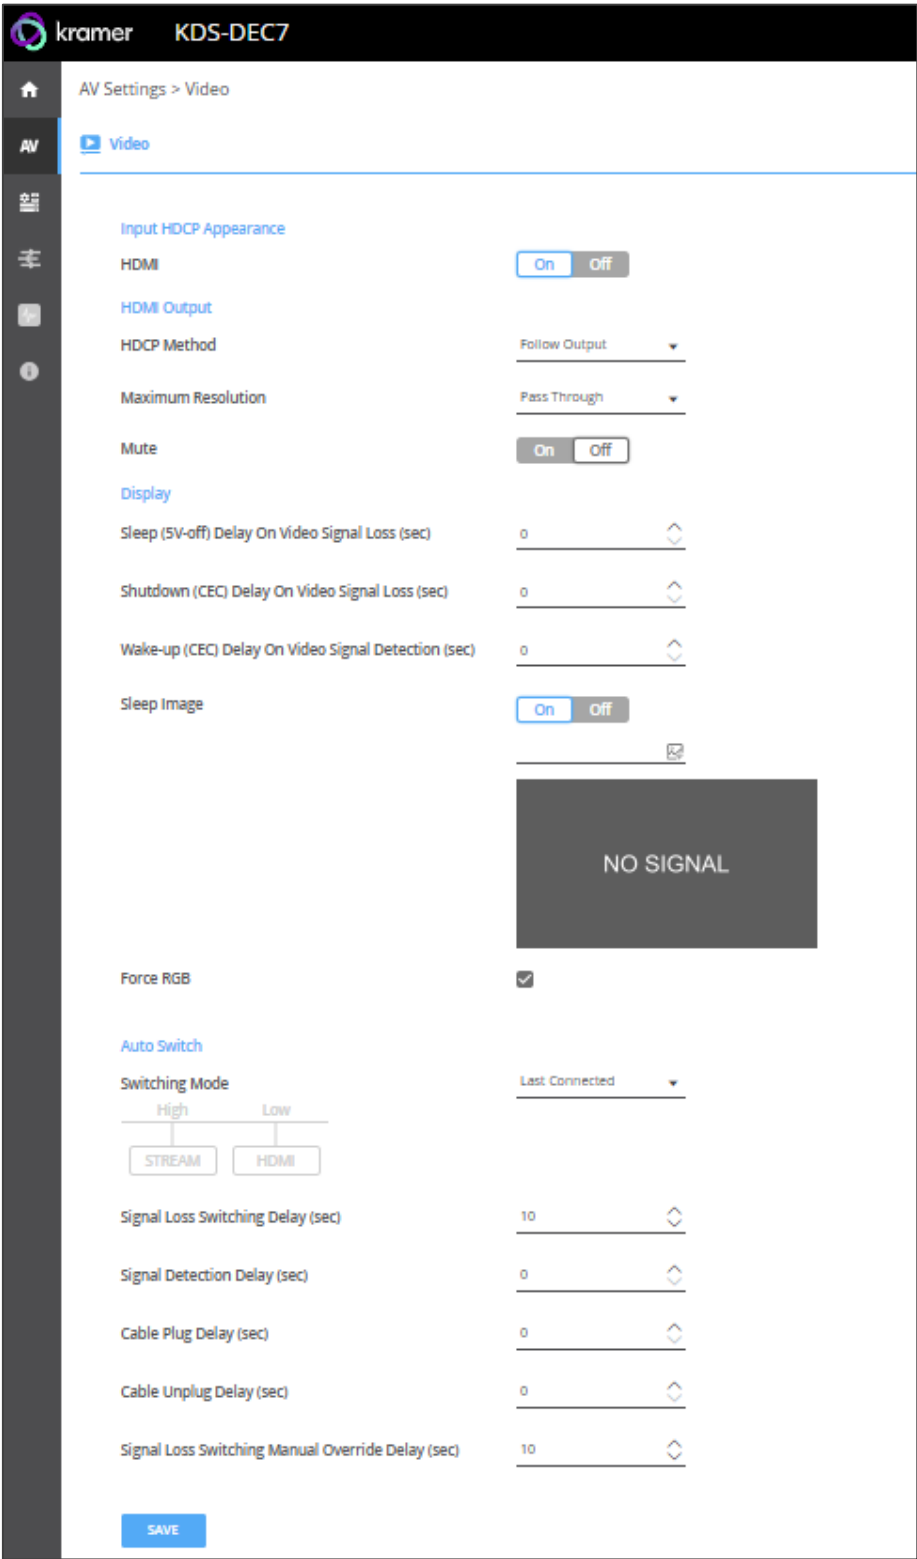


Figure 45: Video Settings

2. Define HDCP support:
 - a. Enable or disable HDCP in the **HDMI** field. High-bandwidth Digital Content Protection protects digital content from copying. Leave On for HDCP on HDMI.
 - b. Set the **HDCP Method**. Choose between:
 - **Follow Output** - The HDMI output device's standards define the output HDCP method.
 - **Follow Input** – The input stream's HDCP setting decides the HDMI output's HDCP method.

3. Set the **Maximum Resolution** (on the output HDMI), chose from:
 - **Pass Through** (default, the output video resolution follows the input stream resolution),
 - **Based in EDID** (output resolution set by the EDID),
 - 3840x2160@30Hz or 25Hz (ultra HD),
 - 1920 x 1200@60Hz (full HD), 1920 x 1080p @60Hz or 50Hz (full HD)
 - 1680 x 1050@60Hz.



You cannot upscale a source with horizontal pixels > 1920.
For example, 2048x1080, 3840x2160 are not supported.

The output resolution can be downscaled by downscaling the horizontal + vertical resolutions by half.

For example: 4096x2160 can be downscaled to 1920x1080.

Meaning 128 horizontal pixels are missing ($4096/2 - 1920 = 128$).

For example, 3840x2160 can be downscaled to 1280x720.

Meaning 640 horizontal pixels are missing ($3840/2 - 1280 = 640$) 360 vertical pixels will be missing ($2160/2 - 720 = 360$).

4. **Mute**: Disables the audio and video and displays a black screen on the HDMI output stream. This setting is not saved if the device is rebooted.
5. Define display behavior:
 - **Sleep (5V-off) Delay On Video Signal Loss (sec)**: when video signal is lost, define the delay time before setting 5V power off.
 - **Shutdown (CEC) Delay On Video Signal Loss (sec)**: when video signal is lost, define the delay time before a CEC shutdown command is sent to the unit.
 - **Wake-up (CEC) Delay on Video Signal Detection (sec)**: when the device detects a video signal, define the delay time before a CEC wake up command is sent to the unit.
6. Enable/disable sleep image usage (**ON/OFF**).
7. Set On or Off the **Sleep Image** to be displayed when there is no signal on the input. Upload an image if necessary. Use the Image Preview to see if the Sleep Image is operational.
8. Set **Force RGB** mode: Check (default) to force RGB as the output video format.

9. Set the **Switching Mode**:

- **Last Connected** – if the signal on the current input is lost, the **KDS-DEC7** automatically selects the last connected input (the delay depends on the configurable signal-lost timeout).
- **Priority** – when the input sync signal is lost for any reason, the input with a live signal and next in priority is selected automatically, (the delay depending on the configurable signal-lost timeout). This priority is configurable; the default setting is HDMI→STREAM. Drag the HDMI or Stream icons to High or /Low to change the setting.

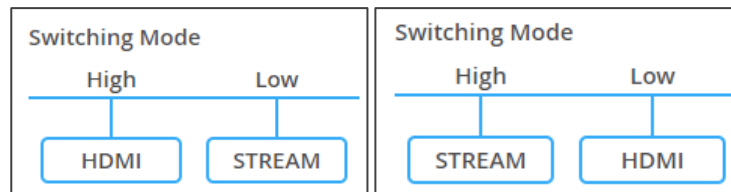



Figure 46: Changing Input Priorities

- **Manual** – Select an input manually and switching occurs whether a live signal is present on the input or not.

 In both Last Connected and Priority modes, manually selecting an input (using the remote input select button or web UI) overrides automatic selection.

10. Set the Timeouts (all in seconds):

- **Signal Loss Switching Delay** – When the active input signal is lost without being unplugged (for example when player is on stop), delay switching to the other input (from 5 to 90 sec, default = 10).
- **Signal Detection Delay** – Leave 5V ON & delay switching. When a new AV source is connected to the inactive input, delay switching to this new detected signal (from 0 to 90 sec, default = 0).
- **Cable Plug Delay** – Delay switching after connecting a cable. When an input is plugged, delay switching to this input (from 0 to 90 sec, default = 0).
- **Cable unplugged** – Delay switching. When the active input is unplugged, delay switching to the other input (from 0 to 90 sec, default = 0).
- **Signal Loss Switching Manual Override Delay** – Delay manual-override exit. In a case where the active input was switched manually, and there is no active signal on that input, the switching back to the other input time is 10 seconds. If there is an active signal on the manual selected input, and then this signal is lost, this setting delays switching back to the other input (from 5 to 90 sec, default

11. Click **SAVE**.

HDMI input settings are defined.

Device Settings (KDS-DEC7): General, Network, Time and Date, Security, Users

Change the Host Name and click **APPLY**, view the device model, H/W release version, serial number, and MAC address.



Though the device has only one MAC address, you can configure up to two separate IP addresses for the two Ethernet ports in two subnets using one MAC address (see [Network Settings](#) on page 61).

General Settings

1. In the Navigation pane, select **Device Settings**. The General tab in the Device Settings page appears.

The screenshot displays the 'Device Settings > General' page for a KDS-DEC7 device. The interface includes a navigation sidebar on the left with icons for Home, AV, and a menu. The main content area is titled 'Device Settings > General' and features several tabs: General (selected), Network, Time and Date, Security, and Users. The 'General Preferences' section includes fields for Host Name (KDS-DEC7-001D560809C), Device Model (KDS-DEC7), Device H/W Release (0.2), MAC Address (00-1D-56-08-09-D0), and Serial Number (11210005700019). There is a toggle for Front Panel Lock (set to On) and buttons for Export Device Settings (All including IP), Import Device Settings, and Locate Device. The 'Version' section shows Firmware Version (1.0.10) with an Upgrade button, Last Upgrade Date/Time (01-01-1970,00:07:03), and Firmware Standby Version (0.7.1) with a Rollback button. At the bottom, there are buttons for Device Restart, Factory Reset, and Device Logs (toggle set to On).

Figure 47: KDS-DEC7 Device Settings – General Page

2. Lock/Unlock the device front panel:
 - Click **Off**, to enable device control from the front panel via the LCD screen and the navigation buttons(see [Using Menu Navigation Buttons](#) on page [13](#)).
 - Click **On**, to disable device control via the navigation buttons.

Importing/Exporting Device Settings

You can select the type of device settings to export/import from/to the device.

To import or export the device settings:

1. In the Navigation pane, select **Device Settings**. The General tab in the Device Settings page appears (see [Figure 14](#)).
2. In the General Device Settings page, select the setting types to import or export.
 - **All without IP** – Select all the settings, excluding the IP address.
 - **Streams** – Select video, audio, IR, CEC and RS-232 settings.
 - **AV Settings Only** – Select only video and audio settings.
 - **All including IP** – Select all the settings including the IP address.
3. When importing, do the following (when exporting, go to the next step):
 - Click **IMPORT**. An Open file appears.
 - Select the file to import (settings.tar.gz).
 - Click **Open** to import the file.
4. To export settings, click **EXPORT**.
The settings file is created (settings.tar.gz).

The settings file is imported/exported.

Locating the Device

Locate the specific device in the system.

To locate the device:

1. In the Navigation pane, select **Device Settings**. The General tab in the Device Settings page appears (see [Figure 14](#)).
2. In the General tab, click **APPLY** next to Locate Device.
The located device NET and ON LEDs on the front panel flashes for 60 seconds.

The device is located in the system.

Managing the Firmware Version

To upgrade the firmware, view the date of the last upgrade, or rollback to the previous firmware revision in case of a problem, see [Upgrading Firmware](#) on page [75](#).



Click **ROLLBACK** to update to the previous FW version.

Restarting or Resetting the Device

Click **RESTART** to reboot the device and click **RESET** to restore device factory default settings.

General settings are defined.

Exporting Device Activity Logs

Device activity logs are essential features to troubleshoot potential problems and/or receive technical support.

This feature is disabled by default to save system resources.

Enable feature, then run scenario, which is to be reviewed and “export” the log file.

Disable feature when logs are not required anymore.

Network Settings

KDS-DEC7 has two Ethernet ports, LAN **Media** and LAN **Stream** (24 and 25 in [Defining KDS-DEC7 4K AVoIP Decoder](#) on page 7). By default, all network connections use LAN Media. Different stream types can be separated and sent to/from each port using different IP addresses for each port. For example, use one port for AV (“Stream”) and the other for Protocol 3000 (“Control”) commands.

Define KDS-DEC7 Network settings

1. In the Navigation pane, select **Device Settings** and then open the **Network** tab.

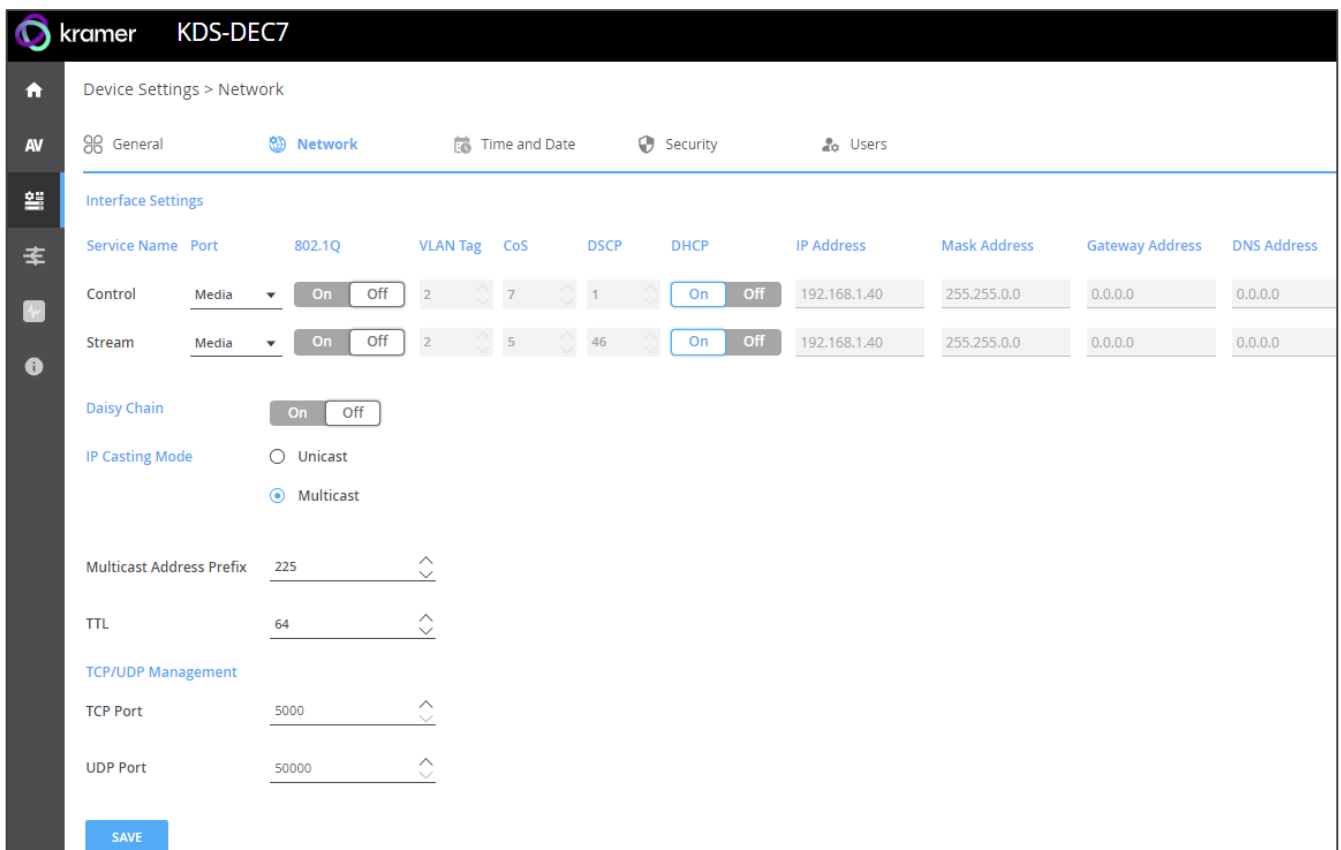


Figure 48: Device Settings – General Page

2. Set the **Control** and **Stream** service parameters:

- **Port** – Set each service to use the **Media** LAN port (default) or the **Service** LAN port.



If all network communication is assigned to the Media port, then both Control and Stream will share the same IP address.

Otherwise, Control and Stream should use different IP addresses, with different subnets.

- **802.1Q** – If set to On (off by default), the data transmission uses VLAN tags.
 - **VLAN Tag** – VLAN (virtual local area network) tags (range 2 – 4000) are used to separate the network into smaller virtual networks. Requires 802.1Q to be set to On.
 - **CoS** – Class of Service, requires a unique VLAN tag. CoS sets the priority (0-7) of each VLAN option within the local network (layer 2 of the OSI model). Prioritizing higher priority traffic, provide a more reliable service.

If Stream and Control share the same LAN, the stream will follow control configuration.

- **DSCP** – The DSCP (Differentiated Services Code Point) value is used to mark the priority (0-63) of packets in a WAN network layer (layer 3 of the OSI model). It is used for large-scale networks (or across the Internet) and increases the quality of service. By default DSCP is 56 for the Control stream.
- **DHCP** – If set to On, the service's IP address is generated by the network. If set Off, you may need to define a static IP address for the service.
- **IP Address** – When DHCP mode is set to Off, the device uses a static IP address. This requires entering **Mask**, **Gateway** and **DNS** addresses.

Click **Save** after making any changes.

Daisy Chain Mode

Daisy chaining is connecting multiple decoders in a "chain," where each decoder's Service LAN port is connected to the next in line's Media LAN port.

When **Daisy Chain** is set to **On**, only the Media port can be used for inputting streams and commands as the Service port is used to connect to the next decoder in the chain.

Click **Save** after making any changes.

Defining IP Casting Mode Setting

Unicast / Multicast (default) – Multicast communication transmits the data stream to multiple receivers simultaneously, select unicast if your stream is intended for a single receiver.

- **Multicast Address Prefix** – Select a prefix for the multicast stream's IP between 224 and 239 (default prefix is 226.x.x.x). Routers identify multicast streams by their IP prefix and handle the stream's packets as data which is not directed to a specific recipient: It is a general stream addressed to the entire network.
- **TTL - Time to Live (TTL)** restricts the number of times a packet/data can be forwarded by network routers before it is discarded. It stops the stream data from circulating endlessly in the network. Select a value between 1 and 255 (Default 64).

Click **Save** after making any changes.

Defining TCP/UDP Ports

TCP and UDP are two different protocols used in streaming. TCP establishes a connection before streaming and UDP simply outputs the stream, which has lower latency but less reliability. In both cases, the network switch and firewall will allocate certain ports for their use and block the traffic if they are on other ports.

Use the default ports (TCP – 5000 and UDP – 50000), unless you have specific reasons to make changes.

Click **Save** after making any changes.

Time and Date

You can set the device time and date manually or Sync the device time and date to any server around the world.

To define KDS-DEC7 Time and Date:

1. In the Navigation pane, select **Device Settings**. The General tab in the Device Settings page appears (see [Figure 47](#)).
2. Select the Time and Date tab.

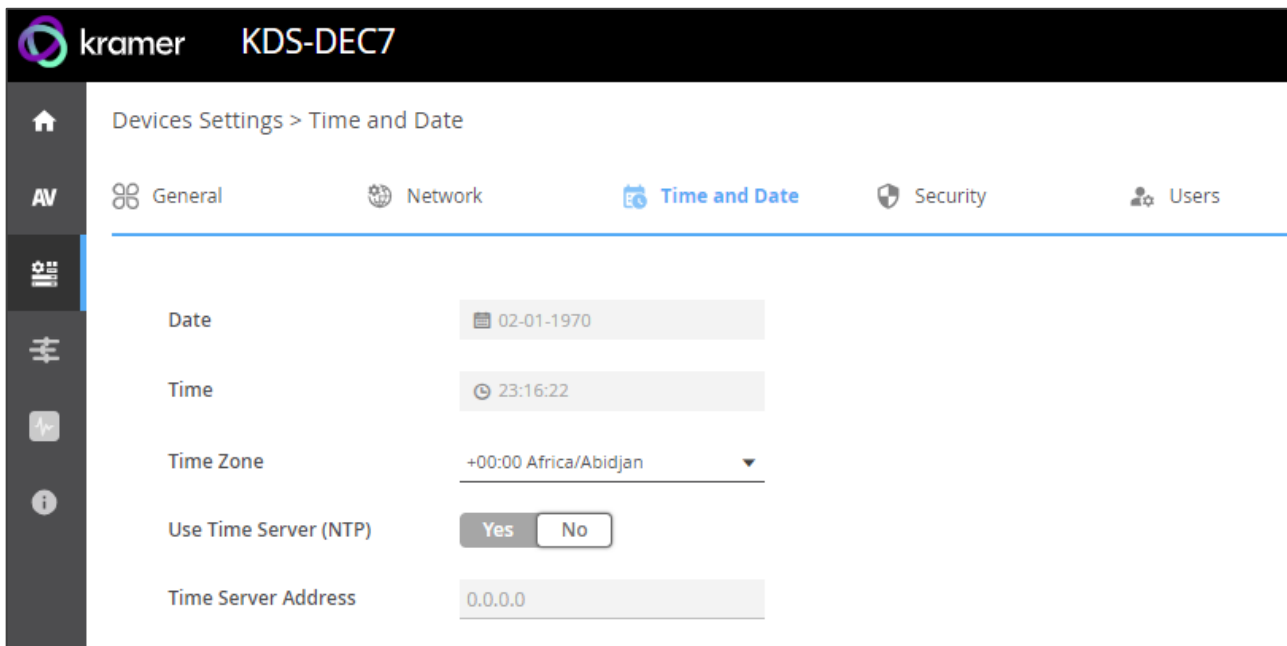


Figure 49: Device Settings Page – Time and Date Tab

3. Set **Use Time Server (NTP)**, to **YES**.
4. Enter the **Time Server Address** IP or URL.
5. Click **SAVE**.

The devices date and time are synchronized to the server address entered.

Security

The Security tab configures device authentication to limit unauthorized access to LAN/WLAN Network.



Contact your IT administrator for the network access authentication.

To Configure security:

1. In the Navigation pane, Select **Device Settings**. The General tab in the Device Settings page appears (see [Figure 47](#)).
2. Select the Security tab.

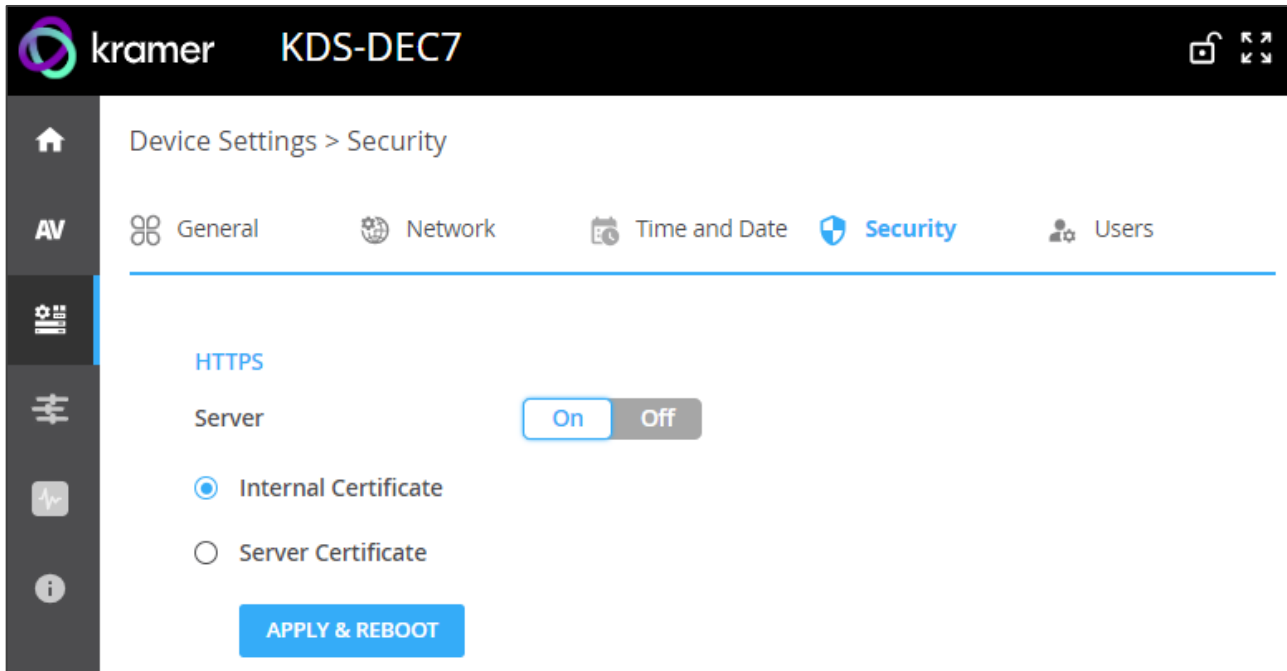


Figure 50: Device Settings – Security Enabled

3. Define security for **KDS-DEC7** (as described for **KDS-EN7**), see [Security Settings](#) on page [32](#):

Security is configured.

Users

The Users tab enables activating device security and defining logon authentication details. When device security is on, web page access requires authentication upon initial landing on operation page. User and password default is admin. User access to web pages is identical to **KDS-EN7**, see [Users Settings](#) on page [35](#).

Control Settings (KDS-DEC7)

KDS-DEC7 enables configuring CEC, RS-232 and/or IR gateway Control.

Configuring CEC Settings

KDS-DEC7 sends CEC commands from a control system, connected by LAN, via the KDS-DEC7 built-in control gateway, to control CEC enabled devices that are connected to the KDS-DEC7 HDMI output and input.

To set CEC Gateway:

1. In the Navigation pane, click **Control**. The Control>Settings page appears.

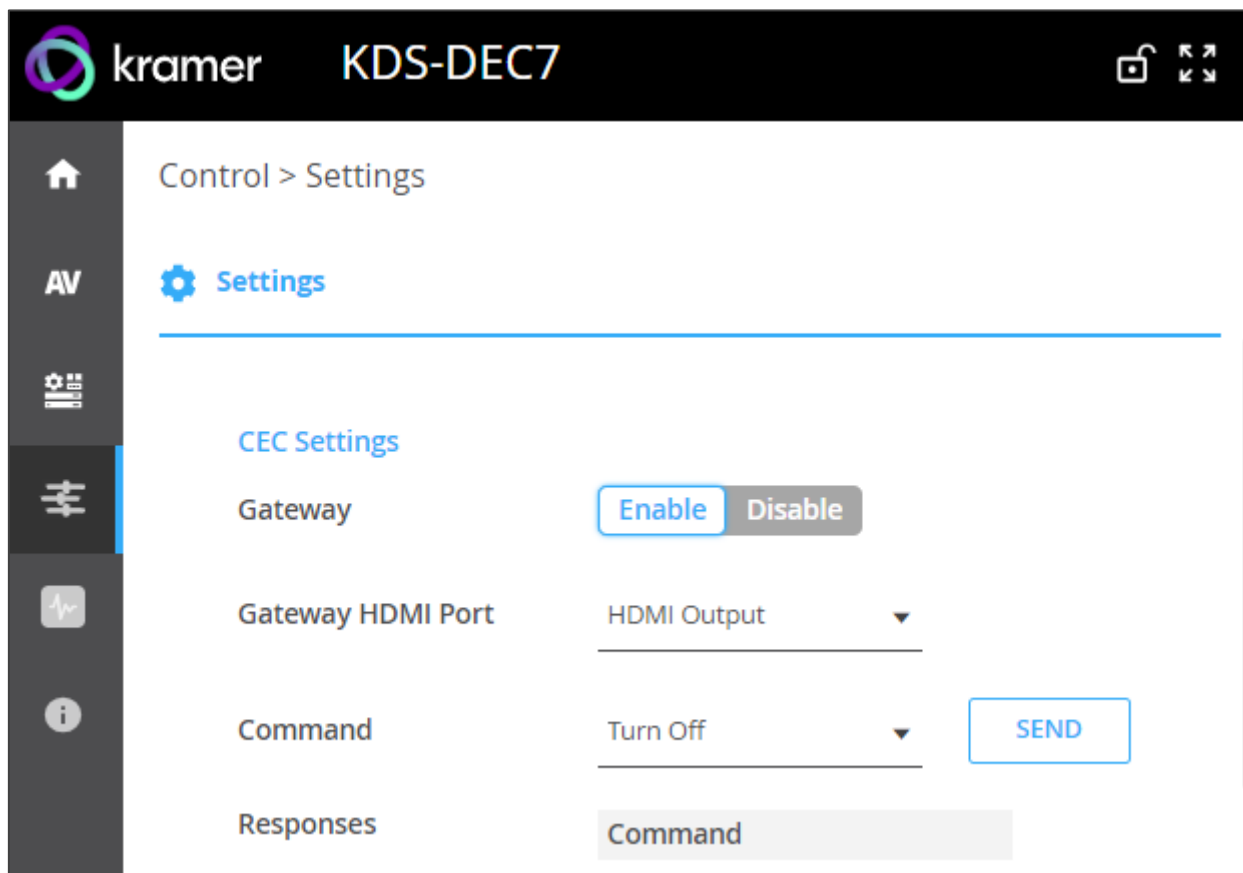


Figure 51: Control > Settings Page – CEC Settings

2. Perform the following actions for **KDS-DEC7** (as described for **KDS-EN7**):

- [Configuring CEC Settings](#) on page [38](#).
- [Configuring RS-232 Settings](#) on page [39](#).
- [Configuring IR Settings](#) on page [40](#).

Gateway settings are configured.

Diagnostics (KDS-DEC7): Status, Connections

Status of KDS-DEC7

To view device status:

- 1. In the Navigation pane, click **Diagnostics**. The Status tab appears.

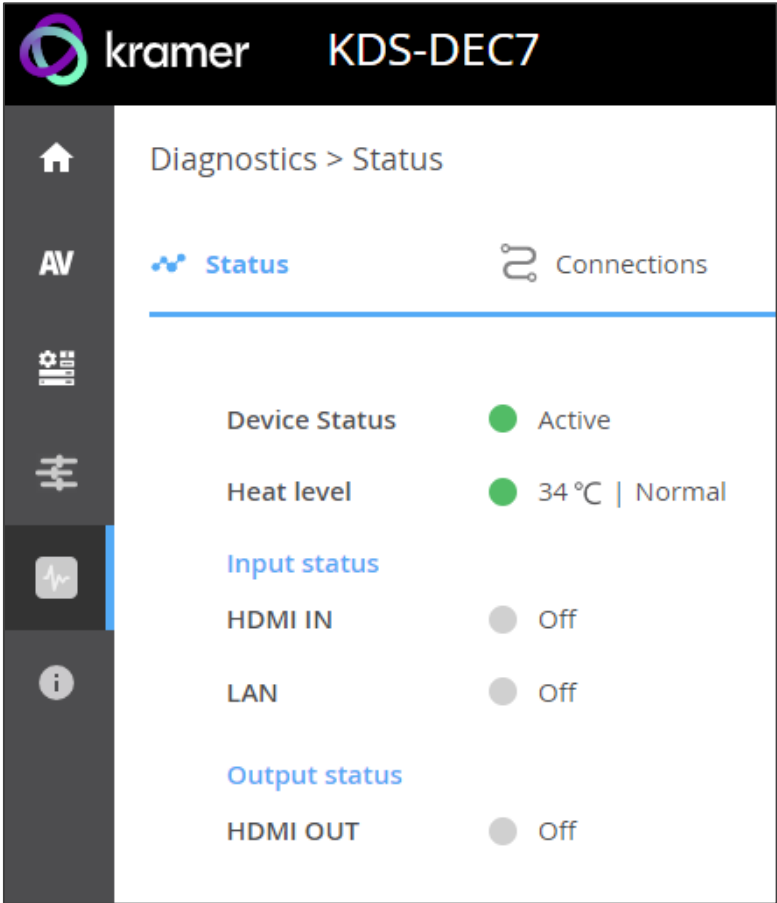


Figure 52: Diagnostics Page – Status Tab

Connections

View the connection information status.

To view Connections status:

- 1. In the Navigation pane, click **Diagnostics**. The Status tab appears (see [Figure 52](#)).
- 2. Select the Connections tab.

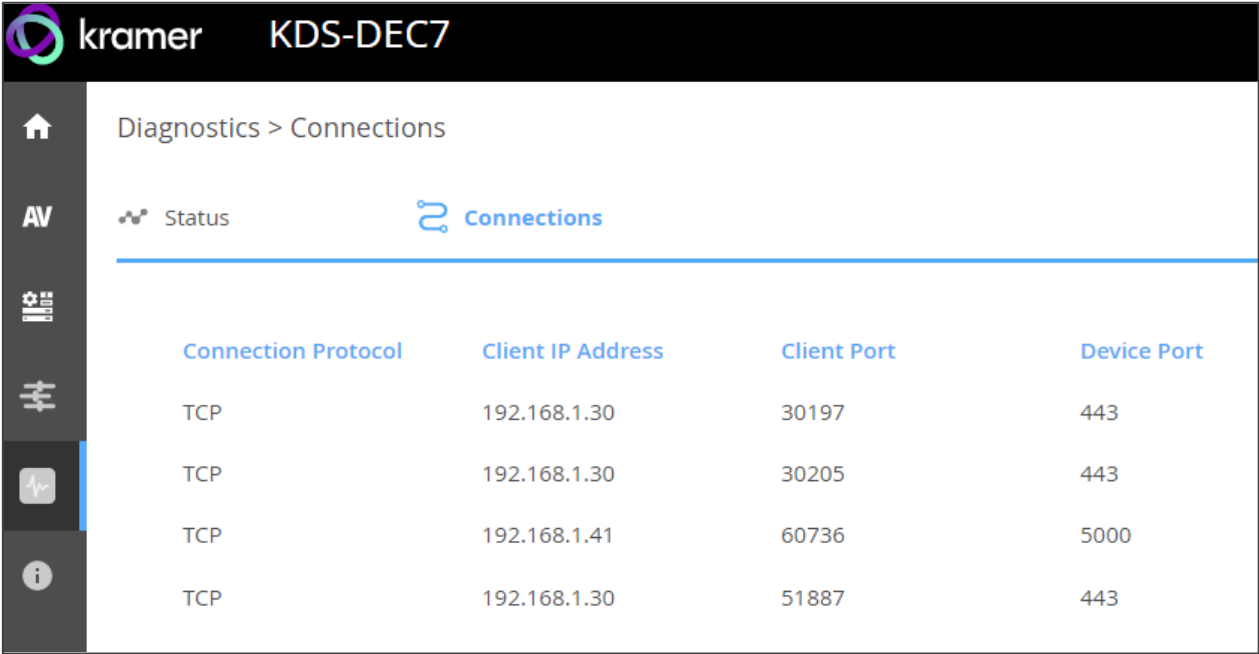


Figure 53: Diagnostics Page – Connections Tab

- 3. View the Connections status, including protocol type, client IP address and port, and the device port.

Connections' status is viewed.

About KDS-DEC7

View the web page hardware release, firmware version and Kramer Electronics Ltd details in the About page.

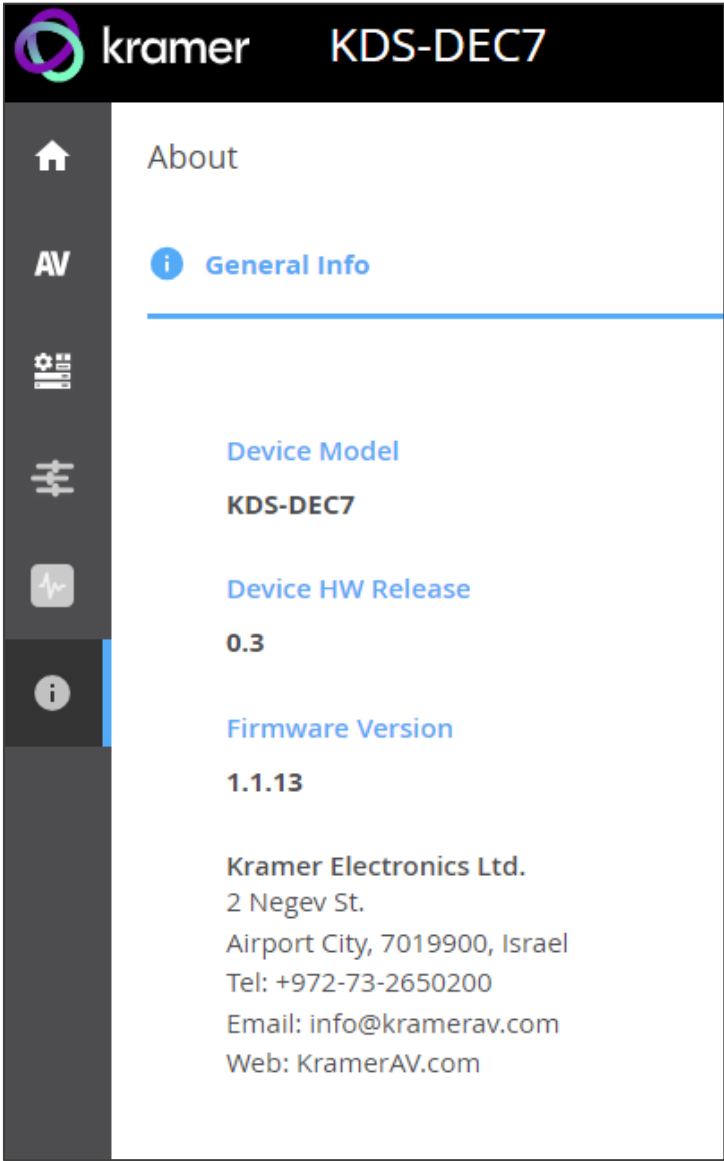


Figure 54: About Page

KVM Roaming, OSD menu and Fast Switching

This section describes KVM roaming, using the OSD Menu and Fast switching configurations.

To set the devices properly:

1. Make sure the system devices (**KDS-EN7** and **KDS-DEC7**) and PC are all connected to the same Network.
2. Power all the devices in the system.
3. Configure the Network switch as follows:
 - Jumbo Frames – On. (at least 8000 bytes).
 - IGMP Snooping – On.
 - IGMP Querier – On.
 - IGMP Immediate/Fast Leave – On.
 - Unregistered Multicast Filtering – On.
4. Make sure that the PC sub Network is the same as the system devices.

Devices are set.

Perform the following actions:

- [Configuring KVM Roaming](#) on page [70](#).
- [KVM and OSD Menu Switching](#) on page [73](#).
- [Fast switching configuration](#) on page [74](#).

Configuring KVM Roaming

The KVM Roaming mode enables interacting with multiple hosts via USB from one master KDS-DEC7 decoder connected to a keyboard and mouse, see, for example, the following layout.

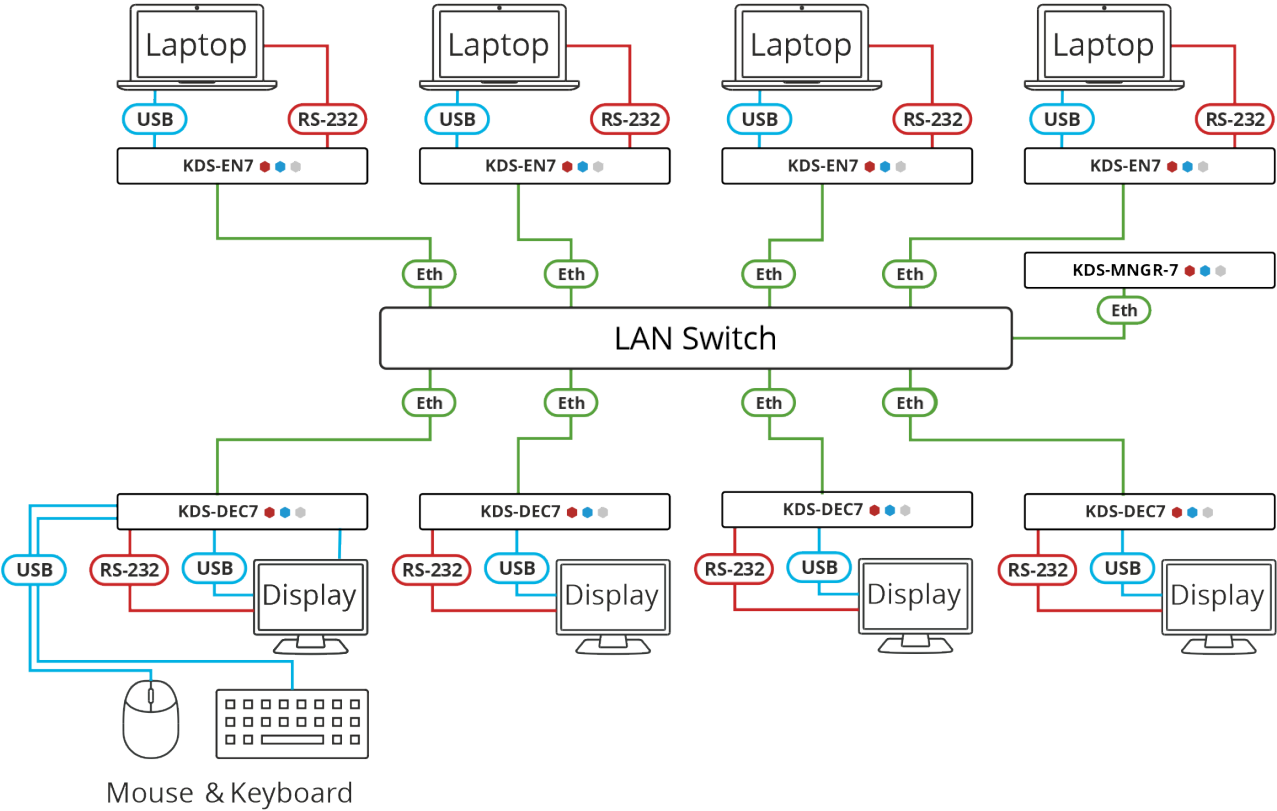


Figure 55: KVM Roaming Layout

To configure KVM roaming:

- 1. Access the encoder and decoder web pages.
- 2. For each encoder, in the AV Routing page, set a unique Channel ID and name.

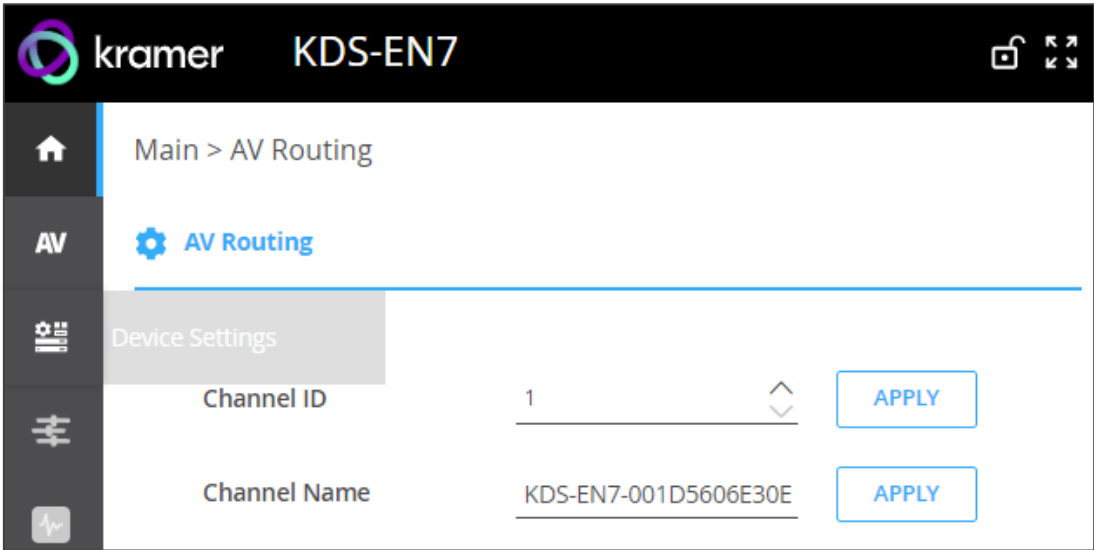


Figure 56: KDS-EN7 Setting Channel ID and Name

- For each decoder, in the AV Routing page, pair an encoder to a decoder. For example, pair ENC 1 to DEC 1, ENC 2 to DEC 2, ENC 3 to DEC 3 and ENC 4 to DEC 4.

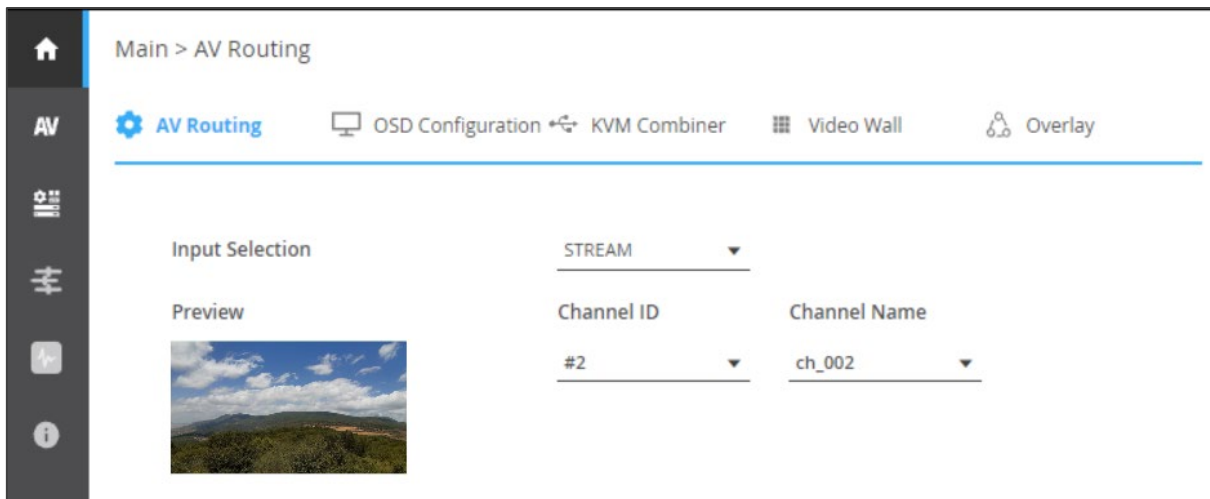


Figure 57: KDS-DEC7 Setting Channel ID and Name

- For the Decoder that has the keyboard and mouse connected, open the Main>KVM Combiner page.

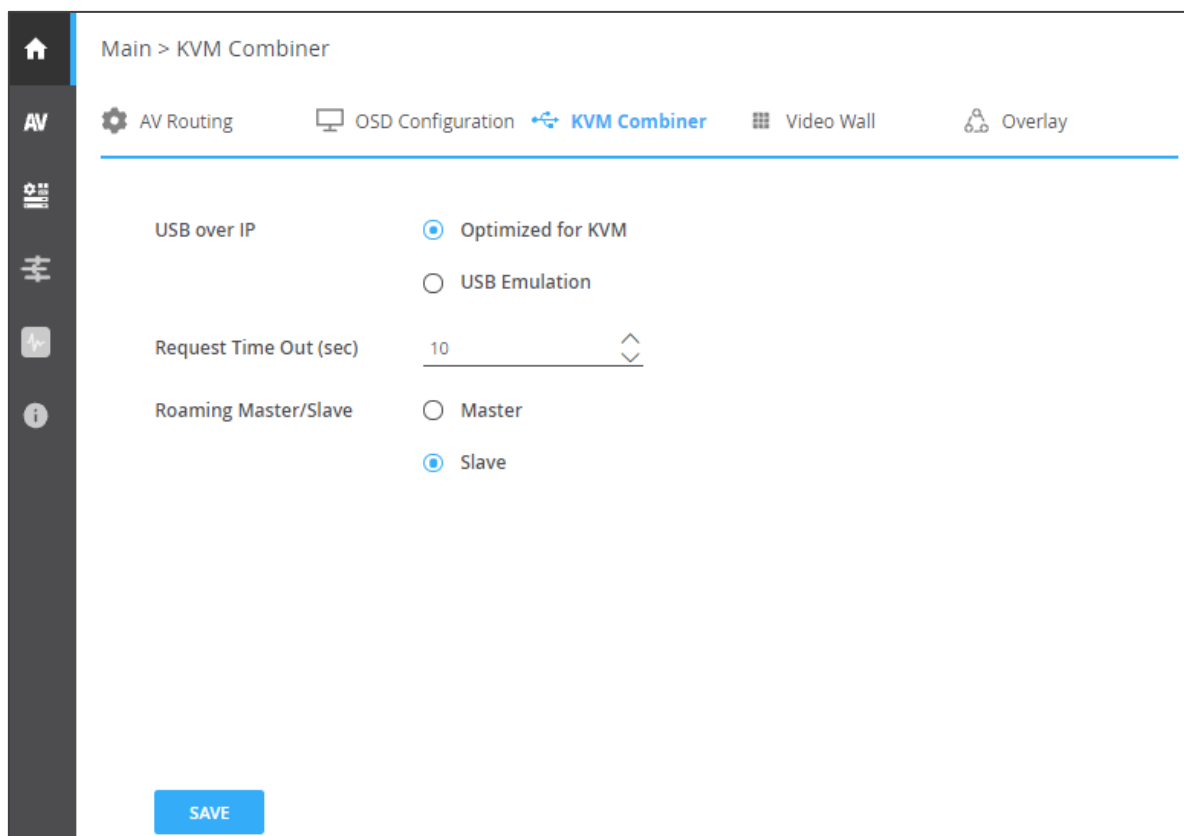


Figure 58: Defining the Master Decoder for KVM Roaming

- Set the Decoder as master. The decoder configuration setup appears.

- 6. Set the row and column numbers as they are set physically.
For example, if the decoder setup is a 2x2 video wall, set Row to 2 and Column to 2.

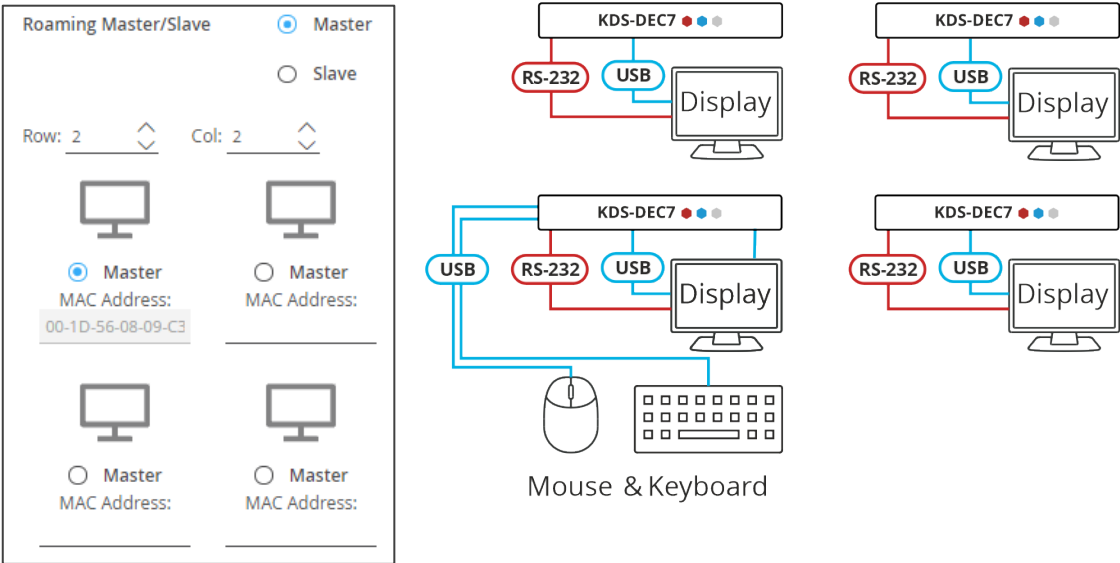


Figure 59: Setting the Decoder Configuration

- 7. Check the physical location of the Master decoder (lower left size in this example).
The MAC address is automatically entered.

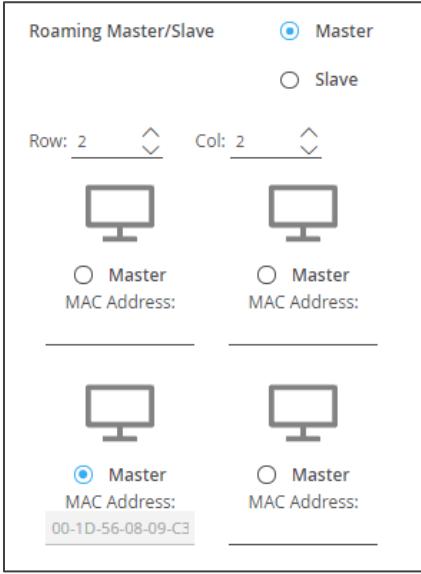


Figure 60: Setting Master MAC Address

- 8. Manually enter the other (slave) decoder MAC addresses according to the physical setup.
 - 9. Click Slave.
- KVM Roaming is configured.

KVM and OSD Menu Switching

Use the keyboard keys to access an OSD menu on a defined display.

To access and use the OSD menu:

1. Access the target decoder (connected to the display on which the OSD should be displayed) web pages.
2. In the Main>OSD Configuration page, add the encoder channel name to the channel list.

The screenshot shows the 'OSD Configuration' page for 'KDS-DEC7'. The 'OSD Menu' section has the following settings:

- Menu Timeout (sec): 30
- Channels per Page: 5
- Maximum Channels: 999
- Text Color: #ffffff
- Background Color: #a9a9a9
- Transparency (%): 50
- Hot Key: Caps Lock

The 'Channel List' table is as follows:

#ID	Name		
1	ch_001		
2	ch_002		
3	ch_003		
4	ch_004		
5	ch_005		

Page 1 of 10

Figure 61: KDS-DEC7 Adding the encoder Channel ID and Name

3. Connect a USB keyboard to the USB-A Target decoder.
4. On the connected keyboard, double click the **Caps Lock**.
The OSD Channel Select page OSD appears, listing 10 channel IDs per page.

5. To operate the OSD, use the Keyboard as follows:

- Press **Caps Lock** twice to open the OSD.
- Press **Up/Down** (or **PgUp/PgDn**) to move up/down to the next item.
- Type a menu feature next to Filter (in the OSD) to access a function quickly.
- Press **Enter** to accept a selection and exit the OSD menu.
- Press **Esc** to exit the menu.

OSD menu is accessed.

Fast switching configuration

This section describes how to configure fast switching.

To fast switching:

1. Access the encoder and decoder web pages.
2. For each encoder, in the AV Routing page, set a unique Channel ID and name.

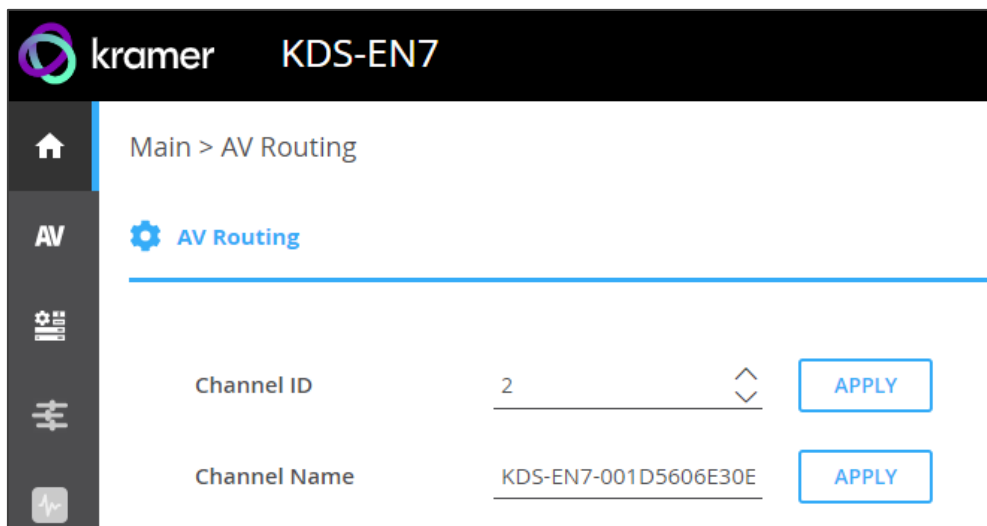


Figure 62: Setting Channel ID and Name on the KDS-EN7 Devices

3. Make sure that all the encoders in the system share the same settings. For example, to configure fast switching between encoder 1 and encoder 2 the following settings need to be identical on the input source:
 - HDCP setting.
 - Resolution and Refresh rate.
4. On the decoders, set the Maximum Resolution in the AV Settings>Video page to be identical.

Fast switching is configured.

Upgrading Firmware

Upgrade the firmware, view the date of the last upgrade, or rollback to the previous firmware revision in case of a problem.



Click **ROLLBACK** to update to the previous FW version.



If the device firmware version is lower than 0.6.3, contact Kramer tech support team at support@kramerav.com or go to our Web site at www.kramerav.com/downloads/KDS-EN7 or www.kramerav.com/downloads/KDS-DEC7

To upgrade the firmware:

1. In the Navigation pane, Select **Device Settings**. The General tab in the Device Settings page appears.

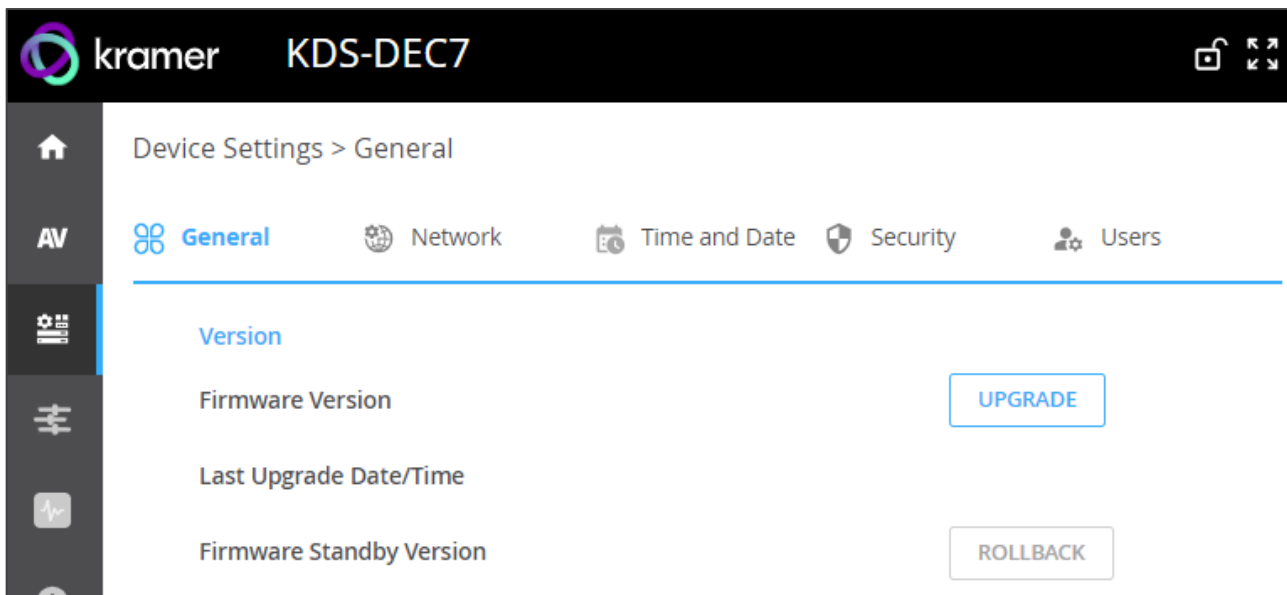


Figure 63: General Tab – Upgrading the Firmware

2. Next to Firmware Version, click **UPGRADE**. The Open window appears.
3. Select the FW file and click **Open**. The FW upgrade pop-up window appears. Wait for upgrade completion.
4. Once completed, refresh the web page and log-in.

Firmware upgrade is complete.

Technical Specifications

KDS-EN7 Specifications

Inputs	1 HDMI	On a female HDMI connector		
Outputs	1 HDMI	On a female HDMI connector		
Ports	2 Ethernet	On RJ-45 female connectors		
	1 Balanced Audio	On a 5-pin terminal block connector		
	1 RS-232	On a 3-pin terminal block connector		
	1 IR	On a 3.5mm TRS connector		
1 USB Host	On a USB-B connector			
USB Hubs	1 level	When connecting to KDS-DEC7		
Network	Multicast	Through RTSP (Real Time Streaming Protocol): IGMP snooping non-blocking, Layer 2		
	Unicast	Through RTSP (Real Time Streaming Protocol)		
	Bitrate	Peak: 850Mbps, 4K average: 350Mbps, 1080p average: 250Mbps		
Video	Compression Standard	JPEG based, private stream		
	Max Resolution	4K@30Hz (4:4:4)		
IR	Wide-band 20kHz~60kHz bidirectional IR transmission			
Resolution	4096x2160@60Hz 3840x2160@60Hz 1920x1200@50Hz 1920x1080@60Hz 1856x1392@60Hz 1792x1344@60Hz 1680x1050@60Hz	1600x1200@60Hz 1600x900@60Hz 1440x900@60Hz 1400x1050@60Hz 1366x768@60Hz 1360x768@60Hz	1280x960@60Hz 1280x800@60Hz 1280x768@60Hz 1280x720@60Hz 1224x768@70Hz 1152x864@70Hz 1024x768@60Hz	848x480@60Hz 800x600@60Hz 720x576@60Hz 720x480@50Hz 640x480@60Hz 640x400@85Hz 640x350@85Hz
Audio	Supported Formats	LPCM up to 7.1/24-bit/192kHz Dolby Atmos™, Dolby TrueHD, Dolby Digital Plus™, Dolby Digital EX, Dolby Digital 5.1, Dolby Digital 2/0 Surround, Dolby Digital 2/0 DTS-HD Master Audio™, DTS-HD, DTS-ES Discrete 6.1, DTS-ES Matrix 6.1, DTS Digital Surround 5.1		
Security	HTTPS, 802.1x, OWASP-10; AV Streaming AES128			
User Interface	Indicators	LINK, NET and ON LEDs, front panel LCD Display		
	Rear Panel	Restart and factory reset button		
	Controls	Embedded web pages, P3K API commands via Ethernet, front panel navigation buttons		
Power	PoE	37V to 57V, max power 13W		
	Optional Power Supply	24V DC, 5A		
Environmental Conditions	Operating Temperature	0° to +45°C (32° to 113°F)		
	Storage Temperature	-20° to +70°C (-4° to 158°F)		
	Humidity	10% to 90%, RHL non-condensing		
Regulatory Compliance	Safety	CE, FCC		
	Environmental	RoHs, WEEE, UKCA		
Enclosure	Size	Mega Tool Deep		
	Type	Aluminum		
	Cooling	Convection Ventilation		
Dimensions	Net Dimensions (W, D, H)	19cm x 14.5cm x 2.8cm (7.5" x 5.7" x 1.1")		
	Shipping Dimensions (W, D, H)	31cm x 18cm x 7.6cm (12.2" x 7.09" x 2.99")		
Weight	Net Weight	0.7kg (1.54lbs) approx.		
	Shipping Weight	0.9kg (2lbs) approx.		

Specifications are subject to change without notice at www.kramerav.com

KDS-DEC7 Specifications

Inputs	1 HDMI	On a female HDMI connector		
Outputs	1 HDMI	On a female HDMI connector		
Ports	2 Ethernet	On RJ-45 female connectors		
	1 Balanced Audio	On a 5-pin terminal block connector		
	1 RS-232	On a 3-pin terminal block connector		
	1 IR	On a 3.5mm TRS connector		
	2 USB	On USB-A connectors		
USB Hubs	1 level	When connecting to KDS-EN7		
Network	Multicast	Through RTSP (Real Time Streaming Protocol): IGMP snooping non-blocking, Layer 2		
	Unicast	Through RTSP (Real Time Streaming Protocol)		
	Bitrate	Peak: 850Mbps, 4K average: 350Mbps, 1080p average: 250Mbps		
Video	Compression Standard	JPEG based, private stream		
	Max Resolution	4K@60Hz (4:2:0)		
IR	Wide-band 20kHz~60kHz bidirectional IR transmission			
Resolution	4096x2160@60Hz, 3840x2160@60Hz, 1920x1200@50Hz, 1920x1080@60Hz, 1856x1392@60Hz, 1792x1344@60Hz, 1680x1050@60Hz,	1600x1200@60Hz, 1600x900@60Hz, 1440x900@60Hz, 1400x1050@60Hz, 1366x768@60Hz, 1360x768@60Hz,	1280x960@60Hz, 1280x800@60Hz, 1280x768@60Hz, 1280x720@60Hz, 1224x768@70Hz, 1152x864@70Hz, 1024x768@60Hz,	848x480@60Hz, 800x600@60Hz, 720x576@60Hz, 720x480@50Hz, 640x480@60Hz, 640x400@85Hz, 640x350@85Hz
Audio	Supported Formats	LPCM upto 7.1/24-bit/192kHz Dolby Atmos™, Dolby TrueHD, Dolby Digital Plus™, Dolby Digital EX, Dolby Digital 5.1, Dolby Digital 2/0 Surround, Dolby Digital 2/0 DTS-HD Master Audio™, DTS-HD, DTS-ES Discrete 6.1, DTS-ES Matrix 6.1, DTS Digital Surround 5.1		
Security	HTTPS, 802.1x, OWASP-10			
User Interface	Indicators	LINK, NET and ON LEDs, front panel LCD Display		
	Rear Panel	Restart and factory reset button		
	Controls	Embedded web pages, P3K API commands via Ethernet, front panel navigation buttons		
Power	PoE	37V to 57V, max power 13W		
	Optional power supply	24V DC, 5A		
Environmental Conditions	Operating Temperature	0° to +45°C (32° to 113°F)		
	Storage Temperature	-20° to +70°C (-4° to 158°F)		
	Humidity	10% to 90%, RHL non-condensing		
Regulatory Compliance	Safety	CE, FCC		
	Environmental	RoHs, WEEE		
Enclosure	Size	Mega Tool Deep		
	Type	Aluminum		
	Cooling	Convection Ventilation		
Dimensions	Net Dimensions (W, D, H)	19cm x 14.5cm x 2.8cm (7.5" x 5.7" x 1.1")		
	Shipping Dimensions (W, D, H)	31cm x 18cm x 7.6cm (12.2" x 7.09" x 2.99")		
Weight	Net Weight	0.7kg (1.54lbs) approx.		
	Shipping Weight	0.9kg (2lbs) approx.		

Specifications are subject to change without notice at www.kramerav.com

Default Communication Parameters

P3K		
Example (stop encoder decoder activity)		#KDS-ACTION 0<CR>
Ethernet		
To reset the IP settings to the factory reset values go to: Menu->Setup -> Factory Reset-> press Enter to confirm		
	KDS-EN7	KDS-DEC7
DHCP	Default	Default
IP Address:	192.168.1.39	192.168.1.40
Subnet mask:	255.255.255.0	255.255.255.0
Default gateway:	192.168.1.254	192.168.1.254
TCP Port #:	5000	5000
UDP Port #:	50000	50000
Default username:	admin	admin
Default password:	admin	admin
Full Factory Reset		
Embedded web pages	Device Settings > General > RESET	
Front panel buttons	Press the RESET button on the rear panel for 10 seconds	

Default EDID

Monitor

Model name..... KDS7 Encoder
 Manufacturer..... KMR
 Plug and Play ID..... KMR0000
 Serial number..... 1
 Manufacture date..... 2021, ISO week 37
 Filter driver..... None

EDID revision..... 1.3
 Input signal type..... Digital
 Color bit depth..... Undefined
 Display type..... RGB color
 Screen size..... 890 x 500 mm (40.2 in)
 Power management..... Not supported
 Extension blocs..... 1 (CEA/CTA-EXT)
 DDC/CI..... n/a

Color characteristics

Default color space..... Non-sRGB
 Display gamma..... 2.20
 Red chromaticity..... Rx 0.640 - Ry 0.330
 Green chromaticity..... Gx 0.300 - Gy 0.600
 Blue chromaticity..... Bx 0.150 - By 0.060
 White point (default)... Wx 0.313 - Wy 0.329
 Additional descriptors... None

Timing characteristics

Range limits..... Not available
 GTF standard..... Not supported
 Additional descriptors... Established timings
 Preferred timing..... Yes
 Native/preferred timing.. 1920x1080p at 50Hz (16:9)
 Modeline..... "1920x1080" 148.500 1920 2448 2492 2640 1080 1084 1089 1125 +hsync +vsync
 Detailed timing #1..... 1920x1200p at 50Hz (16:9)
 Modeline..... "1920x1200" 127.750 1920 1968 2000 2080 1200 1203 1209 1229 +hsync -vsync

Standard timings supported

640 x 480p at 60Hz - IBM VGA
 800 x 600p at 60Hz - VESA
 1024 x 768p at 60Hz - VESA
 1280 x 800p at 60Hz - VESA STD
 1600 x 900p at 60Hz - VESA STD
 1280 x 768p at 60Hz - VESA
 1280 x 960p at 60Hz - VESA

1280 x 1024p at 60Hz - VESA
 1360 x 768p at 60Hz - VESA
 1440 x 900p at 60Hz - VESA
 1400 x 1050p at 60Hz - VESA
 1650 x 1050p at 60Hz - VESA
 1600 x 1200p at 60Hz - VESA
 1920 x 1200p at 60Hz - VESA (RB)

EIA/CEA/CTA-861 Information

Revision number..... 3
 IT underscan..... Supported
 Basic audio..... Supported
 YCbCr 4:4:4..... Supported
 YCbCr 4:2:2..... Supported
 Native formats..... 3
 Detailed timing #1..... 1366x1536i at 60Hz (16:9)
 Modeline..... "1366x1536" 85.500 1366 1436 1579 1792 1536 1542 1548 1596 interlace +hsync +vsync

CE video identifiers (VICs) - timing/formats supported

1920 x 1080p at 50Hz - HDTV (16:9, 1:1) [Native]
 1920 x 1080p at 60Hz - HDTV (16:9, 1:1)
 1920 x 1080p at 25Hz - HDTV (16:9, 1:1)
 1920 x 1080p at 24Hz - HDTV (16:9, 1:1)
 1920 x 1080i at 50Hz - HDTV (16:9, 1:1)
 1920 x 1080i at 60Hz - HDTV (16:9, 1:1)
 1920 x 1080i at 60Hz - HDTV (16:9, 1:1)
 1920 x 1080i at 60Hz - HDTV (16:9, 1:1)
 1920 x 1080i at 60Hz - HDTV (16:9, 1:1)
 1920 x 1080i at 60Hz - HDTV (16:9, 1:1)
 1920 x 1080i at 60Hz - HDTV (16:9, 1:1)
 1920 x 1080i at 60Hz - HDTV (16:9, 1:1)
 1920 x 1080i at 60Hz - HDTV (16:9, 1:1)
 1920 x 1080i at 60Hz - HDTV (16:9, 1:1)
 1920 x 1080i at 60Hz - HDTV (16:9, 1:1)
 1280 x 720p at 60Hz - HDTV (16:9, 1:1)
 720 x 480p at 60Hz - EDTV (4:3, 8:9)
 720 x 576p at 50Hz - EDTV (4:3, 16:15)
 NB: NTSC refresh rate = (Hz*1000)/1001

CE audio data (formats supported)

LPCM 2-channel, 16-bit at 32/44/48 kHz

CE speaker allocation data

Channel configuration.... 2.0
 Front left/right..... Yes
 Front LFE..... No
 Front center..... No
 Rear left/right..... No
 Rear center..... No
 Front left/right center.. No
 Rear left/right center... No
 Rear LFE..... No

CE vendor specific data (VSDB)

IEEE registration number. 0x000C03
 CEC physical address..... 1.0.0.0
 Supports AI (ACP, ISRC).. No
 Supports 48bpp..... No
 Supports 36bpp..... Yes
 Supports 30bpp..... Yes
 Supports YCbCr 4:4:4..... Yes
 Supports dual-link DVI... No
 Maximum TMDS clock..... 300MHz
 Audio/video latency (p).. n/a
 Audio/video latency (i).. n/a
 HDMI video capabilities.. Yes
 EDID screen size..... No additional info
 3D formats supported..... Not supported
 Data payload..... 030C001000383C20008001020304

CE vendor specific data (VSDB)

IEEE registration number. 0xC45DD8
 CEC physical address..... 0.1.3.12
 Supports AI (ACP, ISRC).. Yes
 Supports 48bpp..... No
 Supports 36bpp..... No
 Supports 30bpp..... No
 Supports YCbCr 4:4:4..... No
 Supports dual-link DVI... No
 Maximum TMDS clock..... 0MHz

YCbCr 4:2:0 video data

Data payload..... 0E60616566

Default Parameters

KDS-EN7 Default Parameters

Page Name	Tab Name	Fields	Editable Field	Exportable Field	Default Values
Main	AV Routing	Channel ID	Yes	Yes	1
		Channel Name	Yes	Yes	KDS-EN7-xxxxxxxxxxxx "xxxxxxxxxxxx" is the device's MAC address.
		Volume	Yes	Yes	80
		Mute	Yes	Yes	Off
		Play/Stop	Yes	Yes	Play
AV Settings	Video	HDMI IN	Yes	Yes	On
		HDCP Method	Yes		Follow Output
		Mute	Yes		Off
		Maximum Bit Rate	Yes	Yes	Best Effort
		Maximum Video Frame Rate (%)	Yes	Yes	100%
	Audio	Analog Audio Direction IN/OUT	Yes	Yes	IN
		Audio Source Selection	Yes	Yes	Last Connected
		Audio Connection Guard Time (sec)	Yes	Yes	10
	EDID	EDID Lock	Yes	Yes	On
		EDID Mode	Yes		Passthrough
Device Settings	General	Host Name	Yes	Yes	KDS-EN7-xxxxxxxxxxxx ("xxxxxxxxxxxx" is the device's MAC address)
		Import/Export Device Settings	Yes	Yes	All including IP
		Front Panel Lock	Yes	Yes	Off
	Network	Control Port	Yes	Yes	Media
		Control 802.1Q	Yes	Yes	Off
		Control VLAN Tag	Yes	Yes	2
		Control CoS	Yes	Yes	7
		Control DSCP	Yes	Yes	56
		Control DHCP	Yes	Yes	On
		Stream Port	Yes	Yes	Media
		Stream 802.1Q	Yes	Yes	Off
		Stream VLAN Tag	Yes	Yes	2
		Stream CoS	Yes	Yes	5
		Stream DSCP	Yes	Yes	46
		Stream DHCP	Yes	Yes	On
		IP Casting Mode	Yes	Yes	Multicast
		Multicast Address Prefix	Yes	Yes	225
		TTL	Yes	Yes	64
	TCP Port	Yes	Yes	5,000	
	UDP Port	Yes	Yes	50,000	
	Time and Date	Date	Yes	Yes	01-01-1970
		Time	Yes	Yes	N/A
		Time Zone	Yes	Yes	00:00 Greenwich
		Use Time Server (NTP)	Yes	Yes	No
		Time Server Address	Yes	Yes	0.0.0.0
	Security	HTTPS Server	Yes	Yes	On; Internal Certificate
		IEE 802.1x Authentication	Yes	Yes	Off
	Users	Security Status	Yes	Yes	Off
		Inactivity auto-logout time	Yes	Yes	10
	Control	Settings	CEC Gateway	Yes	Yes
CEC Gateway HDMI Port			Yes	Yes	HDMI Input
RS232 Gateway			Yes	Yes	Enable
RS232 Port			Yes	Yes	5001
RS232 Baud rate			Yes	Yes	115200

Page Name	Tab Name	Fields	Editable Field	Exportable Field	Default Values
		RS232 Data Bits	Yes	Yes	8
		Parity	Yes	Yes	None
		Stop Bits	Yes	Yes	1
		IR Gateway	Yes	Yes	Enable
		IR Direction IN/OUT	Yes	Yes	Out

KDS-DEC7 Default Parameters

Page Name	Tab Name	Fields	Editable Field	Exportable Field	Default Values	
Main AV Settings	AV Routing	Input Selection	Yes	Yes	STREAM	
		Preview	Yes	Yes	Channel ID: #1 Channel Name: ch_001	
		Volume	Yes	Yes	80	
		Mute	Yes	Yes	Off	
		Play/Stop	Yes	Yes	Play	
	OSD Configuration	Menu Timeout (sec)	Yes	Yes	30	
		Channels per Page	Yes	Yes	5	
		Maximum Channels	Yes	Yes	999	
		Text Color	Yes	Yes	#ffffff (white)	
		Background Color	Yes	No	Xa9a9a9 (grey)	
		Transparency	Yes	Yes	50%	
		Hot Key	Yes	No	Caps Lock	
		Channel List	Yes	Yes	50 items display in the Channel list.	
		Menu Font Size	Yes	Yes	Medium	
		Menu Position	Yes	Yes	Top Left	
		Display Device Information	Yes	Yes	Off	
		Device Information Timeout (min)	Yes	Yes	2	
	KVM Combiner	Optimized for KVM	Yes	Yes	On	
		Overlay Line	Yes	Yes	Off	
		Roaming Master	Yes	Yes	Off	
		Overlay Position	Yes	Yes	Bottom	
	Video Wall	Horizontal Count	Yes	Yes	1	
		Vertical Count	Yes	Yes	1	
		Stretch Type	Yes	Yes	Fit In	
		Rotation	Yes	Yes	0	
		Bezel Viewable Width	Yes	Yes	0	
		Bezel Outside Width	Yes	Yes	0	
		Bezel Viewable Height	Yes	Yes	0	
		Bezel Viewable Height	Yes	Yes	0	
	Overlay	Image settings Align	Yes	Yes	Top Center	
		Image settings Transparency (%)	Yes	Yes	50	
		Show	Yes	Yes	unchecked	
		Text Settings Text	Yes	Yes	Hello KRAMER	
		Text Settings Size	Yes	Yes	Small	
		Text Settings Align	Yes	Yes	Top Center	
		Text Settings Color	Yes	Yes	#ffffff	
		Text Settings Transparency (%)	Yes	Yes	50	
		Show	Yes	Yes	Unchecked	
		Overlay Timeout	Yes	Yes	2 minutes	
	AV Settings	Video	Maximum Resolution	Yes	Yes	Pass Through
			Sleep (5V-off) Delay On Video Signal Loss (sec)	Yes	Yes	0

Page Name	Tab Name	Fields	Editable Field	Exportable Field	Default Values	
		Shutdown (CEC) Delay On Video Signal Loss (sec)	Yes	Yes	0	
		Wake-up (CEC) Delay on Video Signal Detection (sec)	Yes	Yes	0	
		Force RGB	Yes	Yes	Checked	
Device Settings	General	Host Name	Yes	Yes	KDS-DEC7-xxxxxxxxxxxx ("xxxxxxxxxxxx" is the device's MAC address)	
		Import/Export Device Settings	Yes	Yes	All including IP	
		Front Panel Lock	Yes	Yes	Off	
	Network	Control Port	Yes	Yes	Media	
		Control 802.1Q	Yes	Yes	Off	
		Control VLAN Tag	Yes	Yes	2	
		Control CoS	Yes	Yes	7	
		Control DSCP	Yes	Yes	56	
		Control DHCP	Yes	Yes	On	
		Stream Port	Yes	Yes	Media	
		Stream 802.1Q	Yes	Yes	Off	
		Stream VLAN Tag	Yes	Yes	2	
		Stream CoS	Yes	Yes	5	
		Stream DSCP	Yes	Yes	46	
		Stream DHCP	Yes	Yes	On	
		Daisy Chain	Yes	Yes	Off	
		IP Casting Mode	Yes	Yes	Multicast	
		Multicast Address Prefix	Yes	Yes	225	
		TTL	Yes	Yes	64	
		TCP Port	Yes	Yes	5,000	
		UDP Port	Yes	Yes	50,000	
	Control Port	Yes	Yes	Media		
	Time and Date	Date	Yes	Yes	01-01-1970	
		Time	Yes	Yes	N/A	
		Time Zone	Yes	Yes	00:00 Greenwich	
		Use Time Server (NTP)	Yes	Yes	No	
		Time Server Address	Yes	Yes	0.0.0.0	
	Security	HTTPS Server	Yes	Yes	On; Internal Certificate	
		IEE 802.1x Authentication	Yes	Yes	Off	
	Users	Security Status	Yes	Yes	Off	
		Inactivity auto-logout time	Yes	Yes	10	
	Control	Settings	CEC Gateway	Yes	Yes	Enable
			CEC Gateway HDMI Port	Yes	Yes	HDMI Input
RS232 Gateway			Yes	Yes	Enable	
RS232 Port			Yes	Yes	5001	
RS232 Baud rate			Yes	Yes	115200	
RS232 Data Bits			Yes	Yes	8	
Parity			Yes	Yes	None	
Stop Bits			Yes	Yes	1	
IR Gateway			Yes	Yes	Enable	
IR Direction IN/OUT	Yes	Yes	Out			

Protocol 3000

Kramer devices can be operated using Kramer Protocol 3000 commands sent via serial or Ethernet ports.

Understanding Protocol 3000

Protocol 3000 commands are a sequence of ASCII letters, structured according to the following.

- **Command format:**


Prefix	Command Name	Constant (Space)	Parameter(s)	Suffix
#	Command	_	Parameter	<CR>

- **Feedback format:**

Prefix	Device ID	Constant	Command Name	Parameter(s)	Suffix
~	nn	@	Command	Parameter	<CR><LF>

- **Command parameters** – Multiple parameters must be separated by a comma (.). In addition, multiple parameters can be grouped as a single parameter using brackets ([and]).
- **Parameters attributes** – Parameters may contain multiple attributes. Attributes are indicated with pointy brackets (<...>) and must be separated by a period (.).

The command framing varies according to how you interface with **KDS-EN7**. The following figure displays how the # command is framed using terminal communication software (such as Hercules):

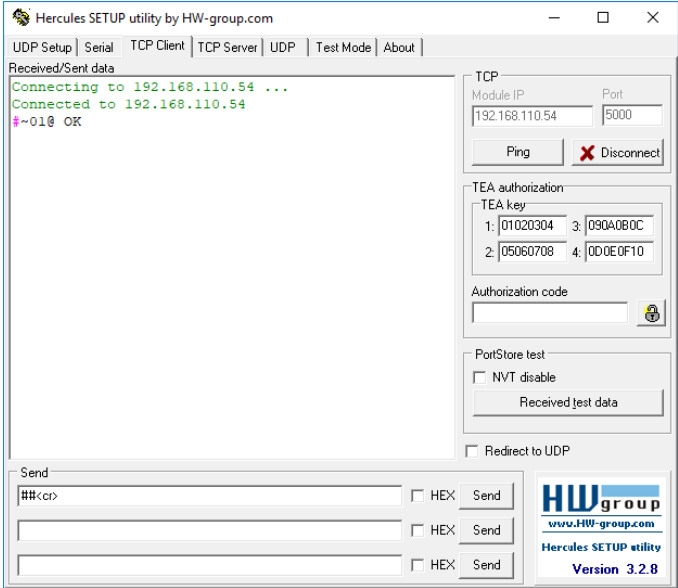

Protocol 3000 Commands

Function	Description	Syntax	Response	Parameters/Attributes	Example																																								
#	Protocol handshaking. NOTE: Validates the Protocol 3000 connection and gets the machine number. Step-in master products use this command to identify the availability of a device.	#<CR>	~nn@_OK<CR><LF>		#<CR>																																								
AV-SW-TIMEOUT	Set auto switching timeout.	#AV-SW-TIMEOUT _action,time_out<CR>	~nn@AV-SW-TIMEOUT _action,time_out<CR><LF>	action – video / audio switching actions 0 – Video signal lost 1 – New video signal detected 2 – Audio signal lost 3 – Audio signal detected 4 – Disable 5V on video output if no input signal detected 5 – Video cable unplugged 6 – Audio cable unplugged 7 – Video signal lost for signal routed as a result of a manual override action time_out - timeout in seconds, for different action it has different valid range: <table border="1"> <thead> <tr> <th>Action</th> <th>Model</th> <th>Range</th> <th>Default</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>KDS-SW2-EN7 KDS-SW3-EN7 WP-SW2-EN7 KDS-DEC7</td> <td>5-90</td> <td>10</td> </tr> <tr> <td>1</td> <td>KDS-SW2-EN7 KDS-SW3-EN7 WP-SW2-EN7 KDS-DEC7</td> <td>0-90</td> <td>0</td> </tr> <tr> <td>2</td> <td>KDS-EN7 KDS-SW2-EN7 KDS-SW3-EN7 WP-SW2-EN7</td> <td>5-90</td> <td>5</td> </tr> <tr> <td>3</td> <td>KDS-EN7 KDS-SW2-EN7 KDS-SW3-EN7 WP-SW2-EN7</td> <td>0-90</td> <td>0</td> </tr> <tr> <td>4</td> <td>KDS-SW2-EN7 KDS-SW3-EN7 WP-SW2-EN7</td> <td>5-60000</td> <td>900</td> </tr> <tr> <td>4</td> <td>KDS-DEC7 WP-DEC7</td> <td>0-90</td> <td>0</td> </tr> <tr> <td>5</td> <td>KDS-SW2-EN7 KDS-SW3-EN7 WP-SW2-EN7 KDS-DEC7</td> <td>0-90</td> <td>0</td> </tr> <tr> <td>6</td> <td>KDS-SW2-EN7 KDS-SW3-EN7 WP-SW2-EN7</td> <td>0-90</td> <td>0</td> </tr> <tr> <td>7</td> <td>KDS-SW2-EN7 KDS-SW3-EN7 WP-SW2-EN7 KDS-DEC7</td> <td>0-90</td> <td>10</td> </tr> </tbody> </table>	Action	Model	Range	Default	0	KDS-SW2-EN7 KDS-SW3-EN7 WP-SW2-EN7 KDS-DEC7	5-90	10	1	KDS-SW2-EN7 KDS-SW3-EN7 WP-SW2-EN7 KDS-DEC7	0-90	0	2	KDS-EN7 KDS-SW2-EN7 KDS-SW3-EN7 WP-SW2-EN7	5-90	5	3	KDS-EN7 KDS-SW2-EN7 KDS-SW3-EN7 WP-SW2-EN7	0-90	0	4	KDS-SW2-EN7 KDS-SW3-EN7 WP-SW2-EN7	5-60000	900	4	KDS-DEC7 WP-DEC7	0-90	0	5	KDS-SW2-EN7 KDS-SW3-EN7 WP-SW2-EN7 KDS-DEC7	0-90	0	6	KDS-SW2-EN7 KDS-SW3-EN7 WP-SW2-EN7	0-90	0	7	KDS-SW2-EN7 KDS-SW3-EN7 WP-SW2-EN7 KDS-DEC7	0-90	10	Set auto switching "Disable 5V on video output if no input signal detected" to 5 seconds: #AV-SW-TIMEOUT _4,5<CR>
Action	Model	Range	Default																																										
0	KDS-SW2-EN7 KDS-SW3-EN7 WP-SW2-EN7 KDS-DEC7	5-90	10																																										
1	KDS-SW2-EN7 KDS-SW3-EN7 WP-SW2-EN7 KDS-DEC7	0-90	0																																										
2	KDS-EN7 KDS-SW2-EN7 KDS-SW3-EN7 WP-SW2-EN7	5-90	5																																										
3	KDS-EN7 KDS-SW2-EN7 KDS-SW3-EN7 WP-SW2-EN7	0-90	0																																										
4	KDS-SW2-EN7 KDS-SW3-EN7 WP-SW2-EN7	5-60000	900																																										
4	KDS-DEC7 WP-DEC7	0-90	0																																										
5	KDS-SW2-EN7 KDS-SW3-EN7 WP-SW2-EN7 KDS-DEC7	0-90	0																																										
6	KDS-SW2-EN7 KDS-SW3-EN7 WP-SW2-EN7	0-90	0																																										
7	KDS-SW2-EN7 KDS-SW3-EN7 WP-SW2-EN7 KDS-DEC7	0-90	10																																										
AV-SW-TIMEOUT?	Get auto switching timeout.	#AV-SW-TIMEOUT? _action<CR>	~nn@AV-SW-TIMEOUT _action,time_out<CR><LF>	action – video / audio switching actions 0 – Video signal lost 1 – New video signal detected 2 – Audio signal lost 3 – Audio signal detected 4 – Disable 5V on video output if no input signal detected 5 – Video cable unplugged 6 – Audio cable unplugged 7 – Video signal lost for signal routed as a result of a manual override action time_out - timeout in seconds, for different action it has different valid range (see the table in AV-SW-TIMEOUT).	Get auto switching "Disable 5V on video output if no input signal detected" value: #AV-SW-TIMEOUT? _4<CR>																																								
BEACON-EN	Set beacon rate.	#BEACON-EN _port_id,status,rate<CR>	~nn@BEACON-EN _port_id,status,rate<CR><LF>	port_id – ID of the Ethernet port, and must be same as KDS-GW-ETH's netw_id 0 – Media Port 1 – Service Port status – Enable/Disable beacon. 0 – Disable (default) 1 – Enable rate – Repetition rate in seconds 1 – 1 second (minimum) 10 – 10 seconds (default) 1800 – 30 minutes (maximum)	Set beacon information: #BEACON-EN _0,1,10<CR>																																								
#BEACON-EN?	Get beacon rate.	#BEACON-EN?<CR>	~nn@BEACON-EN _port_id,status,rate<CR><LF>	ort_id – ID of the Ethernet port, and must be same as KDS-GW-ETH's netw_id 0 – Media Port 1 – Service Port status – Enable/Disable beacon. 0 – Disable (default) 1 – Enable rate – Repetition rate in seconds	Get beacon information: #BEACON-EN?<CR>																																								

Function	Description	Syntax	Response	Parameters/Attributes	Example
				1 – 1 second (minimum) 10 – 10 seconds (default) 1800 – 30 minutes (maximum)	
BEACON-INFO?	Get beacon information, including IP address, UDP control port, TCP control port, MAC address, model, name. NOTE: + There is no Set command. Get command initiates a notification. + 'port_id' must be same as '#KDS-GW-ETH' used	# BEACON-INFO? <u>port_id</u> <CR>	~nn@ BEACON-INFO <u>port_id</u> , <u>ip_string</u> , <u>udp_port</u> , <u>tcp_port</u> , <u>mac_address</u> , <u>model</u> , <u>name</u> <CR><LF>	<u>port_id</u> – ID of the Ethernet port 0 – Media Port 1 – Service Port <u>ip_string</u> – Dot-separated representation of the IP address <u>udp_port</u> – UDP control port <u>tcp_port</u> – TCP control port <u>mac_address</u> – Dash-separated mac address <u>model</u> – Device model <u>name</u> – Device name	Get beacon information: # BEACON-INFO? <u>0</u> <CR>
BUILD-DATE?	Get device build date	# BUILD-DATE? <CR>	~nn@ BUILD-DATE <u>date</u> , <u>time</u> <CR><LF>	<u>date</u> – Format: YYYY/MM/DD where YYYY = Year MM = Month DD = Day <u>time</u> – Format: hh:mm:ss where hh = hours mm = minutes ss = seconds	Get the device build date: # BUILD-DATE? <CR>
CEC-GW-PORT-ACTIVE	Set CEC Gateway mode - Whether CEC commands coming from HDMI stream to LAN	# CEC-GW-PORT-ACTIVE <u>gw_mode</u> <CR>	~nn@ CEC-GW-PORT-ACTIVE <u>gw_mode</u> <CR><LF>	<u>gw_mode</u> : 0 – CEC Passthrough mode 1 – CEC Gateway mode – command to be sent to HDMI Input. 2 – CEC Gateway mode – command to be sent to HDMI Output. (KDS-DEC7 & WP-DEC7) 3 – CEC Gateway mode – command to be sent to HDMI Loop Through (KDS-EN7, KDS-SW2-EN7)	Set CEC Gateway mode: # CEC-GW-PORT-ACTIVE <u>1</u> <CR>
CEC-GW-PORT-ACTIVE?	Get CEC Gateway mode - Whether CEC commands coming from HDMI stream to LAN	# CEC-GW-PORT-ACTIVE? <CR>	~nn@ CEC-GW-PORT-ACTIVE <u>gw_mode</u> <CR><LF>	<u>gw_mode</u> : 0 – CEC Passthrough mode 1 – CEC Gateway mode – command to be sent to HDMI Input. 2 – CEC Gateway mode – command to be sent to HDMI Output. (KDS-DEC7 & WP-DEC7) 3 – CEC Gateway mode – command to be sent to HDMI Loop Through (KDS-EN7, KDS-SW2-EN7)	Get CEC Gateway mode: # CEC-GW-PORT-ACTIVE? <CR>
CEC-NTFY	Notify about CEC command retrieved from bus. NOTE: Notification is sent to all com ports upon CEC message retrieval from CEC bus	N/A	~nn@ CEC-NTFY <u>port_index</u> , <u>len</u> ,< <u>cec_command</u> ...><CR><LF>	<u>port_index</u> – CEC port notifying the command <u>len</u> – 1-16 <u>cec_command</u> – CEC format command (in HEX format, no leading zeros, no '0x' prefix)	Notify about CEC command retrieved from bus: ~01@ CEC-NTFY <u>2,0F36</u> <CR>
CEC-NTFY-MODE	Set CEC notify work mode. NOTE: When it is disabled, all CEC message retrieval from CEC bus will not be reported to connected P3K clients.	# CEC-NTFY-MODE <u>mode</u> <CR>	~nn@ CEC-NTFY-MODE <u>mode</u> <CR><LF>	<u>mode</u> : 1 - Enable notifications (DEFAULT) 0 - Disable notifications	Disable the CEC-NTFY report: # CEC-NTFY-MODE <u>0</u> <CR>
CEC-NTFY-MODE?	Get CEC notify work mode. NOTE: When it is disabled, all CEC message retrieval from CEC bus will not be reported to connected P3K clients.	# CEC-NTFY-MODE? <CR>	~nn@ CEC-NTFY-MODE <u>mode</u> <CR><LF>	<u>mode</u> : 1 - Enable notifications (DEFAULT) 0 - Disable notifications	Get the CEC-NTFY-MODE: # CEC-NTFY-MODE? <CR>
CEC-SND	Send CEC command to port.	# CEC-SND <u>port_index</u> , <u>sn_id</u> , <u>cmd_name</u> , <u>cec_len</u> , <u>cec_command</u> <CR>	~nn@ CEC-SND <u>port_index</u> , <u>sn_id</u> , <u>cmd_name</u> , <u>cec_mode</u> <CR><LF>	<u>port_index</u> – CEC port transmitting the command (1 – number of ports) <u>sn_id</u> – serial number of command for flow control and response commands from device <u>cmd_name</u> – command name <u>cec_len</u> – 1-16 <u>cec_command</u> – CEC format command (in HEX format, no leading zeros, no '0x' prefix) <u>cec_mode</u> – CEC mode 0 – Sent (Only support Sent, other error feedback with common P3K error code)	Send CEC command to port: # CEC-SND <u>1,1,1,2,E004</u> <CR>
COM-ROUTE-ADD	Add a communication route tunnel connection	# COM-ROUTE-ADD <u>com_id</u> , <u>port_type</u> , <u>port_id</u> , <u>eth_rep_en</u> , <u>timeout</u> <CR>	~nn@ COM-ROUTE-ADD <u>com_id</u> , <u>port_type</u> , <u>port_id</u> , <u>eth_rep_en</u> , <u>timeout</u> <CR><LF>	<u>com_id</u> – Machine dependent (number of ports, only 1 accepted) <u>port_type</u> – TCP/UDP 0 – TCP <u>port_id</u> –port number (5000 to 5999) <u>eth_rep_en</u> – Ethernet Reply 0 – COM port does not send replies to new clients 1 – COM port sends replies to new clients.	Add a communication route tunnel connection: # COM-ROUTE-ADD <u>1,0,5001,1,1</u> <CR>



Function	Description	Syntax	Response	Parameters/Attributes	Example
				timeout – Keep alive timeout in seconds (1 to 3600)	
COM-ROUTE-REMOVE	Remove a communication route tunnel connection.	#COM-ROUTE-REMOVE <u>com_id</u> <CR>	~nn@COM-ROUTE-REMOVE <u>com_id</u> <CR><LF>	com_id – Machine dependent (number of ports, only 1 accepted)	Remove a communication route tunnel connection: #COM-ROUTE-REMOVE <u>1</u> <CR>
COM-ROUTE?	Get communication route tunnel connection state	#COM-ROUTE? <u>com_id</u> <CR>	~nn@COM-ROUTE <u>com_id</u> ,port_type,port_id,eth_rep_en,timeout<CR><LF>	com_id – Machine dependent (number of ports, only 1 accepted), * (get all route tunnels) port_type – TCP/UDP 0 – TCP 1 – UDP port_id – TCP/UDP port number eth_rep_en – Ethernet Reply 0 – COM port does not send replies to new clients 1 – COM port sends replies to new clients. timeout – Keep alive timeout in seconds (1 to 3600)	Get tunneling port routing for all route tunnels: #COM-ROUTE? <u>*</u> <CR>
CS-CONVERT	Set the "force RGB color space" convert mode. For KDS-DEC7	#CS-CONVERT <u>out_index</u> ,cs_mode<CR>	~nn@CS-CONVERT <u>out_index</u> ,cs_mode<CR><LF>	out_index – Number that indicates the specific output: 1-N (N= the total number of outputs) cs_mode – Index in resolution table: 0 – Color space pass (default) 1 – Enable "force RGB color space" convert mode	Enable "force RGB color space" convert mode for channel 1: #CS-CONVERT <u>1</u> ,1<CR>
CS-CONVERT?	Get the "force RGB color space" convert mode. For KDS-DEC7	#CS-CONVERT? <u>out_index</u> <CR>	~nn@CS-CONVERT <u>out_index</u> ,cs_mode<CR><LF>	out_index – Number that indicates the specific output: 1-N (N= the total number of outputs) cs_mode – Index in resolution table: 0 – Color space pass (default) 1 – Enable "force RGB color space" convert mode	Get the "force RGB color space" convert mode status for channel 1: #CS-CONVERT? <u>1</u> <CR>
EDID-ACTIVE	Activate specific EDID NOTE: only valid in custom mode. in other modes will return error. For KDS-EN7	#EDID-ACTIVE <u>Input_id</u> ,Index<CR>	~nn@EDID-ACTIVE <u>Input_id</u> ,Index<CR><LF>	Input_id – 1 Index - Index in EDID List	Set custom EDID #1 active on input 1; if not in CUSTOM mode, return ERROR #EDID-ACTIVE <u>1</u> ,1<CR>
EDID-ACTIVE?	Get current active EDID Note: only valid in custom mode. in other modes will return error. For KDS-EN7	#EDID-ACTIVE? <u>Input_id</u> <CR>	~nn@EDID-ACTIVE <u>Input_id</u> ,Index<CR><LF>	Input_id – 1 Index - Index in EDID List	Get active custom EDID index on Input 1; if not in CUSTOM mode, return ERROR #EDID-ACTIVE? <u>1</u> <CR>
EDID-LIST?	Get a list of currently existing EDID's (Get only) For KDS-EN7	#EDID-LIST?<CR>	~nn@EDID-LIST [port_idx,"name"],. . .<CR><LF>	port_idx – HDMI port index, only 1 is accepted. name – EDID file name	Get EDID list #EDID-LIST?<CR> Return: ~nn@EDID-LIST [0,"DEFAULT"],[2,"SONY"],[5,"PANASONIC"]<CR><LF>
EDID-MODE	Set EDID work mode. For KDS-EN7	#EDID-MODE <u>Input_id</u> ,Mode,Index<CR>	~nn@EDID-MODE <u>Input_id</u> ,Mode,Index<CR><LF>	Input_id – 1 Mode – - PASSTHRU (get from decoder) - CUSTOM - DEFAULT Index – CUSTOM should have an 'index' from which get from 'EDID-LIST?'	Set EDID to custom mode, idx is 1 #EDID-MODE <u>1</u> ,CUSTOM,1<CR>
EDID-MODE?	Get EDID work mode For KDS-EN7	#EDID-MODE? <u>Input_id</u> <CR>	~nn@EDID-MODE <u>Input_id</u> ,Mode,Index<CR><LF>	Input_id – 1 Mode – - PASSTHRU (get from decoder) - CUSTOM - DEFAULT Index – CUSTOM should have an 'index' from which get from 'EDID-LIST?'	Get EDID Mode #EDID-MODE? <u>1</u> <CR>
EDID-NET-SRC	Set MAC on net device to be EDID source It is only valid when EDID-MODE is set as PASSTHRU For KDS-EN7	#EDID-NET-SRC <u>input_id</u> ,src_ip<CR>	~nn@EDID-NET-SRC <u>input_id</u> ,src_ip<CR><LF>	input_id – 1 src_ip – DEC IP address	Set MAC on net device for Input 1 #EDID-NET-SRC <u>1</u> ,192.168.1.40<CR>
EDID-NET-SRC?	Get MAC on net device of EDID source For KDS-EN7	#EDID-NET-SRC? <u>input_id</u> <CR>	~nn@EDID-NET-SRC <u>input_id</u> ,src_ip<CR><LF>	input_id – 1 src_ip – DEC IP address	Get MAC on Net device for Input 1 #EDID-NET-SRC? <u>1</u> <CR>
EDID-RM	Remove custom EDID from EDID list Note: should return ERR if this EDID is in USE. For KDS-EN7	#EDID-RM <u>Index</u> <CR>	~nn@EDID-RM <u>Index</u> <CR><LF>	Index: 1..N - EDID index to remove which get from 'EDID-LIST?'. index 0 (Default) is not removable.	remove EDID from slot 3 and delete the file: #EDID-RM <u>3</u> <CR>
ETH-PORT	Set Ethernet port protocol. NOTE: If the port number you enter is already in use, an error is returned. The port number must be within the following range: 0-(2 ¹⁶ -1).	#ETH-PORT <u>port_type</u> ,port_id<CR>	~nn@ETH-PORT <u>port_type</u> ,port_id<CR><LF>	port_type – - TCP - UDP port_id – when port_type = TCP: 5000~5099 when port_type = UDP: 50000~50999	Set the Ethernet port protocol for TCP to port 5000: #ETH-PORT <u>TCP</u> ,5000<CR>
ETH-PORT?	Get Ethernet port protocol.	#ETH-PORT? <u>port_type</u> <CR>	~nn@ETH-PORT <u>port_type</u> ,port_id<CR><LF>	port_type – - TCP	Get the Ethernet port protocol for TCP:

Function	Description	Syntax	Response	Parameters/Attributes	Example
				- UDP port_id - when port_type = TCP: 5000-5099 when port_type = UDP: 50000-50999	#ETH-PORT? <u> </u> TCP<CR>
ETH-TUNNEL?	Get an open tunnel parameters.	#ETH-TUNNEL? <u> </u> tunnel_id<CR>	~nn@ETH-TUNNEL <u> </u> { [tunnel_id, com_id, port_type, port_id, eth_ip, remote_port_id, eth_rep_en, connection_type], ... }<CR><LF>	tunnel_id - Tunnel ID number, * (get all open tunnels) com_id - Machine dependent 1 - First COM Port port_type - TCP/UDP 0 - TCP port_id - TCP/UDP port number eth_ip - Client IP address remote_port_id - Remote port number eth_rep_en - Ethernet Reply 0 - COM port does not send replies to new clients 1 - COM port sends replies to new clients connection_type - Connection type 1 - wired connection	Get all open tunnel parameters: #ETH-TUNNEL? <u> </u> *<CR>
FACTORY	Reset device to factory default configuration NOTE: This command deletes all user data from the device. The deletion can take some time. Your device may require powering off and powering on for the changes to take effect.	#FACTORY<CR>	~nn@FACTORY <u> </u> ok<CR><LF>		Reset the device to factory default configuration: #FACTORY<CR>
GTW-MSG-CLEAR	Clear Control Gateway Messages Counter.	#GTW-MSG-CLEAR <u> </u> message_type<CR>	~nn@GTW-MSG-CLEAR <u> </u> message_type<CR><LF>	message_type - where 0 = ALL 1 = CEC 2 = IR 3 = RS232	Clear all Control Gateway Messages Counter #GTW-MSG-CLEAR <u> </u> 0<CR>
GTW-MSG-NUM?	Get Control Gateway Messages Counter from the device boot done. Add Recv_Count and Send_Count NOTE: <date> is legacy parameter, for KDS7 always be ignored	#GTW-MSG-NUM? <u> </u> message_type, date<CR>	~nn@GTW-MSG-NUM <u> </u> message_type, date, recv_counter, send_count<CR><LF>	message_type - where 1 = CEC 2 = IR 3 = RS232 date - Format: DD-MM-YYYY. Recv_counter - counter of receive messages Send_counter - counter of send messages	Get Control Gateway Messages Counter from certain period: #GTW-MSG-NUM? <u> </u> 1,01-01-1970<CR>
HDCP-MOD	Set HDCP mode. NOTE: Set HDCP working mode on the device input: HDCP supported - HDCP_ON [default]. HDCP not supported - HDCP OFF. For KDS-EN7	#HDCP-MOD <u> </u> in_index, mode<CR>	~nn@HDCP-MOD <u> </u> in_index, mode<CR><LF>	in_index - Number that indicates the specific input: 1-N (N= the total number of inputs) mode - HDCP mode: 0 - HDCP Off 1 - HDCP On	Set the input HDCP-MODE of IN 1 to Off: #HDCP-MOD <u> </u> 1,0<CR>
HDCP-MOD?	Get HDCP mode. NOTE: Set HDCP working mode on the device input: HDCP supported - HDCP_ON [default]. HDCP not supported - HDCP OFF. HDCP support changes following detected sink - MIRROR OUTPUT. For KDS-EN7	#HDCP-MOD? <u> </u> in_index<CR>	~nn@HDCP-MOD <u> </u> in_index, mode<CR><LF>	in_index - Number that indicates the specific input: 1-N (N= the total number of inputs) mode - HDCP mode: 0 - HDCP Off 1 - HDCP On 3 - HDCP Mirror Mode - used by KDS-7 decoder to allow an HDCP 2.2 source connected to the encoder to play on an HDCP 1.4 TV/display connected to the decoder.	Get the input HDCP-MODE of IN 1 HDMI: #HDCP-MOD <u> </u> <CR>
HDCP-OUT	Set output port HDCP mode	#HDCP-OUT <u> </u> in_index, mode<CR>	~nn@HDCP-OUT <u> </u> in_index, mode<CR><LF>	in_index - Number that indicates the specific output: 1-N (N= the total number of inputs) mode - HDCP mode: 0 - HDCP follow input 1 - HDCP follow output (Default)	Set the output HDCP of OUT 1 to follow input: #HDCP-OUT <u> </u> 1,0<CR>
HDCP-OUT?	Get output port HDCP mode	#HDCP-OUT? <u> </u> in_index<CR>	~nn@HDCP-OUT <u> </u> in_index, mode<CR><LF>	in_index - Number that indicates the specific output: 1-N (N= the total number of inputs) mode - HDCP mode: 0 - HDCP follow input 1 - HDCP follow output	Get the output HDCP of OUT 1: #HDCP-OUT? <u> </u> 1<CR>
HDCP-STAT?	Get HDCP signal status. NOTE: io_mode=1 - get the HDCP signal status of the sink device connected to the specified output. io_mode=0 - get the HDCP signal status of the source device connected to the specified input.	#HDCP-STAT? <u> </u> io_mode, in_index<CR>	~nn@HDCP-STAT <u> </u> io_mode, in_index, status<CR><LF>	io_mode - Input/Output 0 - Input 1 - Output io_index - Number that indicates the specific number of inputs or outputs (based on io_mode): 1-N (N=total number of inputs or outputs) status - Signal encryption status - valid values On/Off 0 - HDCP Off 1 - HDCP On	Get the output HDCP-STATUS of IN 1: #HDCP-STAT? <u> </u> 0,1<CR>
HELP	Get command list or help for specific command.	#HELP<CR>	1. Multi-line: ~nn@Device <u> </u> cmd_name, cmd_name<CR><LF>	cmd_name - Name of a specific command	Get the command list: #HELP<CR>

Function	Description	Syntax	Response	Parameters/Attributes	Example
				1 – Play 2 – Save config	
KDS-ACTION?	Get last action (state) performed by encoder/decoder.	#KDS-ACTION?<CR>	~nn@KDS-ACTION_ kds_mode<CR><LF>	kds_mode – Action (state) for encoder/decoder 0 – Stop 1 – Play 2 – Save config	Get the last action performed by the encoder/decoder: #KDS-ACTION?<CR>
KDS-AES-KEY	Set AES key	#KDS-AES-KEY_ key<CR>	~nn@KDS-AES-KEY_ key<CR><LF>	key – AES key for encoder/decoder, must be 16 bytes value represented in hex 0 – default key	Set AES key for the encoder/decoder: # KDS-AES-KEY_00112233445566778899AABBCCDDEEFF <CR>
KDS-AES-KEY?	Get AES key	#KDS-AES-KEY?<CR>	~nn@KDS-AES-KEY_ key<CR><LF>	key – AES key for encoder/decoder 0 – default key	Get AES key of the encoder/decoder: #KDS-AES-KEY?<CR>
KDS-AUD	Set audio source/destination. For KDS-EN7	#KDS-AUD_ mode<CR>	~nn@KDS-AUD_ mode<CR><LF>	mode – Encoder audio mode 0 – Digital (HDMI or USB-C) input 1 – Analog input 2 – None 4 – Dante – Only available on KDS-SW3-EN7	Set audio source/destination: #KDS-AUD_1<CR>
KDS-AUD?	Get audio source/destination. For KDS-EN7	#KDS-AUD?<CR>	~nn@KDS-AUD_ mode<CR><LF>	mode – Encoder audio mode 0 – Digital (HDMI or USB-C) input 1 – Analog input 2 – None 4 – Dante (Only available on KDS-SW3-EN7)	Get audio source/destination: #KDS-AUD?<CR>
KDS-CHANNEL-SELECT	Set decoder AV or IR channel. Add signal_type. For KDS-DEC7	#KDS-CHANNEL-SELECT_ [signal_type_1, signal_type_2...], ch_id<CR>	~nn@KDS-CHANNEL-SELECT_ [signal_type_1, signal_type_2...], ch_id<CR><LF>	<signal_type> – Signal ID attribute: VIDEO AUDIO IR RS232 USB CEC ch_id – Number that indicates the specific input 0-999. 0 is for cancel the channel select.	Tune the decoder to ch_id 1 #KDS-CHANNEL-SELECT_ [video,audio,rs232,ir,usb,cec],1<CR>
KDS-CHANNEL-SELECT?	Get decoder AV or IR channel. Add signal_type. For KDS-DEC7	#KDS-CHANNEL-SELECT?_ signal_type<CR>	~nn@KDS-CHANNEL-SELECT_ signal_type, ch_id<CR><LF>	<signal_type> – Signal ID attribute: VIDEO AUDIO IR RS232 USB CEC ch_id – Number that indicates the specific input 0-999. 0 is for cancel the channel select.	Get channel ID #KDS-CHANNEL-SELECT?_ video<CR>
KDS-DAISY-CHAIN	Set daisy chain mode. For KDS-DEC7	#KDS-DAISY-CHAIN_ daisy_mode<CR>	~nn@KDS-DAISY-CHAIN_ daisy_mode<CR><LF>	daisy_mode 0 – OFF (disables daisy chain) 1 – ON (enables daisy chain)	Enable DAISY mode: #KDS-DAISY-CHAIN_1<CR>
KDS-DAISY-CHAIN?	Get daisy chain mode. For KDS-DEC7	#KDS-DAISY-CHAIN?<CR>	~nn@KDS-DAISY-CHAIN_ daisy_mode<CR><LF>	daisy_mode 0 – OFF (disables daisy chain) 1 – ON (enables daisy chain)	Get DAISY mode: #KDS-DAISY-CHAIN?<CR>
KDS-DEFINE-CHANNEL	Set Encoder AV channel ID. For KDS-EN7	#KDS-DEFINE-CHANNEL_ ch_id<CR>	~nn@KDS-DEFINE-CHANNEL_ ch_id<CR><LF>	ch_id – Number that indicates the specific input 1-999.	Tune the encoder: #KDS-DEFINE-CHANNEL_1<CR>
KDS-DEFINE-CHANNEL?	Get Encoder AV channel ID. For KDS-EN7	#KDS-DEFINE-CHANNEL?<CR>	~nn@KDS-DEFINE-CHANNEL_ ch_id<CR><LF>	ch_id – Number that indicates the specific input 1-999.	Get channel ID: #KDS-DEFINE-CHANNEL?<CR>
KDS-GW-ETH	Set gateway network port	#KDS-GW-ETH_ gw_type, netw_id<CR>	~nn@KDS-GW-ETH_ gw_type, netw_id<CR><LF>	gw_type: 0 – Control 1 – Dante – Only available on KDS-SW3-EN7 netw_id – Network ID—the device network interface (if there are more than one): 0 – Media Port 1 – Service Port	Set Dante port to eth1: #KDS-GW-ETH_1,1<CR>
KDS-GW-ETH?	Get gateway network port.	#KDS-GW-ETH?_ gw_type<CR>	~nn@KDS-GW-ETH_ gw_type, netw_id<CR><LF>	gw_type: 0 – Control 1 – Dante – Only available on KDS-SW3-EN7 netw_id – Network ID—the device network interface (if there are more than one). 0 – Media Port 1 – Service Port	Get Dante port: #KDS-GW-ETH?_1<CR>
KDS-METHOD	Set unicast / multicast.	#KDS-METHOD_1<CR>	~nn@KDS-METHOD_ method<CR><LF>	method – Streaming method 1 Unicast 2 Multicast	Set current streaming method of encoder/decoder: #KDS-METHOD_1<CR>
KDS-METHOD?	Get unicast / multicast.	#KDS-METHOD?<CR>	~nn@KDS-METHOD_ method<CR><LF>	method – Streaming method 1 – Unicast 2 – Multicast	Get current streaming method of encoder/decoder: #KDS-METHOD<CR>
KDS-MULTICAST	Set multicast group address and TTL value.	#KDS-MULTICAST_ group_ip, ttl<CR>	~nn@KDS-MULTICAST_ group_ip, ttl<CR><LF>	group-ip – Multicast group IP for KDS7 is ignored, KDS7 managed multicast address automatically.	Set multicast group address and TTL value: #KDS-MULTICAST 0.0.0.0,64<CR>

Function	Description	Syntax	Response	Parameters/Attributes	Example
				ttl – Time to Live of the streamed packets.	
KDS-MULTICAST?	Get multicast group address and TTL value.	#KDS-MULTICAST?<CR>	~nn@KDS-MULTICAST_group_ip,ttl<CR><LF>	group-ip – Multicast group IP for KDS7 is ignored, KDS7 managed multicast address automatically, so always response 0.0.0.0 ttl – Time to Live of the streamed packets.	Get multicast group address and TTL value: #KDS-MULTICAST?<CR>
KDS-MULTICAST-PREFIX	Set prefix of multicast group address.	#KDS-MULTICAST-PREFIX_prefix<CR>	~nn@KDS-MULTICAST-PREFIX_prefix<CR><LF>	prefix – Prefix of multicast group IP for KDS7 224-239	Set multicast group address and TTL value: #KDS-MULTICAST-PREFIX 224<CR>
KDS-MULTICAST-PREFIX?	Get prefix of multicast group address.	#KDS-MULTICAST-PREFIX?<CR>	~nn@KDS-MULTICAST-PREFIX_prefix<CR><LF>	prefix – Prefix of multicast group IP for KDS7	Get multicast group address and TTL value: #KDS-MULTICAST-PREFIX?<CR>
KDS-OSD-DISPLAY	Set decoder Display Device Information On/Off For KDS-DEC7	#KDS-OSD-DISPLAY_mode<CR>	~nn@KDS-OSD-DISPLAY_mode<CR><LF>	mode – 0 - off 1 - on 2 - display now + on	Set OSD Display mode on: #KDS-OSD-DISPLAY_1<CR>
KDS-OSD-DISPLAY?	Get decoder Display Device Information status For KDS-DEC7	#KDS-OSD-DISPLAY?<CR>	~nn@KDS-OSD-DISPLAY_mode<CR><LF>	mode – 0 - off 1 - on 2 - display now + on	Get OSD display mode: #KDS-OSD-DISPLAY?<CR>
KDS-OSD-HOTKEY	Set decoder OSD hotkey. For KDS-DEC7	#KDS-OSD-HOTKEY_mode<CR>	~nn@KDS-OSD-HOTKEY_mode<CR><LF>	mode – 0 - CAP 1 - CTL 2 - TAB 3 - SHIFT	Set OSD hotkey to CTL: #KDS-OSD-HOTKEY_1<CR>
KDS-OSD-HOTKEY?	Get decoder OSD hotkey. For KDS-DEC7	#KDS-OSD-HOTKEY?<CR>	~nn@KDS-OSD-HOTKEY_mode<CR><LF>	mode – 0 - CAP 1 - CTL 2 - TAB 3 - SHIFT	Get OSD hotkey mode: #KDS-OSD-HOTKEY?<CR>
KDS-RATIO?	Get aspect ratio.	#KDS-RATIO?<CR>	~nn@KDS-RATIO_value<CR><LF>	value – Streamer Decoder Aspect Ratio width: height, for example "16:9"	Get Aspect Ratio: #KDS-RATIO?<CR>
KDS-RESOL?	Get actual AV stream resolution.	#KDS-RESOL?_io_mode,io_index,is_native<CR>	~nn@KDS-RESOL?_io_mode,io_index,is_native,resolution<CR><LF>	io_mode – Input/Output 0 - Input 1 - Output io_index – Number that indicates the specific input or output port: 1-N (N= the total number of input or output ports) is_native – Native resolution flag 0 - Off 1 - On resolution – Resolution index 0=No Signal 1=640x480p@59.94Hz/60Hz 2=720x480p@59.94Hz/60Hz 3=(Reserved) 4=1280x720p@59.94Hz/60Hz 5=1920x1080i@59.94Hz/60Hz 6=720(1440)x480i@59.94Hz/60Hz 7-15=(Reserved) 16=1920x1080p@59.94Hz/60Hz 17=720x576p@50Hz 18=(Reserved) 19=1280x720p@50Hz 20=1920x1080i@50Hz 21-30=(Reserved) 31=1920x1080p@50Hz 32=1920x1080p@23.97Hz/24Hz 33=1920x1080p@25Hz 34=1920x1080p@29.97Hz/30Hz 35-38=(Reserved) 39=1920x1080i@50Hz 40-64=(Reserved) 65=800x600p@60Hz 66=1024x768@60Hz 67=1280x768p@60Hz 68=1280x1024p@60Hz 69=1600x1200p@60Hz 70=1680x1050p@60Hz 71=1920x1200@60Hz 72=3840x2160p@24Hz 73=3840x2160p@25Hz 74=3840x2160p@30Hz 75=3840x2160p@50Hz 76=3840x2160p@60Hz 77-97=(Reserved) 98=4096x2160p@24Hz 99=4096x2160p@25Hz 100=4096x2160p@30Hz 101=4096x2160p@50Hz 102=4096x2160p@60Hz 103-1000=(Reserved)	

Function	Description	Syntax	Response	Parameters/Attributes	Example
				1000=640x350@85Hz 1001=640x400p@85Hz 1002=720x400p@85Hz 1003=(Reserved) 1004=640x480p@72Hz 1005=640x480p@75Hz 1006=640x480p@85Hz 1007=(Reserved) 1008=(Reserved) 1009=800x600p@72Hz 1010=800x600p@75Hz 1011=800x600p@85Hz 1012=848x480p@60Hz 1013=1024x768i@43Hz 1014=(Reserved) 1015=1024x768p@70Hz 1016=1024x768p@75Hz 1017=1024x768p@85Hz 1018=1152x864p@75Hz 1019=(Reserved) 1020=(Reserved) 1021=1280x768p@85Hz 1022=1280x800p@60Hz 1023=1280x800p@75Hz 1024=1280x800p@85Hz 1025=1280x800p@120Hz 1026=1280x960p@60Hz 1027=1280x960p@85Hz 1028=(Reserved) 1029=1280x1024p@75Hz 1030=1280x1024p@85Hz 1031=1360x768p@60Hz 1032=1366x768p@60Hz 1033=1400x1050p@60Hz 1034=1400x1050p@75Hz 1035=1400x1050p@85Hz 1036=1440x900p@60Hz 1037=1440x900p@75Hz 1038=1440x900p@85Hz 1039=1600x900p@60Hz 1040=(Reserved) 1041=1600x1200p@65Hz 1042=(Reserved) 1043=1600x1200p@75Hz 1044=1600x1200p@85Hz 1045=(Reserved) 1046=1680x1050p@75Hz 1047=1680x1050p@85Hz 1048=1792x1344p@60Hz 1049=1792x1344p@75Hz 1050=1856x1392p@60Hz 1051=1856x1392p@75Hz 1052=1920x1200p@50Hz 1053=(Reserved) 1054=1920x1200p@75Hz 1055=1920x1200p@85Hz 1056=1920x1440p@60Hz 1057=1920x1440p@75Hz 1058=(Reserved) 1059=2048x1152p@60Hz 1060=2560x1600p@60Hz 1061=2560x1600p@75Hz 1062=2560x1600p@80Hz	
KDS-SCALE	Set scaling mode Add res_type. For KDS-DEC7	#KDS- SCALE _value, res_type<CR>	~nn@KDS- SCALE _value, res_type<CR> <LF>	value – Streamer Decoder Scaling Mode 0 - Pass Thru 1 - Scaling 2 - Based on EDID res_type[option] –Resolution index 0-3=(Reserved) 4=1280x720p@59.94Hz/60Hz 5-15=(Reserved) 16=1920x1080p@59.94Hz/60Hz 17-30=(Reserved) 31=1920x1080p@50Hz 32-65=(Reserved) 66=1024x768@60Hz 67=1280x768p@60Hz 68=1280x1024p@60Hz 69=(Reserved) 70=1680x1050@60 71=1920x1200@60 72=(Reserved) 73=3840x2160p@25Hz 74=3840x2160p@30Hz 75-1030=(Reserved) 1031=1360x768p@60Hz 1032-1038=(Reserved) 1039=1600x900p@60Hz	Set scale to scaling, resolution is 1080P60: #KDS-SCALE _1,16<CR>

  Function	Description	Syntax	Response	Parameters/Attributes	Example												
				1040-9999=(Reserved)													
KDS-SCALE?	Get scaling mode Add res_type. For KDS-DEC7	#KDS-SCALE?<CR>	~nn@KDS-SCALE_value,res_type<CR><LF>	value – Streamer Decoder Scaling Mode 0 - Pass Thru 1 - Scaling 2 - Based on EDID res_type[option] – res_type refer to #KDS-SCALE	Get scaling mode: #KDS-SCALE?<CR>												
KDS-VLAN-TAG	Set vlan tag of gateway port.	#KDS-VLAN-TAG_gw_type,tag_id<CR>	~nn@KDS-VLAN-TAG_gw_type,tag_id<CR><LF>	gw_type – 0 - Control 1 - Dante – Only available on KDS-SW3-EN7 tag_id – vlan tag (1 to 4093) 1 - No VLAN tag	Set Dante vlan tag: #KDS-VLAN-TAG_1,33<CR>												
KDS-VLAN-TAG?	Get vlan tag of gateway port.	#KDS-VLAN-TAG?_gw_type<CR>	~nn@KDS-VLAN-TAG_gw_type,tag_id<CR><LF>	gw_type – 0 - Control 1 - Dante – Only available on KDS-SW3-EN7 tag_id – vlan tag (1 to 4093) 1 - No VLAN tag	Get Dante vlan tag: #KDS-VLAN-TAG?_1<CR>												
KDS-SLEEP-IMAGE	Set sleep image mode of decoder. For KDS-DEC7	#KDS-SLEEP-IMAGE_mode<CR>	~nn@KDS-SLEEP-IMAGE_mode<CR><LF>	mode – sleep image mode for decoder 0 - Off 1 - On	Stop the Sleep Image: #KDS-SLEEP-IMAGE_0<CR>												
KDS-SLEEP-IMAGE?	Get sleep image mode of decoder. For KDS-DEC7	#KDS-SLEEP-IMAGE?<CR>	~nn@KDS-SLEEP-IMAGE_mode<CR><LF>	mode – sleep image mode for decoder 0 - Off 1 - On	Get the Sleep Image mode: #KDS-SLEEP-IMAGE?<CR>												
KDS-VW-BEZEL	Set KDS7 Video Wall bezel compensation. For KDS-DEC7	#KDS-VW-BEZEL_vw,ow,vh,oh<CR>	~nn@KDS-VW-BEZEL_vw,ow,vh,oh<CR><LF>	 vw – 0~100000 ow – 0~100000 vh – 0~100000 oh – 0~100000	Set bezel compensation: #KDS-VW-BEZEL_12210,12310,6860,6960<CR>												
KDS-VW-BEZEL?	Get KDS7 Video Wall bezel compensation. For KDS-DEC7	#KDS-VW-BEZEL?<CR>	~nn@KDS-VW-BEZEL_vw,ow,vh,oh<CR><LF>	 vw – 0~100000 ow – 0~100000 vh – 0~100000 oh – 0~100000	Get bezel compensation: #KDS-VW-BEZEL?<CR>												
KDS-VW-PATTERN	Set test pattern mode of video wall. For KDS-DEC7	#KDS-VW-PATTERN_mode<CR>	~nn@KDS-VW-PATTERN_mode<CR><LF>	Mode – 0 - OFF (Disable test pattern) 1 - On (Enable test pattern)	Set video wall test pattern on: #KDS-VW-PATTERN_1<CR>												
KDS-VW-PATTERN?	Get test pattern mode of video wall. For KDS-DEC7	#KDS-VW-PATTERN?<CR>	~nn@KDS-VW-PATTERN_mode<CR><LF>	Mode – 0 - OFF (Disable test pattern) 1 - On (Enable test pattern)	Get video wall test pattern on: #KDS-VW-PATTERN?<CR>												
LDFW	Load new firmware file. NOTE: In most devices firmware data is saved to flash memory, but the memory does not update until receiving the "UPGRADE" command and is restarted.	Step 1: #LDFW_size<CR> Step 2: If ready was received, send FIRMWARE_DATA	Response 1: ~nn@LDFW_size ready<CR><LF> Response 2: ~nn@LDFW_size_ok<CR><LF>	size – Size of firmware data that is sent. firmware_data – HEX or KFW file in protocol packets Using the Packet Protocol Send a command: LDRV, LOAD, IROUT, LDEDID Receive Ready or ERR### If Ready: a. Send a packet, b. Receive OK on the last packet, c. Receive OK for the command. Packet structure: Packet ID (1, 2, 3...) (2 bytes in length) Length (data length + 2 for CRC) – (2 bytes in length) Data (data length -2 bytes) CRC – 2 bytes <table border="1" data-bbox="938 1653 1225 1706"> <tr> <td>01</td> <td>02</td> <td>03</td> <td>04</td> <td>05</td> <td></td> </tr> <tr> <td>Packet ID</td> <td>Length</td> <td>Data</td> <td>Data</td> <td>CRC</td> <td></td> </tr> </table> Response: ~nnnn_ok<CR><LF> (Where NNNN is the received packet ID in ASCII hex digits.)	01	02	03	04	05		Packet ID	Length	Data	Data	CRC		
01	02	03	04	05													
Packet ID	Length	Data	Data	CRC													
LOCK-EDID	Lock last read EDID. For KDS-EN7	#LOCK-EDID_in_index,lock_mode<CR>	~nn@LOCK-EDID_in_index,lock_mode<CR><LF>	in_index – 1 lock_mode – On/Off 0 - Off unlocks EDID. 1 - On locks EDID.	Lock the last read EDID from the HDMI In 1 input: #LOCK-EDID_1,1<CR>												
LOCK-EDID?	Get EDID lock state. For KDS-EN7	#LOCK-EDID?_in_index<CR>	~nn@LOCK-EDID_in_index,lock_mode<CR><LF>	in_index – 1 lock_mode – On/Off 0 - Off unlocks EDID. 1 - On locks EDID.	Get EDID lock state for Input 1: #LOCK-EDID?_1<CR>												
LOCK-FP	Lock the front panel. For KDS-EN7	#LOCK-FP_lock/unlock<CR>	~nn@LOCK-FP_lock/unlock<CR><LF>	Lock/Unlock – On/Off 0 - (Off) Unlocks Front Panel. 1 - (On) Locks Front Panel.	Unlock front panel: #LOCK-FP_0<CR>												

Function	Description	Syntax	Response	Parameters/Attributes	Example
LOCK-FP?	Get the front panel lock state. For KDS-EN7	# LOCK-FP? <CR>	~nn@ LOCK-FP_ lock/unlock<CR><LF>	Lock/Unlock – On/Off 0 - (Off) Unlocks Front Panel. 1 - (On) Locks Front Panel.	Get the front panel lock state: # LOCK-FP? <CR>
LOG-ACTION	Reset events log.	# LOG- ACTION_ action,period<CR>	~nn@ LOG- ACTION_ action,period<CR><LF>	action – One of 1 - Start, start logging 2 - Pause, pause logging but keep log content 3 - Resume, resume the logging 4 - Reset, clear all current logs, keep logging period – Relevant for "start"(be ignored by KDS7 Devices) 1 - Keep current 2 - Daily 3 - Weekly (default)	Reset events log: # LOG-ACTION_ 4,1<CR>
LOG-ACTION?	Get log state.	# LOG-ACTION? <CR>	~nn@ LOG- ACTION_ action,period<CR><LF>	action – One of 1 - Start, start logging 2 - Pause, pause logging but keep log content 3 - Resume, resume the logging 4 - Reset, clear all current logs, keep logging period – Relevant for "start"(be ignored by KDS7 Devices) 1 - Keep current 2 - Daily 3 - Weekly (default)	Get log state: # LOG-ACTION? <CR>
LOG-TAIL?	Get the last "n" lines of message logs. NOTE: Used for advanced troubleshooting. Helps find error root causes and gets details not displayed in the error code number.	# LOG-TAIL? _line_num<CR>	Get: ~nn@ LOG-TAIL nn<CR><LF> Line content_#1<CR><LF> Line content_#2<CR><LF> Etc...	line_num – Optional, default line_num is 10	Get the last "2" lines of message logs: # LOG-TAIL? _2<CR>
LOGIN	Set protocol permission. NOTE: The permission system works only if security is enabled with the "SECUR" command. LOGIN allows the user to run commands with an End User or Administrator permission level. When the permission system is enabled, LOGIN enables running commands with the User or Administrator permission level. When set, login must be performed upon each connection. It is not mandatory to enable the permission system in order to use the device. In each device, some connections allow logging in to different levels. Some do not work with security at all. Connection may logout after timeout.	# LOGIN_ login_level,password<CR>	~nn@ LOGIN_ login_level,password_ok<CR><LF>	login_level – Level of permissions required (User or Admin, only 'admin' is acceptable on KDS7 devices). password – Predefined password (by PASS command). Default password is 'admin'	Set the protocol permission level to Admin (when the password defined in the PASS command is 33333): # LOGIN_ admin,33333<CR>
LOGIN?	Get current protocol permission level. NOTE: The permission system works only if security is enabled with the "SECUR" command. For devices that support security, LOGIN allows the user to run commands with an End User or Administrator permission level. In each device, some connections allow logging in to different levels. Some do not work with security at all. Connection may logout after timeout.	# LOGIN? <CR>	~nn@ LOGIN_ login_level<CR>><LF>	login_level – Level of permissions required (User or Admin, only 'admin' is acceptable on KDS7 devices)	Get current protocol permission level: # LOGIN? <CR>
LOGOUT	Cancel current permission level. NOTE: Logs out from End User or Administrator permission levels to Not Secure.	# LOGOUT <CR>	~nn@ LOGOUT_ ok<CR><LF>		# LOGOUT <CR>
LOGOUT-TIMEOUT	Set inactivity auto-logout time.	# LOGOUT-TIMEOUT_ time<CR>	~nn@ LOGOUT- TIMEOUT_ time<CR><LF>	time – minutes of logout time	Set Inactivity auto-logout time to 10: # LOGOUT-TIMEOUT_ 10<CR>
LOGOUT-TIMEOUT?	Get inactivity auto-logout time.	# LOGOUT-TIMEOUT? <CR>	~nn@ LOGOUT- TIMEOUT_ time<CR><LF>	time – minutes of logout time	Get Inactivity auto-logout time: # LOGOUT-TIMEOUT? <CR>
MODEL?	Get device model. NOTE: This command identifies equipment connected to KDS-EN7	# MODEL? <CR>	~nn@ MODEL_ model_name<CR><LF>	model_name – String of up to 24 printable ASCII chars	Get the device model: # MODEL? <CR>

Function	Description	Syntax	Response	Parameters/Attributes	Example
	and notifies of identity changes to the connected equipment. The Matrix saves this data in memory to answer REMOTE-INFO requests.				
NAME	Set machine or DANTE (DNS) name. NOTE: The machine name is not the same as the model name. The machine name is used to identify a specific machine or a network in use (with DNS feature on).	#NAME_ interface_id,host_name<CR>	~nn@NAME_ interface_id,host_name<CR><LF>	interface_id – 0 – machine name 1 – dante name – Only available on KDS-SW3-EN7 host_name – String of up to 24 alphanumeric chars (can include hyphen, underscore, not at the beginning or end)	Set the machine DNS name of the device to room-442: #NAME_0,room-442<CR>
NAME?	Get machine or DANTE (DNS) name. NOTE: The machine name is not the same as the model name. The machine name is used to identify a specific machine or a network in use (with DNS feature on).	#NAME?_ interface_id<CR>	~nn@NAME_ interface_id,host_name<CR><LF>	interface_id – 0 – machine name 1 – dante name – Only available on KDS-SW3-EN7 host_name – String of up to 24 alphanumeric chars (can include hyphen, not at the beginning or end)	Get the DNS name of the device: #NAME?_0<CR>
NAME-RST	Reset machine (DNS) name to factory default. NOTE: Factory default of machine (DNS) name is "KRAMER_" + 4 last digits of device serial number.	#NAME-RST<CR>	~nn@NAME-RST_ OK<CR><LF>		Reset the machine name (S/N last digits are 0102): #NAME-RST<CR>
NET-CONFIG	Set a network configuration. NOTE: For Backward compatibility, the id parameter can be omitted. In this case, the Network ID, by default, is 0, which is the Ethernet control port. NOTE: If the gateway address is not compliant to the subnet mask used for the host IP, the command will return an error. Subnet and gateway compliancy specified by RFC950. NOTE: This set the device to DHCP OFF automatically.	#NET-CONFIG_ netw_id,net_ip,net_mask,gateway<CR>	~nn@NET-CONFIG_ netw_id,net_ip,net_mask,gateway<CR><LF>	netw_id – Network ID – ID of the Ethernet port: 0 - Media Port 1 - Service Port 2 - DANTE Port net_ip – Network IP net_mask – Network mask gateway – Network gateway	Set the device network parameters to IP address 192.168.113.10, net mask 255.255.0.0, and gateway 192.168.0.1: #NET-CONFIG_0,192.168.113.10,255.255.0.0,192.168.0.1<CR>
NET-CONFIG?	Get a network configuration.	#NET-CONFIG?_ netw_id<CR>	~nn@NET-CONFIG_ netw_id,net_ip,net_mask,gateway<CR><LF>	netw_id – Network ID – ID of the Ethernet port: 0 - Media Port 1 - Service Port 2 - DANTE Port net_ip – Network IP net_mask – Network mask gateway – Network gateway	Get network configuration: #NET-CONFIG?_0<CR>
NET-DHCP	Set DHCP mode. NOTE: Only 1 is relevant for the mode value. To disable DHCP, the user must configure a static IP address for the device. Connecting Ethernet to devices with DHCP may take more time in some networks. To connect with a randomly assigned IP by DHCP, specify the device DNS name (if available) using the NAME command. You can also get an assigned IP by direct connection to USB or RS-232 protocol port, if available. For proper settings consult your network administrator. NOTE: For Backward compatibility, the id parameter can be omitted. In this case, the Network ID, by default, is 0, which is the Ethernet control port.	#NET-DHCP_ netw_id,dhcp_state<CR>	~nn@NET-DHCP_ netw_id,dhcp_state<CR><LF>	netw_id – Network ID – ID of the Ethernet port: 0 - Media Port 1 - Service Port 2 - DANTE Port dhcp_state – 1 - Try to use DHCP. (If unavailable, use the IP address set by the factory or the net-ip command).	Enable DHCP mode for port 1, if available: #NET-DHCP_1,1<CR>
NET-DHCP?	Get DHCP mode NOTE: For Backward compatibility, the id parameter can be omitted. In this case, the Network ID, by default, is 0, which is the Ethernet control port.	#NET-DHCP?_ netw_id<CR>	~nn@NET-DHCP_ netw_id,dhcp_state<CR><LF>	netw_id – Network ID – ID of the Ethernet port: 0 - Media Port 1 - Service Port 2 - DANTE Port dhcp_state – 1 - Try to use DHCP. (If unavailable, use the IP address set by the factory or the net-ip command).	Get DHCP mode for port 1, if available: #NET-DHCP?_1<CR>
NET-GATE?	Get gateway IP.	#NET-GATE?<CR>	~nn@NET-GATE_ ip_address<CR><LF>	ip_address – Format: xxx.xxx.xxx.xxx	Get gateway IP: #NET-GATE?<CR>

Function	Description	Syntax	Response	Parameters/Attributes	Example
NET-IP?	Get a network IP address. This is an UDP protocol only.	#NET-IP?<CR>	~nn@NET- IP_net_ip<CR><LF>	net_ip - Network IP	Get network ip address: #NET-IP?<CR>
NET-MAC?	Get MAC address.	#NET-MAC?<CR>	~nn@NET-MAC_mac_address< CR><LF>	mac_address - Unique MAC address. Format: XX-XX-XX-XX-XX-XX where X is hex digit	#NET-MAC?<CR>
NET-MASK?	Get subnet mask.	#NET-MASK?<CR>	~nn@NET- MASK_net_mask<CR><LF>	net_mask - Format: xxx.xxx.xxx.xxx	Get subnet mask: #NET-MASK?<CR>
NET-SRV-802-1Q	Set a network service 802.1Q configuration.	#NET-SRV-802- 1Q_service_id,mode,vlan_id,c os<CR>	~nn@NET-SRV-802- 1Q_service_id,mode,vlan_ id,cos<CR><LF>	service_id - ID of the service: 0 - Control 1 - Stream 2 - Dante mode - enable 802.1Q 0 - off (When mode is Off, vlan_id and cos will be ignored) 1 - on vlan_id - 2~4000 (Optional, when mode is 1, must be provided) cos - 0~7 (Optional, when mode is 1, must be provided)	Set Control service 802.1Q enable with VLAN ID 10, Cos 6 #NET-802-1Q_0,1,10,6<CR> Set Stream service 802.1Q Off #NET-SRV-802-1Q_0,0<CR>
NET-SRV-802-1Q?	Get a network service 802.1Q configuration.	#NET-SRV-802- 1Q?_service_id<CR>	~nn@NET-SRV-802- 1Q_service_id,mode,vlan_ id,cos<CR><LF>	service_id - ID of the service: 0 - Control 1 - Stream 2 - Dante mode - enable 802.1Q 0 - off (When mode is Off, vlan_id and cos will be ignored) 1 - on vlan_id - 2~4000 (Optional, when mode is 1, must be provided) cos - 0~7 (Optional, when mode is 1, must be provided)	Get Control service 802.1Q #NET-SRV-802-1Q?_0<CR>
NET-SRV-DSCP	Set a network service DSCP configuration.	#NET-SRV- DSCP_service_id,dscp<CR>	~nn@NET-SRV- DSCP_service_id,dscp<CR> <LF>	service_id - ID of the service: 0 - Stream 1 - Control 2 - Dante (Can't be changed) dscp - 0~63	Set Control service DSCP as 63 #NET-SRV-DSCP_0,63<CR>
NET-SRV-DSCP?	Get a network service DSCP configuration.	#NET-SRV- DSCP?_service_id<CR>	~nn@NET-SRV- DSCP_service_id,dscp<CR> <LF>	service_id - ID of the service: 0 - Stream 1 - Control 2 - Dante dscp - 0~63	Get Control service DSCP #NET-SRV-DSCP?_0<CR>
NET-STAT?	Get net connection list of this machine. NOTE: The response is returned in one line and terminated with<CR><LF>. The response format lists signal IDs separated by commas. This is an Extended Protocol 3000 command.	#NET-STAT?<CR>	~nn@NET- STAT_[(<port_type>:<port_index>,<client_ip>:<client_port>),state],...<CR><LF>	port_type - TCP/UDP 0 - TCP 1 - UDP port_index - Device port client_ip - Dot-separated representation of the IP address client_port - Client port state - listen or established	Get net connection list of this machine: #NET-STATE?<CR> ~01@NETSTAT_[(TCP:80.0.0.0:0.0),LISTEN],[TCP:5000,0.0:0.0),LISTEN],[TCP:80,192.168.114.3:52400),ESTABLISHED],[TCP:5000,192.168.1.100:51647),ESTABLISHED]<CR><LF>
PASS	Set password for login level. The default password is "admin".	#PASS_login_level,password< CR>	~nn@PASS_login_level,pas sword<CR><LF>	login_level - Level of login to set (admin support only). password - Password for the login_level. 8 to 24 characters (letters, numbers, and symbols without spaces or commas), at least including one number, one symbols without spaces or commas, one uppercase letter and one lowercase letter.	Set the password for the admin protocol permission level to 33333: #PASS_admin,33333<CR>
PASS?	Get password for login level. The default password is "admin".	#PASS?_login_level<CR>	~nn@PASS_login_level,pas sword<CR><LF>	login_level - Level of login to set (End User or Administrator). password - Password for the login_level.	Get the password for the admin protocol permission level: #PASS?_admin<CR>
PORT-DIRECTION	Set port direction as input or output.	#PORT- DIRECTION_<direction_type>.< port_format>.<port_index>.<s ignal_type>,direction<CR>	~nn@PORT- DIRECTION_<direction_typ e>.<port_format>.<port_in dex>.<signal_type>,direct ion<CR><LF>	The following attributes comprise the signal ID: <direction_type> - Direction of the port: IN - Input OUT - Output BOTH - Bi-directional <port_format> - Type of signal on the port: ANALOG_AUDIO IR <port_index> - The port number as printed on the front or rear panel <signal_type> - Signal ID attribute: AUDIO IR <direction> - Direction of the port: IN - Input OUT - Output	Set audio analog port direction as input: #PORT- DIRECTION_both.analog.1.au dio,IN<CR>
PORT-DIRECTION?	Get port direction.	#PORT- DIRECTION?_<direction_type>. <port_format>.<port_index>.< signal_type><CR>	~nn@PORT- DIRECTION_<direction_typ e>.<port_format>.<port_in dex>.<signal_type><CR>	The following attributes comprise the signal ID: <direction_type> - Direction of the port:	Get audio analog port direction: #PORT- DIRECTION?_both.analog.1.a udio<CR>

Function	Description	Syntax	Response	Parameters/Attributes	Example
			<pre> dex>.<signal_type>,direction<CR><LF> </pre>	IN – Input OUT – Output BOTH – Bi-directional <port_format> – Type of signal on the port: ANALOG_AUDIO IR <port_index> – The port number as printed on the front or rear panel <signal_type> – Signal ID attribute: AUDIO IR <direction> – Direction of the port: IN – Input OUT – Output	
PORTS-LIST?	Get the port list of this machine. NOTE: The response is returned in one line and terminated with <CR><LF>. The response format lists port IDs separated by commas. This is an Extended Protocol 3000 command.	#PORTS-LIST?<CR>	<pre> ~nn@PORTS-LIST_<direction_type>.<port_format>.<port_index>,<,>,<CR><LF> </pre>	The following attributes comprise the port ID: <direction_type> – Direction of the port: IN OUT BOTH <port_format> – Type of signal on the port: HDMI ANALOG_AUDIO RS-232 IR USB_A USB_B USB_C STREAM <port_index> – The port number as printed on the front or rear panel	Get the ports list: #PORTS-LIST?<CR>
PROT-VER?	Get device protocol version.	#PROT-VER?<CR>	<pre> ~nn@PROT-VER_3000:version<CR><LF> </pre>	3000: – Prefix version – XX.XX where X is a decimal digit	Get the device protocol version: #PROT-VER?<CR>
RESET	Reset device NOTE: To avoid locking the port due to a USB bug in Windows, disconnect USB connections immediately after running this command. If the port was locked, disconnect and reconnect the cable to reopen the port.	#RESET<CR>	<pre> ~nn@RESET_ok<CR><LF> </pre>		Reset the device: #RESET<CR>
ROLLBACK	Rollback firmware to standby version.	#ROLLBACK<CR>	<pre> ~nn@ROLLBACK_ok<CR><LF> </pre>		Perform firmware rollback: #ROLLBACK<CR>
SECUR	Start/stop P3K communication security. NOTE: The permission system works only if security is enabled with the "SECUR" command.	#SECUR_security_state<CR>	<pre> ~nn@SECUR_security_state<CR><LF> </pre>	security_state – Security state 0 - OFF (disables security) 1 - ON (enables security)	Enable the permission system: #SECUR_0<CR>
SECUR?	Get P3K security state.	#SECUR?<CR>	<pre> ~nn@SECUR_security_state<CR><LF> </pre>	security_state – Security state 0 - OFF (disables security) 1 - ON (enables security)	Get security state: #SECUR?<CR>
SIGNALS-LIST?	Get signal ID list of this machine. NOTE: The response is returned in one line and terminated with <CR><LF>. The response format lists signal IDs separated by commas. This is an Extended Protocol 3000 command.	#SIGNALS-LIST?<CR><LF>	<pre> ~nn@SIGNALS-LIST_<direction_type>.<port_format>.<port_label>.<signal_type>.<index>,<,>,<CR><LF> </pre>	The following attributes comprise the signal ID: <direction_type> – Direction of the port: IN - Input OUT - Output BOTH - Bi-directional (e.g. for RS-232) <port_format> – Type of signal on the port: HDMI ANALOG_AUDIO RS-232 IR USB_A USB_B USB_C STREAM <port_index> – The port number as printed on the front or rear panel <signal_type> – Signal ID attribute: VIDEO AUDIO RS232 IR USB <index> – Indicates a specific channel number when there are multiple channels of the same type	Get signal ID list: #SIGNALS-LIST?<CR>
SN?	Get device serial number.	#SN?<CR>	<pre> ~nn@SN_serial_num<CR><LF> </pre>	serial_num – 14 decimal digits, factory assigned	Get the device serial number: #SN?<CR>

Function	Description	Syntax	Response	Parameters/Attributes	Example
STANDBY-VERSION?	Get standby firmware version.	#STANDBY-VERSION?<CR>	~nn@STANDBY-VERSION?_standby_version<CR><LF>	standby_version – XX.XX.XXXX where the digit groups are: major.minor.build version	Get standby version: #STANDBY-VERSION?<CR>
TIME	Set device time and date. NOTE: The year must be 4 digits. The device does not validate the day of week from the date. Time format - 24 hours. Date format - Day, Month, Year.	#TIME_day_of_week,date,data<CR>	~nn@TIME_day_of_week,date,data<CR><LF>	day_of_week – One of {SUN,MON,TUE,WED,THU,FRI,SAT} date – Format: DD-MM-YYYY where YYYY = Year MM = Month DD = Day data – Format: hh:mm:ss where hh = hours mm = minutes ss = seconds	Set device time and date to December 5, 2018 at 2:30pm: #TIME_mon_05-12-2018,14:30:00<CR>
TIME?	Get device time and date. NOTE: The year must be 4 digits. The device does not validate the day of week from the date. Time format - 24 hours. Date format - Day, Month, Year.	#TIME?<CR>	~nn@TIME_day_of_week,date,data<CR><LF>	day_of_week – One of {SUN,MON,TUE,WED,THU,FRI,SAT} date – Format: DD-MM-YYYY where YYYY = Year MM = Month DD = Day data – Format: hh:mm:ss where hh = hours mm = minutes ss = seconds	Get device time and date: #TIME?<CR>
TIME-SRV	Set time server. NOTE: This command is needed for setting UDP timeout for the current client list.	#TIME-SRV_mode,time_server_ip, sync_hour<CR>	~nn@TIME-SRV_mode,time_server_ip, sync_hour, server_status<CR><LF>	mode – On/Off 0 - Off 1 - On time_server_ip – Time server IP address sync_hour – Hour in day for time server sync server_status – On/Off	Set time server with IP address of 128.138.140.44 to ON: #TIME-SRV_1,128.138.140.44,0,1<CR>
TIME-SRV?	Get time server. NOTE: This command is needed for setting UDP timeout for the current client list.	#TIME-SRV?<CR>	~nn@TIME-SRV_mode,time_server_ip, sync_hour, server_status<CR><LF>	mode – On/Off 0 - Off 1 - On time_server_ip – Time server IP address sync_hour – Hour in day for time server sync server_status – On/Off	Get time server: #TIME-SRV?<CR>
TIME-ZONE	Set the device time zone.	#TIME-ZONE_timezone_str<CR>	~nn@TIME-ZONE_timezone_str<CR><LF>	timezone_str – A string that identifies the relevant time zone.	Set time zone to London, England: #TIME-ZONE_Europe/London<CR>
TIME-ZONE?	Get the device time zone.	#TIME-ZONE?<CR>	~nn@TIME-ZONE_timezone_str<CR><LF>	timezone_str – A string that identifies the relevant time zone.	Get the device time zone: #TIME-ZONE?<CR>
UART	Set com port configuration.  RS-485 is not supported	#UART_com_id, baud_rate, data_bits, parity, stop_bits_mode, serial_type<CR>	~nn@UART_com_id, baud_rate, data_bits, parity, stop_bits_mode, serial_type<CR><LF>	com_id – 1 to n (machine dependent) baud_rate – 1200 - 115200 data_bits – 5-8 parity – Parity Type 0 - No 1 - Odd 2 - Even stop_bits_mode – 1/2 serial_type – 0 - 232	Set baud rate to 9600, 8 data bits, parity to none and stop bit to 1: #UART_1, 9600, 8, 0, 1, 0<CR>
UART?	Get com port configuration.  RS-485 is not supported	#UART?_com_id<CR>	~nn@UART_com_id, baud_rate, data_bits, parity, stop_bits_mode, serial_type<CR><LF>	com_id – 1 to n (machine dependent) baud_rate – 1200 - 115200 data_bits – 5-8 parity – Parity Type 0 - No 1 - Odd 2 - Even stop_bits_mode – 1/2 serial_type – 232	Get baud rate: #UART?_1<CR>
UPG-TIME?	Get firmware version last upgrade date/time Add New Command for KDS-7	#UPG-TIME?<CR>	~nn@UPG-TIME_date,data<CR><LF>	date – Format: DD-MM-YYYY. data – Format: hh:mm:ss where	Get last upgrade date/time: #UPG-TIME?<CR>
UPGRADE	Perform firmware upgrade. NOTE: Not necessary for some devices. Firmware usually uploads to a device via a command like LDFW. Reset the device to complete the process.	#UPGRADE<CR>	~nn@UPGRADE_ok<CR><LF>		Perform firmware upgrade: #UPGRADE<CR>
VERSION?	Get firmware version number.	#VERSION?<CR>	~nn@VERSION_firmware_version<CR><LF>	firmware_version – XX.XX.XXXX where the digit groups are: major.minor.build version	Get the device firmware version number: #VERSION?<CR>
VIDEO-WALL-SETUP	Define device video wall relative position and video alignment. For KDS-DEC7 NOTE: MUST setup with "#VIEW-MOD 15" or "#VIEW-MOD 16" to video wall mode firstly	#VIDEO-WALL-SETUP_out_id, rotation<CR>	~nn@VIDEO-WALL-SETUP_out_id, rotation<CR><LF>	out_id – Number of output (1-256), =1 when view mode is 16 rotation – Rotation degrees in clockwise 0 - 0 degrees 1 - 90 degrees 2 - 180 degrees 3 - 270 degrees	Set video alignment: #VIDEO-WALL-SETUP_10,1<CR>

Function	Description	Syntax	Response	Parameters/Attributes	Example
VIDEO-WALL-SETUP?	Get device video wall relative position and video alignment. For KDS-DEC7	#VIDEO-WALL-SETUP?<CR>	~nn@VIDEO-WALL-SETUP<CR> <out_id>,<rotation><CR><LF>	out_id – Number of output (1-256), =1 when view mode is 16 rotation – Rotation degrees in clockwise 0 - 0 degrees 1 - 90 degrees 2 - 180 degrees 3 - 270 degrees	Get video alignment: #VIDEO-WALL-SETUP?<CR>
VIEW-MOD	Set view mode. In case of KDS-7 only Video wall mode is supported. Second and third parameters are "mode" specific. In case of video wall, they define video wall layout, use "VIEW-MOD 15,1,1" for disabling video wall. For KDS-DEC7	#VIEW-MOD<CR> <mode>,<vw_hsize>,<vw_vsize><CR> or #VIEW-MOD<CR> <mode>,<x1>,<y1>,<x2>,<y2><CR>	~nn@VIEW-MOD<CR> <mode>,<vw_hsize>,<vw_vsize><CR><LF> or ~nn@VIEW-MOD<CR> <mode>,<x1>,<y1>,<x2>,<y2><CR><LF>	mode – View Modes 15 - Video wall 16 - Mosaic style video wall vw_hsize – video wall horrible size, only required when mode is 15 vw_vsize – video wall vertical size, only required when mode is 15 (x1, y1) - will be the virtual coordinates of top left position, only required when mode is 16 (x2, y2) - will be the virtual coordinates of bottom right position, only required when mode is 16 the range for x1, y1, x2, y2 is: 0 ~ 10000.	Set view mode to a 2x2 grid video wall: #VIEW-MOD<CR> 15,2,2<CR> Set view mode to a mosaic style video wall for show 1/4 top left image: #VIEW-MOD<CR> 16,0,0,5000,5000<CR>
VIEW-MOD?	Get view mode. In case of KDS-7 only Video wall mode is supported. For KDS-DEC7	#VIEW-MOD?<CR>	~nn@VIEW-MOD<CR> <mode>,<vw_hsize>,<vw_vsize><CR><LF> or ~nn@VIEW-MOD<CR> <mode>,<x1>,<y1>,<x2>,<y2><CR><LF>	mode – View Modes 15 - Video wall 16 - Mosaic style video wall vw_hsize – video wall horrible size, only required when mode is 15 vw_vsize – video wall vertical size, only required when mode is 15 (x1, y1) - will be the virtual coordinates of top left position, only required when mode is 16 (x2, y2) - will be the virtual coordinates of bottom right position, only required when mode is 16 the range for x1, y1, x2, y2 is: 0 ~ 10000.	Get view mode: #VIEW-MOD?<CR>
WND-STRETCH	Set video wall stretch. For KDS-DEC7	#WND-STRETCH<CR> <out_index>,<mode><CR>	~nn@WND-STRETCH<CR> <out_index>,<mode><CR><LF>	out_index – Number that indicates the specific output 1-256: 1-N (N= the total number of outputs) mode – Stretch mode: 0 - fit in 1 - fit out	Set Video Wall Stretch Type is Fit In: #WND-STRETCH<CR> 1,0<CR>
WND-STRETCH?	Get video wall stretch. For KDS-DEC7.	#WND-STRETCH?<CR> <out_index><CR>	~nn@WND-STRETCH<CR> <out_index>,<mode><CR><LF>	out_index – Number that indicates the specific output 1-256: 1-N (N= the total number of outputs) mode – Stretch mode: 0 - fit in 1 - fit out	Get Video Wall Stretch Type: #WND-STRETCH?<CR> 1<CR>
X-AUD-DESC?	Get audio signal info. NOTE: + This is an Extended Protocol 3000 command. + On KDS7 only support active port, so for KDS-SW2-EN7, KDS-SW3-EN7, WP-SW2-EN7. <port_format> HDMI also identify the USB-C audio format if USB-C is active.	#X-AUD-DESC?<CR> <direction_type>.<port_format>.<port_index><CR>	~nn@X-AUD-DESC?<CR> <direction_type>.<port_format>.<port_index>.<signal_type>.<index>,<ch_tot>,<samp_rate>,<aud_format><CR><LF>	The following attributes comprise the signal ID: <direction_type> – Direction of the port: IN - Input OUT - Output BOTH - Bi-directional (e.g. for RS-232) <port_format> – Type of signal on the port: HDMI ANALOG_AUDIO STREAM DANTE – Only available on KDS-SW3-EN7 <port_index> – The port number as printed on the front or rear panel <signal_type> – Signal ID attribute: AUDIO <index> – Indicates a specific channel number when there are multiple ch_tot – Total number of channels samp_rate – Sample rate aud_format – Audio Format: LPCM - Linear Pulse Code Modulation audio Non-LPCM - None Linear Pulse Code Modulation audio, like Dolby Digital, DTS, etc. HBR - High Bitrate Audio, like Dolby TrueHD, DTS HD Master Audio.	Get the audio signal info: #X-AUD-DESC?<CR> <out_index>.<hmi>.<1><CR>
X-AUD-LVL	Set audio level of a specific signal. NOTE: This is an Extended Protocol 3000 command.	#X-AUD-LVL<CR> <direction_type>.<port_format>.<port_index>.<signal_type>.<index>,<audio_level><CR>	~nn@X-AUD-LVL<CR> <direction_type>.<port_format>.<port_index>.<signal_type>.<index>,<audio_level><CR><LF>	The following attributes comprise the signal ID: <direction_type> – Direction of the port: OUT – Output <port_format> – Type of signal on the port: ANALOG_AUDIO	Set the audio level of a specific signal to 80: #X-AUD-LVL<CR> <in_index>.<analog_audio>.<1>.<audio_level>.<80><CR>

Function	Description	Syntax	Response	Parameters/Attributes	Example
				<p><port_index> – The port number as printed on the front or rear panel</p> <p><signal_type> – Signal ID attribute: AUDIO</p> <p><index> – Indicates a specific channel number when there are multiple channels of the same type</p> <p>audio_level – Audio level (range between 0 to 100)</p>	
X-AUD-LVL?	<p>Get audio level of a specific signal.</p> <p>NOTE: This is an Extended Protocol 3000 command.</p>	<p>#X-AUD-</p> <p>LVL? <direction_type>.<port_format>.<port_index>.<signal_type>.<index><CR></p>	<p>~nn@X-AUD-</p> <p>LVL <direction_type>.<port_format>.<port_index>.<signal_type>.<index>,audio_level<CR><LF></p>	<p>The following attributes comprise the signal ID:</p> <p><direction_type> – Direction of the port:</p> <p>OUT – Output</p> <p><port_format> – Type of signal on the port:</p> <p>ANALOG_AUDIO</p> <p><port_index> – The port number as printed on the front or rear panel</p> <p><signal_type> – Signal ID attribute: AUDIO</p> <p><index> – Indicates a specific channel number when there are multiple channels of the same type</p> <p>audio_level – Audio level (range between 0 to 100)</p>	<p>Get the audio level of a specific signal:</p> <p>#X-AUD-</p> <p>LVL? <direction_type>.out.analog_audio.1.audio.1.<CR></p>
X-AV-SW-MODE	<p>Set auto-switch mode per output.</p> <p>NOTE: This is an Extended Protocol 3000 command.</p>	<p>#X-AV-SW-</p> <p>MODE? <direction_type>.<port_format>.<port_index>.<signal_type>.<index>,connection_mode<CR></p>	<p>~nn@X-AV-SW-</p> <p>MODE <direction_type>.<port_format>.<port_index>.<signal_type>.<index>,connection_mode<CR><LF></p>	<p>The following attributes comprise the signal ID:</p> <p><direction_type> – Direction of the port:</p> <p>OUT – Output</p> <p><port_format> – Type of signal on the port:</p> <p>HDMI</p> <p>ANALOG_AUDIO</p> <p>STREAM</p> <p><port_index> – The port number as printed on the front or rear panel</p> <p><signal_type> – Signal ID attribute: VIDEO</p> <p>AUDIO</p> <p><index> – Indicates a specific channel number when there are multiple channels of the same type</p> <p>connection_mode – Connection mode</p> <p>0 - manual</p> <p>1 - priority</p> <p>2 - last connected</p>	<p>Set auto switch mode for HDMI OUT 1 (last connected):</p> <p>#X-AV-SW-</p> <p>MODE? <direction_type>.out.hdmi.1.video.1,2<CR></p>
X-AV-SW-MODE?	<p>Get auto-switch mode.</p> <p>NOTE: This is an Extended Protocol 3000 command.</p>	<p>#X-AV-SW-</p> <p>MODE? <direction_type>.<port_format>.<port_index>.<signal_type>.<index><CR></p>	<p>~nn@X-AV-SW-</p> <p>MODE <direction_type>.<port_format>.<port_index>.<signal_type>.<index>,connection_mode<CR><LF></p>	<p>The following attributes comprise the signal ID:</p> <p><direction_type> – Direction of the port:</p> <p>OUT – Output</p> <p><port_format> – Type of signal on the port:</p> <p>HDMI</p> <p>ANALOG_AUDIO</p> <p>STREAM</p> <p><port_index> – The port number as printed on the front or rear panel</p> <p><signal_type> – Signal ID attribute: VIDEO</p> <p>AUDIO</p> <p><index> – Indicates a specific channel number when there are multiple channels of the same type</p> <p>connection_mode – Connection mode</p> <p>0 - manual</p> <p>1 - priority</p> <p>2 - last connected</p>	<p>Get auto switch mode for HDMI OUT 1:</p> <p>#X-AV-SW-</p> <p>MODE? <direction_type>.out.hdmi.1.video.1.<CR></p>
X-MUTE	<p>Set mute ON/OFF on a specific signal.</p> <p>Note: For KDS-EN7, HDMI, STREAM mute will effect each other, and if the HDMI/STREAM is mute, analog_audio will be mute too. It is a limitation.</p>	<p>#X-</p> <p>MUTE <direction_type>.<port_format>.<port_index>.<signal_type>.<index>,state<CR></p>	<p>~nn@X-</p> <p>MUTE <direction_type>.<port_format>.<port_index>.<signal_type>.<index>,state<CR><LF></p>	<p><direction_type> – Direction of the port:</p> <p>OUT – Output</p> <p><port_format> – Type of signal on the port:</p> <p>HDMI</p> <p>ANALOG_AUDIO</p> <p>STREAM</p> <p>ALL – All audio output</p> <p><port_index> – The port number as printed on the front or rear panel</p> <p><signal_type> – Signal ID attribute: AUDIO</p> <p><index> – Indicates a specific channel number when there are multiple channels of the same type</p> <p>state – OFF/ON (not case sensitive)</p>	<p>Mute the audio on HDMI OUT 1:</p> <p>#X-MUTE <direction_type>.out.hdmi.1.audio.1.on<CR></p> <p>Mute the audio on ALL OUT:</p> <p>#X-MUTE <direction_type>.out.all.1.audio.1.on<CR></p>

Function	Description	Syntax	Response	Parameters/Attributes	Example
X-MUTE?	Get mute ON/OFF on a specific signal.	#X- MUTE? <direction_type>.<port_format>.<port_index>.<signal_type>.<index><CR>	~nn@X- MUTE <direction_type>.<port_format>.<port_index>.<signal_type>.<index>,state<CR><LF>	<direction_type> – Direction of the port: OUT – Output <port_format> – Type of signal on the port: HDMI ANALOG_AUDIO STREAM ALL – All audio output <port_index> – The port number as printed on the front or rear panel <signal_type> – Signal ID attribute: AUDIO <index> – Indicates a specific channel number when there are multiple channels of the same type state – OFF/ON (not case sensitive)	Get the mute state of audio on HDMI OUT 1: #X-MUTE?_out.hdmi.1.audio.1<CR>
X-PRIORITY	Set priority order.	#X- PRIORITY <direction_type>.<port_format>.<port_index>.<signal_type>,[<direction_type>.<port_format>.<port_index>.<signal_type> , ...]<CR>	~nn@X- PRIORITY <direction_type>.<port_format>.<port_index>.<signal_type>,[<direction_type>.<port_format>.<port_index>.<signal_type> , ...]<CR><LF>	<direction_type> – Direction of the port: IN - Input OUT - Output <port_format> – Type of signal on the port: HDMI USB_C ANALOG_AUDIO STREAM <port_index> – The port number as printed on the front or rear panel <signal_type> – Signal ID attribute: VIDEO AUDIO	Set video priority is 3,2,1: #X- PRIORITY_out.hdmi.1.video.[in.usb_c.3.video.in.hdmi.2.video.in.hdmi.1.video]<CR>
X-PRIORITY?	Get priority order.	#X- PRIORITY? <direction_type>.<port_format>.<port_index>.<signal_type><CR>	~nn@X- PRIORITY <direction_type>.<port_format>.<port_index>.<signal_type>,[<direction_type>.<port_format>.<port_index>.<signal_type> , ...]<CR><LF>	<direction_type> – Direction of the port: IN - Input OUT - Output <port_format> – Type of signal on the port: HDMI USB_C ANALOG_AUDIO STREAM <port_index> – The port number as printed on the front or rear panel <signal_type> – Signal ID attribute: VIDEO AUDIO	Get video priority: #X- PRIORITY?_out.hdmi.1.video<CR>
X-ROUTE	Send routing command. NOTE: It is recommended to use the command #SIGNALS-LIST to get the list of all signal IDs available in the system and which can be used in this command. Video 1 is the default port in this command and is implied even if not written: #X-ROUTE out.hdmi.1.in.hdmi.1<CR> is interpreted as: #X-ROUTE out.hdmi.1.video.1.in.hdmi.1.video.1<CR> This is an Extended Protocol 3000 command. Brackets '[' and ']' are reserved Protocol 3000 characters that define a list of parameters as in [a,b,c,d].	#X-ROUTE_ <direction_type1>.<port_type1>.<port_index1>.<signal_type1>.<index1>,[...],<direction_type2>.<port_type2>.<port_index2>.<signal_type2>.<index2><CR>	~nn@X-ROUTE_ <direction_type1>.<port_type1>.<port_index1>.<signal_type1>.<index1>,[...],<direction_type2>.<port_type2>.<port_index2>.<signal_type2>.<index2><CR><LF>	The following attributes comprise the signal ID: <direction_type> – Direction of the port: IN - Input OUT - Output BOTH - Bi-directional (e.g. for RS-232) <port_format> – Type of signal on the port: HDMI ANALOG_AUDIO STREAM DANTE – Only available on KDS-SW3-EN7 <port_index> – The port number as printed on the front or rear panel <signal_type> – Signal ID attribute: VIDEO AUDIO <index> – Indicates a specific channel number when there are multiple channels of the same type	Route HDMI IN 2 to HDMI OUT 1: #X-ROUTE_out.hdmi.1.video.1.in.hdmi.2.video.1<CR> Route audio of hdmi.1.audio.1 signal to hdmi output, analog and dante: #X-ROUTE_[out.hdmi.1.audio.1,out.analog_audio.1.audio.1,out.dante.1.audio.1].in.hdmi.1.audio.1<CR>
X-ROUTE?	Get routing status. NOTE: It is recommended to use the command #SIGNALS-LIST to get the list of all signal IDs available in the system and which can be used in this command. VIDEO.1 are the default <signal_type> and <index> in this command and are implied even if not written: #X-ROUTE? out.hdmi.1<CR> is interpreted as: #X-ROUTE? out.hdmi.1.video.1<CR> This is an Extended Protocol 3000 command.	#X-ROUTE?_ <direction_type1>.<port_type1>.<port_index1>.<signal_type1>.<index1><CR>	~nn@X-ROUTE_ <direction_type1>.<port_type1>.<port_index1>.<signal_type1>.<index1>,<direction_type2>.<port_type2>.<port_index2>.<signal_type2>.<index2><CR><LF>	The following attributes comprise the signal ID: <direction_type> – Direction of the port: IN - Input OUT - Output BOTH - Bi-directional (e.g. for RS-232) <port_format> – Type of signal on the port: HDMI ANALOG_AUDIO STREAM DANTE – Only available on KDS-SW3-EN7 <port_index> – The port number as printed on the front or rear panel <signal_type> – Signal ID attribute: VIDEO AUDIO	Get the routing status: #X- ROUTE?_out.hdmi.1.video.1<CR>

Function	Description	Syntax	Response	Parameters/Attributes	Example
				<index> – Indicates a specific channel number when there are multiple channels of the same type	

Result and Error Codes

Syntax

In case of an error, the device responds with an error message. The error message syntax:

- **~NN@ERR XXX<CR><LF>** – when general error, no specific command
- **~NN@CMD ERR XXX<CR><LF>** – for specific command
- **NN** – machine number of device, default = 01
- **XXX** – error code

Error Codes

Error Name	Error Code	Description
P3K_NO_ERROR	0	No error
ERR_PROTOCOL_SYNTAX	1	Protocol syntax
ERR_COMMAND_NOT_AVAILABLE	2	Command not available
ERR_PARAMETER_OUT_OF_RANGE	3	Parameter out of range
ERR_UNAUTHORIZED_ACCESS	4	Unauthorized access
ERR_INTERNAL_FW_ERROR	5	Internal FW error
ERR_BUSY	6	Protocol busy
ERR_WRONG_CRC	7	Wrong CRC
ERR_TIMEDOUT	8	Timeout
ERR_RESERVED	9	(Reserved)
ERR_FW_NOT_ENOUGH_SPACE	10	Not enough space for data (firmware, FPGA...)
ERR_FS_NOT_ENOUGH_SPACE	11	Not enough space – file system
ERR_FS_FILE_NOT_EXISTS	12	File does not exist
ERR_FS_FILE_CANT_CREATED	13	File can't be created
ERR_FS_FILE_CANT_OPEN	14	File can't open
ERR_FEATURE_NOT_SUPPORTED	15	Feature is not supported
ERR_RESERVED_2	16	(Reserved)
ERR_RESERVED_3	17	(Reserved)
ERR_RESERVED_4	18	(Reserved)
ERR_RESERVED_5	19	(Reserved)
ERR_RESERVED_6	20	(Reserved)
ERR_PACKET_CRC	21	Packet CRC error
ERR_PACKET_MISSED	22	Packet number isn't expected (missing packet)
ERR_PACKET_SIZE	23	Packet size is wrong
ERR_RESERVED_7	24	(Reserved)
ERR_RESERVED_8	25	(Reserved)
ERR_RESERVED_9	26	(Reserved)
ERR_RESERVED_10	27	(Reserved)
ERR_RESERVED_11	28	(Reserved)
ERR_RESERVED_12	29	(Reserved)
ERR_EDID_CORRUPTED	30	EDID corrupted
ERR_NON_LISTED	31	Device specific errors
ERR_SAME_CRC	32	File has the same CRC – not changed
ERR_WRONG_MODE	33	Wrong operation mode
ERR_NOT_CONFIGURED	34	Device/chip was not initialized

Example:	
Comment:	
Default:	

Display Management – Configure automatic display sleep/awake timeouts

Function:	Display Management
URL:	/device/json
Method:	POST
Content-Type	application/json;
Example:	
Comment:	
Default:	

Display Management – Sleep image

Function:	Display Management								
URL:	/upload/sleepimage								
Method:	POST								
Content-Type	multipart/form-data;								
Example:	<table border="1"> <thead> <tr> <th>Form Name</th> <th>Form Value Type</th> <th>Form Value</th> <th>Note</th> </tr> </thead> <tbody> <tr> <td>file</td> <td>octet-stream</td> <td>(binary)</td> <td></td> </tr> </tbody> </table>	Form Name	Form Value Type	Form Value	Note	file	octet-stream	(binary)	
Form Name	Form Value Type	Form Value	Note						
file	octet-stream	(binary)							
Comment:									
Default:									

EDID Management – EDID Repository

Function:	EDID Management								
URL:	/upload/edid								
Method:	POST								
Content-Type	multipart/form-data;								
Example:	<table border="1"> <thead> <tr> <th>Form Name</th> <th>Form Value Type</th> <th>Form Value</th> <th>Note</th> </tr> </thead> <tbody> <tr> <td>file</td> <td>octet-stream</td> <td>(binary)</td> <td></td> </tr> </tbody> </table>	Form Name	Form Value Type	Form Value	Note	file	octet-stream	(binary)	
Form Name	Form Value Type	Form Value	Note						
file	octet-stream	(binary)							
Comment:									
Default:									

Version – Store software and hardware version related information

Function:	Generic Header
URL:	/device/json
Method:	POST
Content-Type	application/json;

Example:	
Comment:	this is a generic file name header appendix
Default:	

Log File – Directory to store latest log file

Function:	Log File
URL:	/log/log
Method:	GET
Content-Type	text/plain;
Example:	N/A
Comment:	
Default:	

On Screen Display – Defines how channels are presented in OSD Menu

Function:	On Screen Display
URL:	/device/json
Method:	POST
Content-Type	application/json;
Example:	
Comment:	seconds
Default:	

Overlay – Overlay image file

Function:	Overlay								
File Name:	/upload/overlayimage								
Method:	POST								
Content-Type	multipart/form-data;								
Example:	<table border="1"> <thead> <tr> <th>Form Name</th> <th>Form Value Type</th> <th>Form Value</th> <th>Note</th> </tr> </thead> <tbody> <tr> <td>file</td> <td>octet-stream</td> <td>(binary)</td> <td></td> </tr> </tbody> </table>	Form Name	Form Value Type	Form Value	Note	file	octet-stream	(binary)	
Form Name	Form Value Type	Form Value	Note						
file	octet-stream	(binary)							
Comment:									
Default:									

Overlay Configuration – Text overlay

Function:	Overlay Configuration
File Name:	/device/json
Method:	POST
Content-Type	application/json;
Example:	
Comment:	
Default:	

Overlay Configuration – Image overlay

Function:	Overlay Configuration
URL:	/device/json
Method:	POST
Content-Type	application/json;
Example:	<pre>{ "path": "/overlay/overlay2_setting.json", "info": { "general": { "enable": "off", "timeout": 2, "transparency": 50 }, "objects": [{ "type": "image", "position": "top_center", "width": 300, "height": 300, "path": "test.png" }] } }</pre>
Comment:	
Default:	

Security/HTTPS – HTTPS certificates

	Security			
	/security/https			
	POST			
	multipart/form-data;			
	Form Name	Form Value Type	Form Value	Note
	mode	plaintext	on	[on, off]
	method	plaintext	in	[in, out]
	certificate	octet-stream	(binary)	
	password	plaintext		Base64 Encoded

Security/IEEE 802.1X – Provide interface for managing security/IEEE 802.1X certificates

	Security			
	/security/802_1x			
	POST			
	multipart/form-data;			
	Form Name	Form Value Type	Form Value	Note
	default_authentication	plaintext	eap_tls	
	tls_username	plaintext		
	tls_client_certificate	octet-stream	(binary)	
	tls_private_key	octet-stream	(binary)	
	tls_private_key_password	plaintext		Base64 Encoded
	server_ca_mode	plaintext	on	[on, off]
	server_ca_file	octet_stream	(binary)	
	Or			
	Form Name	Form Value Type	Form Value	Note
	default_authentication	plaintext	eap_mschap	
	mschap_username	plaintext		
	mschap_password	plaintext		Base64 Encoded
	server_ca_mode	plaintext	on	[on, off]
	server_ca_file	octet_stream	(binary)	

USB and KM – KM and USB configuration

Enable switch between KM and generic USB modes, define KM request timeout and configure KM Roaming.

KM Roaming allows user to control up to 17 computers using just one USB keyboard and mouse. KM switch automatically and seamlessly between computers once mouse cursor crosses screen boundary.



HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE



P/N:



2900-301543

Rev:



9



SAFETY WARNING

Disconnect the unit from the power supply before opening and servicing

For the latest information on our products and a list of Kramer distributors, visit our website where updates to this user manual may be found.

We welcome your questions, comments, and feedback.

The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. All brand names, product names, and trademarks are the property of their respective owners.