

Yealink VCR11 Datasheet


Introduction

You can use the VCR11 Remote Control to control the Yealink MeetingBar/MeetingEye. VCR11 uses two AAA batteries (1.5V).

VCR11 Compatibility

For the VCR11 compatibility, refer to [Room Accessories Compatibility Lists](#).

Yealink VCR11

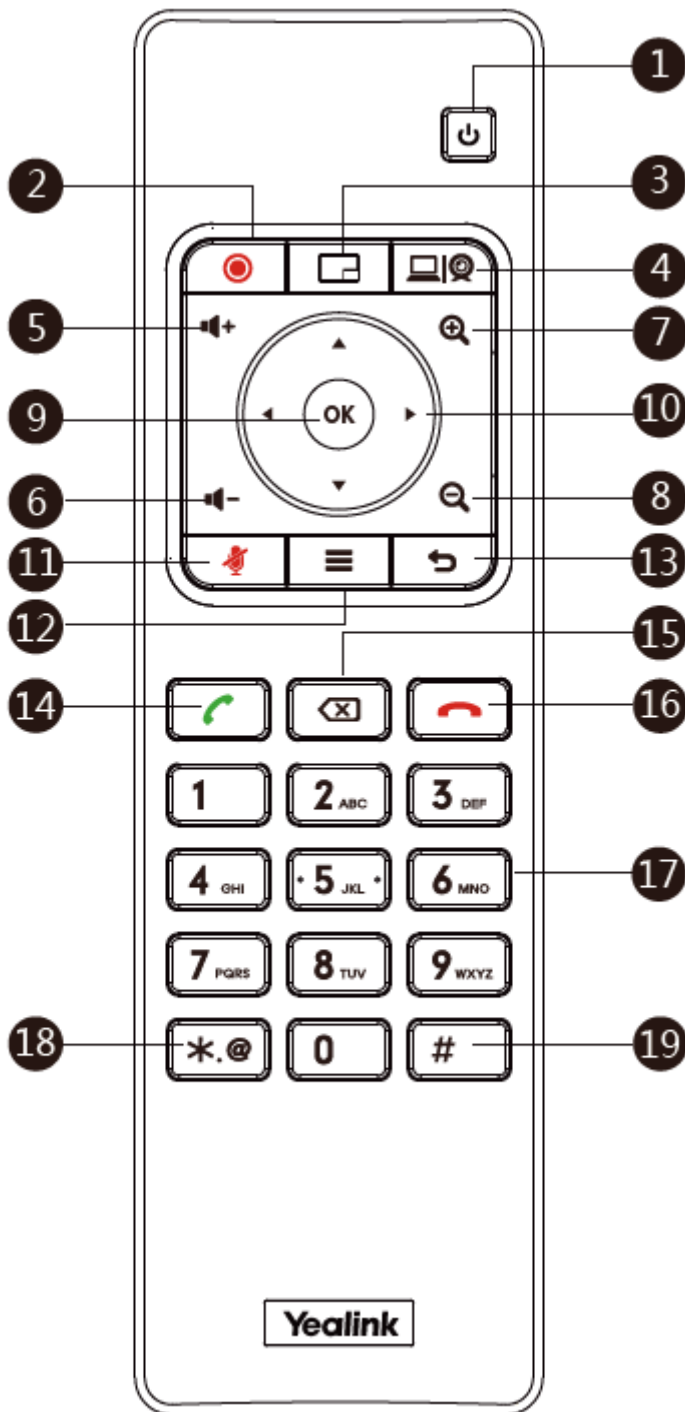

! Features marked with "*" are coming soon.

No.	Name	Description
1	Power on/off Key	Put the system to sleep mode or wake up the system.
2	Video Recording Key*	Start/stop recording the video and the audio.
3	Layout	- On the home screen, pressing the key will join the first meeting on the meeting

	Key	list. - On the home screen or during a meeting, press and hold the key for 5 seconds will bring up the sidebar.
4	Custom Key*	Customizable shortcuts are available.
5	Volume up key	Increase the speaker volume.
6	Volume down key	Reduce the speaker volume.
7	Zoom in key	Long press the Home Key to bring up the sidebar and enter Camera Control to zoom in the camera's focal length.
8	Zoom out key	Long press the Home Key to bring up the sidebar and enter Camera Control to zoom out the camera's focal length.
9	OK key	Go to the sub-menu to confirm the action or select one item.
10	Navigation Key	- Navigate through menu items. - Long press the Home Key to bring up the sidebar, enter Camera Control , and pan and tilt the camera to adjust the viewing angle.
11	Mute Key	Mute or unmute the microphone.
12	Home key	Press and hold the button for 5 seconds to bring up the sidebar.
13	Back key	Return to the previous menu.
14	Off-hook Key	Enter the pre-dialing screen, the dialing screen, or the answering screen.
15	Delete Key	Delete one character at a time. Press and hold to delete all characters in the input field.
16	On-hook Key	End a call or exit a meeting call.
17	Keypad	- Enter digits. - Go to the Dial page. - In the camera control interface, if a preset position has been set for a specific number key, pressing that number key will activate the corresponding preset position. If you press and hold the number key for 5 seconds, it will replace the corresponding preset position.
18	Character Key	Enter the special characters .*@.
19	Pound key	Enter the pound key (#).

FAQ

Does the VCR11 remote control support camera preset?

The VCR11 remote control supports up to 9 camera presets.