



1. Meter wiring

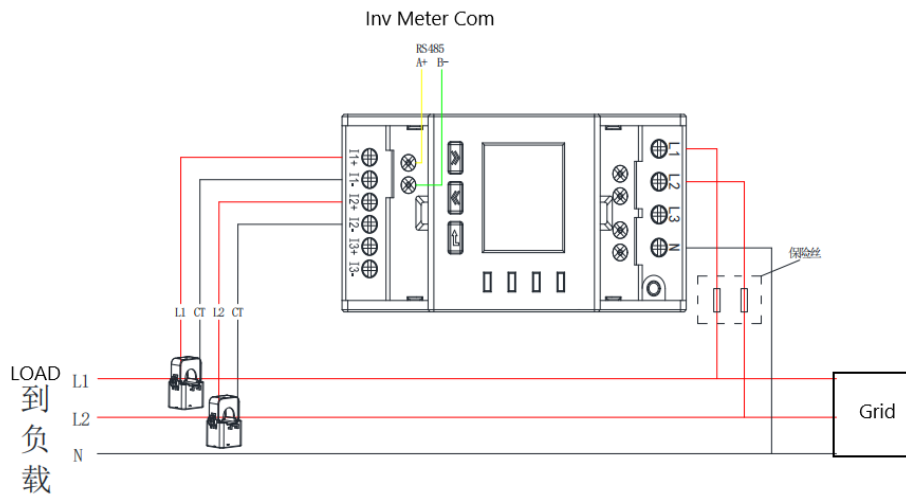

2. Zero Injection algorithm setting

On-screen menu

Zero Injection -->Algorithm : Avg/Min

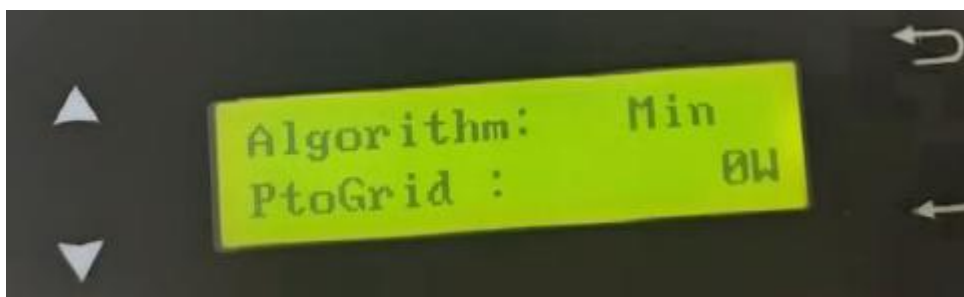

Avg: The average value of the interphase load.

Min: Minimum interphase load.