

UltraVoice®

Model: UV
Electronic Siren Controller



Description, Specifications, Installation, Operation, and Service Manual

Limited Warranty

This product is subject to and covered by a limited warranty, a copy of which can be found at www.fedsig.com/SSG-Warranty. A copy of this limited warranty can also be obtained by written request to Federal Signal Corporation, 2645 Federal Signal Drive, University Park, IL 60484, email to info@fedsig.com or call +1 708-534-3400.

This limited warranty is in lieu of all other warranties, express or implied, contractual or statutory, including, but not limited to the warranty of merchantability, warranty of fitness for a particular purpose and any warranty against failure of its essential purpose.



FEDERAL SIGNAL
Safety and Security Systems

2645 Federal Signal Drive
University Park, Illinois 60484

www.fedsig.com

Customer Support 800-548-7229 • +1 708 534-3400
Technical Support 800-524-3021 • +1 708 534-4790

All product names or trademarks are properties of their respective owners.

Contents

Safety Messages.....	9
General Description	12
Introduction	12
Overview	12
Features.....	13
UV Controller Overview	14
Directional Speaker Arrays (DSA).....	15
Modulator Speaker Arrays	15
Options.....	15
Programming Methods.....	16
Federal Signal Commander Software (SFCDWARE).....	16
FSPWARE	16
Status Monitoring	16
Specifications	17
Installation.....	20
ICM-UV Checklist.....	20
Recommendations on UV Controller Location	20
UV Controller Installation	21
Pole Mounting	21
Flat Surface Mounting.....	22
Electrical Connections	25
Power Connections.....	25
Signal Connections	26
Speaker Wiring for DSA Series Sirens.....	28
Battery Hookup	28
Model HTR4 (Battery Warmers).....	29
Solar Power (PVS220W-24)	30
Installation of Other Manufacturers' Radio Receivers.....	30
Pre-operation Checkout and Testing.....	31
Amplifier and Speaker Pre-Operation Checkout (Non-Active Mode).....	31
Testing Battery Charge	32
Initial Checkout	32

Final Testing	32
Operations.....	33
UV Controller Front Panel Indicators	33
UV400 Amplifier Front Panel Indicators	35
Basic UV+ Controller Programming	36
Unit Type	36
Activation Formats	36
User Programs	37
Activation Functions.....	37
UVARM Option.....	39
Specifications for UVARM.....	40
Battery Charger.....	41
UV25ST Option.....	42
UVTD-IP Option	43
Ethernet Board Specifications.....	43
Network Information.....	44
UV+ Controller Card.....	45
Manual Activation	47
Local Public Address.....	47
Relay Output (JP11).....	48
600 ohm Input (JP12)	48
24 Vdc Supply (JP13)	48
Remote Activation (JP14)	49
Charger Sense (JP20)	49
Sensor Inputs (JP15)	50
+5 Vdc Supply (JP16)	51
Rotation Sensor (JP17).....	51
Site Address Switch (S1)	52
Radio Control	53
Two-Way Sensor Package.....	53
Local Quiet Test	54
Operation	54
Finding Faults	54
Digital Voice Recording.....	54

File Format.....	54
Voice Levels Within Files	55
Tone Levels Within Files	55
Filtering Files.....	55
Checking/Setting UV+ Controller DV Levels.....	55
Converting the Files	56
Maintenance.....	56
UV Controller Preventive Maintenance	56
Driver Replacement and Inspection	57
Checking the Signal	57
Checking the Battery.....	57
Checking the Charger	58
Adjusting Two-Way Radio Receiver	58
Adjusting the receive audio	58
Adjusting the transmit deviation	59
Recommended Cables for Radio.....	59
600-ohm Adjustment Procedure for Activation Audio	59
600-ohm Adjustment Procedure for External Audio Source Input.....	60
Getting Technical Support and Service.....	61
Appendix A Stainless Steel Care and Maintenance	62
Appendix B Wiring Diagrams	65
Appendix C Drawings	69

Tables

Table 1 DSA Power Rating Table.....	15
Table 2 UV400 Amplifier Selection Table.....	15
Table 3 Options.....	15
Table 4 Batteries (user-supplied).....	17
Table 5 Specifications	17
Table 6 Physical.....	18
Table 7 Relay Output (JP11)	18
Table 8 600 ohm Balanced Line Port	18
Table 9 Remote Activation, Sensor, and Direction Inputs	18
Table 10 Audio Power Amplifier Modules Model (UV400).....	18
Table 11 Signaling Formats	19
Table 12 UV Weight	21
Table 13 Modulator Speaker Wiring (MOD1004B-MOD8032B)	26
Table 14 Wiring example for four DSA6 speaker arrays.....	28
Table 15 Radio Connector, 8 pin MOD jack.....	30
Table 16 Front Panel of UV+ Controller Card.....	34
Table 17 Front Panel Controls for UV+ Controller Card.....	34
Table 18 Front Panel Indicators for Model UV400 Amplifier.....	35
Table 19 Unit Type Selection Table	36
Table 20 Activation Functions	37
Table 21 Audio and Relay Output Card Option.....	40
Table 22 Connectors for the UVARM	40
Table 23 Indicators for the UVARM	41
Table 24 Wire Connections on Charger.....	41
Table 25 LEDs description.....	42

Table 26 Electrical Ethernet Board Specifications	43
Table 27 Bandwidth Requirements	44
Table 28 UV+ Controller Card Setting I/O	45
Table 29 Manual Activation Switches on UV+ Controller Card	47
Table 30 Remote Activation Connections (JP14)	49
Table 31 Sensor Connections	50
Table 32 External Sensors	51
Table 33 Rotation Sensor Connections	51
Table 34 Troubleshooting	60

Figures

Figure 1 UV Dimensions	12
Figure 2 Typical Siren Installation Drawing	23
Figure 3 Flat Surface Mounting.....	24
Figure 4 UV Backplane Motherboard (AMP1 to AMP 4).....	27
Figure 5 UV Backplane Motherboard (AMP 5)	27
Figure 6 UV Backplane Motherboard (AMP 6, AMP7, and AMP8)	27
Figure 7 Battery Wiring Diagram.....	29
Figure 8 HTR4 Wiring Diagram.....	29
Figure 9 UV+ Controller Front Panel Indicators	33
Figure 10 UV400 Amplifier Front Panel Indicators	35
Figure 11 UVARM Front Panel Indicators	39
Figure 12 LEDs on charger.....	42
Figure 13 Serial to Ethernet Board	43
Figure 14 UV+ Controller Card	46
Figure 15 UV+ Controller Card Switches	47
Figure 16 UV Controller Backplane Motherboard I/O.....	48

Figure 17 UV Backplane Motherboard (JP12, JP14, and JP15).....	49
Figure 18 UV Backplane Motherboard (JP15, JP16, JP17, and JP13)	51
Figure 19 Setting the Switch Number Example	52
Figure 20 DSA Retrofit Wiring for UV Controllers	65
Figure 21 Original DSA Wiring for UV Controllers not using retrofit kit	66
Figure 22 Modulator Speaker Array Retrofit Wiring	67
Figure 23 Modulator Speaker Array Retrofit Wiring	68
Figure 24 UV Controller Two-way Radio Wiring Diagram	69
Figure 25 UVTD-IP Broadband Wiring Diagram.....	70
Figure 26 UV Controller Two-Way Radio Receiver Final Assembly	71
Figure 27 UV Controller Two-way Radio Receiver Final Assembly (continued).....	72
Figure 28 Broadband UVTD-IP Final Assembly	73
Figure 29 Broadband UVTD-IP Final Assembly (continued)	74
Figure 30 UVTD-LL Final Assembly	75
Figure 31 UVTD-LL Final Assembly (continued)	76
Figure 32 UVTD-LL Wiring Diagram.....	77
Figure 33 Transformer Rectifier Wiring to Control Cabinet.....	78
Figure 34 UVTR Transformer	79

Safety Messages

⚠ WARNING

It is important to follow all instructions shipped with this product. This device is to be installed by trained personnel who are thoroughly familiar with the country's electric codes and will follow these guidelines as well as local codes and ordinances, including any state or local noise-control ordinances.

Listed below are important safety instructions and precautions you should follow.

Important Notice

Federal Signal reserves the right to make changes to devices and specifications detailed in the manual at any time to improve reliability, function, or design. The information in this manual has been carefully checked and is believed to be accurate; however, no responsibility is assumed for any inaccuracies.

Publications

Federal Signal recommends the following publications from the Federal Emergency Management Agency for assistance with planning an outdoor warning system:

- The "Outdoor Warning Guide" (CPG 1-17)
- "Civil Preparedness, Principles of Warning" (CPG 1-14)
- FEMA-REP-1, Appendix 3 (Nuclear Plant Guideline)
- FEMA-REP-10 (Nuclear Plant Guideline)

Planning

- If suitable warning equipment is not selected, the installation site for the siren is not selected properly, or the siren is not installed properly, it may not produce the intended optimum audible warning. Follow Federal Emergency Management Agency (FEMA) recommendations.
- If sirens are not activated in a timely manner when an emergency condition exists, they cannot provide the intended audible warning. It is imperative that knowledgeable people, who are provided with the necessary information, be available at all times to authorize the activation of the sirens.
- When sirens are used out of doors, people indoors may not be able to hear the warning signals. Separate warning devices or procedures may be needed to warn people indoors effectively.
- The sound output of sirens can cause permanent hearing damage. To prevent excessive exposure, carefully plan siren placement, post warnings, and restrict access to areas near sirens. Review and comply with any local or state noise control ordinances as well as OSHA noise exposure standards, regulations, and guidelines.
- Activating the sirens may not result in people taking the desired actions if those to be warned are not properly trained about the meaning of siren sounds. Siren users should follow FEMA recommendations and instruct those to be warned of corrective actions to be taken.

- After installation, service, or maintenance, test the siren system to confirm that it is operating properly. Test the system regularly to confirm that it will be operational in an emergency.
- If future service and operating personnel do not have these instructions to refer to, the siren system may not provide the intended audible warning, and service personnel may be exposed to death, permanent hearing loss, or other bodily injuries. File these instructions in a safe place and refer to them periodically. Give a copy of these instructions to new recruits and trainees. Also give a copy to anyone who is going to service or repair the siren.

Installation and Service

- Electrocution or severe personal injury can occur when performing various installation and service functions such as making electrical connections, drilling holes, or lifting equipment. Therefore, only experienced and qualified electricians should install this product in compliance with national, state, and any other applicable codes, ordinances, and regulations. Perform all work under the direction of the installation or service crew safety foreman.
- The sound output of sirens is capable of causing permanent hearing damage. To prevent excessive exposure, carefully plan siren placement, post warnings, and restrict access to areas near the sirens. Sirens may be operated from remote control points. Whenever possible, disconnect all siren power, including batteries, before working near the siren. Review and comply with any local or state noise control ordinances as well as OSHA noise exposure regulations and guidelines.
- After installation or service, test the siren system to confirm that it is operating properly. Test the system regularly to confirm that it will be operational in an emergency.
- If future service and operating personnel do not have these instructions to refer to and are not properly trained, the system may not provide the intended audible warning, and service personnel may be exposed to hazards that could result in death, permanent hearing loss, or other bodily injuries. File these instructions in a safe place and refer to them periodically. Give a copy of these instructions to recruits and trainees. Also give a copy to anyone who is going to service or repair the siren.

Operation

Failure to understand the capabilities and limitations of your siren could result in permanent hearing loss, other serious injuries, or death to persons too close to the sirens when you activate them or to those you need to warn. Carefully read and thoroughly understand all safety notices in this manual and all operations-related items in all instruction manuals shipped with the equipment. Thoroughly discuss all contingency plans with those responsible for warning people in your community, company, or jurisdiction. A well-written contingency plan document is recommended.

Hazard Classification

Federal Signal uses signal words to identify the following:

⚠ DANGER

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

⚠ WARNING

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

⚠ CAUTION

CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to physical injury.

Read and understand the information contained in this manual before attempting to install or service the siren.

Pay careful attention to notices located on the equipment.


General Description

Introduction

This manual describes the features, specifications, installation, operation, and maintenance of the UltraVoice (UV) controller. A UV controller is typically used with high-powered speaker arrays as an outdoor warning system commonly referred to as a giant voice system. The UV controller includes a control card, amplifiers, battery charger, and communication for interface to outdoor electronic sirens.

The UV controller provides activation and monitoring of outdoor electronic sirens. The UV controller can interface with various communications, including radio, landline, IP, satellite, and cellular services. Contact your local Federal Signal sales representative for more information.

Figure 1 UV Dimensions

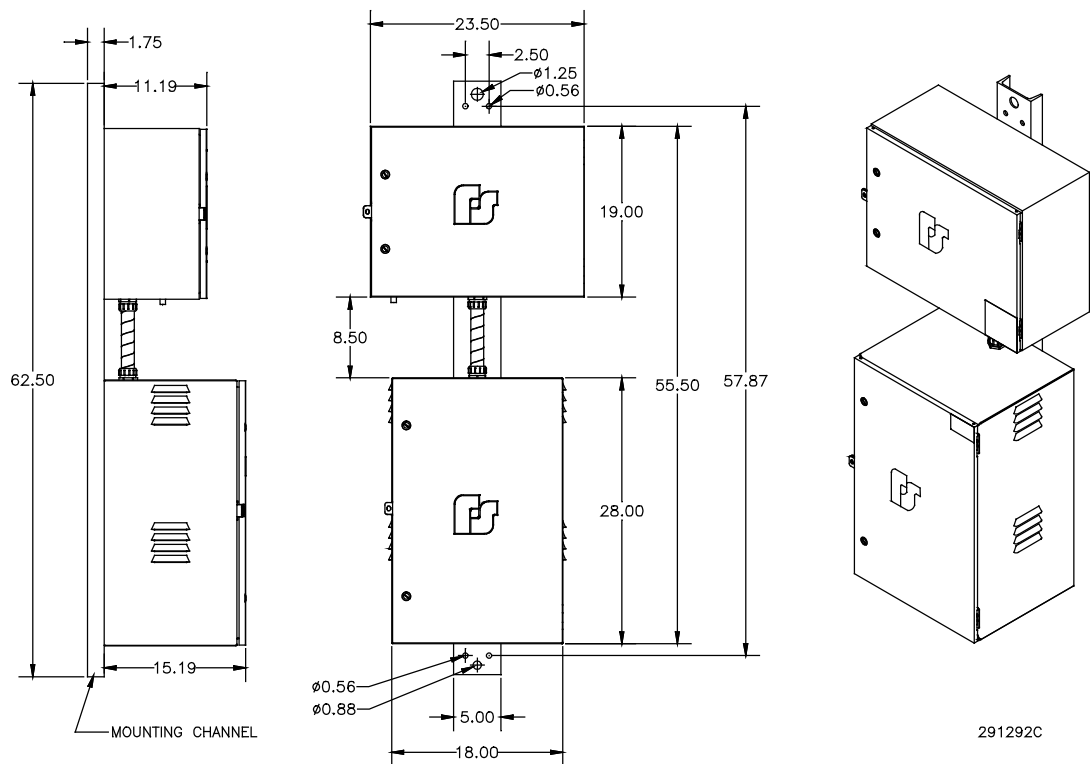

Overview

The UV controller contains the following components:

- Control Cabinet—Includes a card cage to mount a UV+ controller card, a UVARM (UltraVoice Audio Relay Module), and up to eight UV 400 amplifiers. The cabinet can mount radios, IP interface, or other communications equipment. A UV Control Cabinet comes standard with a UV+ control card.
- Battery Cabinet—Houses two or four batteries and a 24 Vdc charger. Optional battery heaters are available.

NOTE: Aluminum cabinet housing is standard, or optional 316 stainless steel is available.

Order the following separately:

- UV400 amplifier (1 to 8)
- UVARM (UltraVoice Audio Relay Module)
- Antenna system for radio communications
- Batteries
- DVSD—Digital voice microSD card to store voice and tone alerts

Features

The UV controller has the following features.

- Seven standard warning signals: wail, alternate wail, pulsed wail, steady, alternate steady, pulsed steady, and Westminster chime (auxiliary).
- Removable SD card for custom message generation. Store up to 4,093 voice or tone messages that total up to 17 hours of total recording time.
- Use local buttons (eight) for testing siren activation.
- Ability to interface with up to eight externally wired buttons for siren activation.
- Relay for local activation of strobes, LEDs, and legacy rotation siren designs.
- Siren activation verification through specialized Quiet Test.
- Ability to select or group amplifiers to create flexible zones.
- Volume control per message to optimize siren notification.
- Modular hot-swappable design to easily service cards without shutting off the power.
- Ability to stack multiple voice, tone, and relay functions to create complex siren notifications.
- Status system monitoring for system health and readiness.
- Flexible communications: radio (analog, P25, trunking, digital, broadband), satellites, cellular, landline, and IP.
- Flexible powering via 120 Vac or 230 Vac (nominal), or solar for battery charging, and 240 Vac (UVTR) for direct power with battery backup.
- Cellular and satellite communication options are available upon request. Contact your local Federal Signal sales representative for more information.
- Ability to mix various communication formats for high-system availability and redundancy.
- Secure communication with 128-bit or 256-bit encryption.
- Secure activation, programming, and status monitoring through the SS2000+ and Federal Signal Commander® Software.

- UVARM has the ability to send line level audio output to external equipment such as fire alarm panels or amplifiers, and relays for activation of strobes or LEDs.
- Power control ramps up siren or speaker volume for added safety, custom volume settings, and low power testing.

UV Controller Overview

The UV controller consists of two cabinets, which are bolted to a mounting channel for ease of shipping and installation. The Control Cabinet (NEMA 4X) houses a card cage for easy installation and maintenance of plug-in cards. The card cage has a capacity of ten cards consisting of the following:

- One controller position (UV+)
- One accessory position for optional audio and relay module card (UVARM)
- Eight amplifier positions (UV400)

Each UV400 amplifier provides 400 watts to drive any combination of speaker drivers up to 400 watts. Depending on the number of amplifier cards installed, eight power levels are available from 400 watts to 3200 watts.

Activation codes, command sequences, and operating parameters are uploaded from a computer through the RS232 port located on the front panel or over a communication channel with the Federal Signal Commander® Software. All information is stored in non-volatile memory that is immune to power and battery loss.

The control board, amplifiers, and optional equipment are all modularly constructed for easy removal. In most instances, field service is limited to replacing a slide-out module, which a non-technical person can perform with only a screwdriver.

The Battery Cabinet (NEMA 3R), the lower cabinet, houses rechargeable batteries. The cabinet houses two or four batteries depending on the number of amplifiers used and based on battery backup runtime and standby time. The lower and upper cabinets are interconnected by a conduit, which is sealed to prevent any harmful gases from entering the Control Cabinet. The AC charger or solar (regulator) maintains the charging of the batteries. The batteries provide power to the Control Cabinet. The batteries continue to provide power to the Control Cabinet in an AC power failure; typically, the standby minimum is seven days.

The UV400 amplifiers are ordered separately, and the number is based on the type of speaker array. Refer to the following tables to determine the number of amplifiers to order various siren combinations.

Directional Speaker Arrays (DSA)

Each UV400 amplifier is a 400-watt amplifier. Therefore, consult the following table to determine how many amplifiers are required to drive Directional Speaker Arrays (DSA) siren combinations. Use DSA speakers in 400-watt increments with UV400 amplifiers.

Table 1 DSA Power Rating Table

Model	Total Power
DSA2	200 W
DSA4	400 W
DSA6	600 W

For example:

If four DSA2 arrays are used with one UV controller:

4 x 200 watts = 800 watts or two UV400 amplifiers

When using DSA3 and DSA5, contact Technical Support for information regarding amplifier quantities.

Modulator Speaker Arrays

The Modulator® Electronic Siren Series consists of modules that use four 100-watt drivers. It also provides clear voice communication and offers warning signals (tone/voice) that are produced by the UV controller.

Table 2 UV400 Amplifier Selection Table

Quantity	Model Number	Total Power
One (1) UV400	MOD1004B	400 W
Two (2) UV400	MOD2008B	800 W
Three (3) UV400	MOD3012B	1200 W
Four (4) UV400	MOD4016B	1600 W
Five (5) UV400	MOD5020B	2000 W
Six (6) UV400	MOD6024B	2400 W
Eight (8) UV400	MOD8032B	3200 W

Options

Table 3 Options

Option	Description
UVARM	The UV supports an optional Audio and Relay Output Module (UVARM) that provides three audio outputs and four relay outputs to enable the UV to connect to existing PA systems or other auxiliary devices.
HTR4 (Battery Warmers)	In locations where temperatures may drop below freezing for extended periods, optional battery warmers are recommended to maintain battery efficiency.
PVS220W-24	The solar option allows the siren to operate in areas where power is not available. The PVS2110-24 model for the UV controller includes a solar regulator and solar panel kit.

Option	Description
Digital Voice Recording	When purchased, the Digital Voice option adds a microSD card capable of storing 17 hours or 4,093 pre-recorded messages.
UV25ST	The UV25ST allows the end-user the capability to reduce audio output from the 70 V _{rms} standard to the 25 V _{rms} standard. This option is beneficial when using the UV controller in an indoor warning application.
UVTD-IP	The UVTD-IP includes a network card that provides the capability to communicate over a network and provides audio decoding of digitized audio sent over the network.

Programming Methods

There are two methods of entering and reviewing the user programming information in a UV controller: Federal Signal Commander® Software and FSPWARE.

Federal Signal Commander Software (SFCDWARE)

SFCDWARE is computer software used to control, monitor, and configure the UV siren controller. The programming software communicates with the siren controller over the communication link. Refer to the Help menu provided with the software for operational details.

FSPWARE

FSPWARE is computer software for two-tone and DTMF-controlled systems. This software requires a direct connection between the UV controller and the computer's RS232 port through the use of a universal cable adaptor (included with FSPWARE) or a Universal Programmer (purchased through Federal Signal). Use FSPWARE for non-Commander® systems. Contact Technical Support for further information.

Status Monitoring

The UV controller provides monitoring of various system components and signals. The status of each of the following is communicated to Commander®. Status items monitored:

- Siren Type—Number of amplifiers
- Function State—Standby/Active
- Unit ID—Specific UV controller number
- Amplifier status*—Voltage and Current
- Audio A*—Pass/Fail
- Audio B*—Pass/Fail
- Master Current*—Pass/Fail
- Battery*—Battery voltage, Pass/Fail
- Charger—Pass/Fail
- AC Power—Pass/Fail
- Control Box Intrusion—Close/Open
- Battery Box Intrusion—Close/Open

- False Alarm/Local Activation*—Status of siren
- Rotation*—Pass/Fail for legacy rotating sirens

*Latched Items—remain set until the controller receives a Reset command or another function is run.

Status information is transmitted over the communications channel. Status reporting occurs when Federal Signal Commander® Software requests status or a report is received or any of the monitored circuits changes state.

Specifications

Table 4 Batteries (user-supplied)

Battery Voltage at 72°F (22°C)	27.2 Vdc nominal
--------------------------------	------------------

Refer to the Federal Signal Website www.fedsig.com (document Battery Information I SYS5012) for currently recommended batteries. The use of batteries other than those specified may degrade the operation of this product and void the warranty. Batteries are user-supplied.

Table 5 Specifications

AC Power	108-132 Vac, 120 Vac nominal, 3.0 A nominal 216-264 Vac, 240 Vac nominal, 1.6 A nominal
Bulk Charge Current, I_{BULK}	5 A, +/- 10% at 25°C
Float Charge Voltage, V_{FLOAT}	Jumper Selectable from 26.4 to 27.6 V, +/- 0.75%
Trickle Charge Current, I_{TC}	2.0 A, +/- 20%
Input Voltage	120/240 Vac $\pm$ 10%, 50/60 Hz single-phase (two separate models)
Input Current	7 A Max.
Battery Input Voltage	24 V (nominal)
Operating Voltage	24 Vdc
Standby Time	> 7 days
Continuous Signaling Time	30 min.
Control Module	
Signal Duration (auto reset)	3 min. max
Microphone Input Impedance	10 k Ω
Audio Distortion	10% THD max.
Sensor and Activation Contact Closure	(min) 500 ms < 2 k Ω
Amplifier Module	
Frequency Response	(300 to 3 kHz) $\pm$ 3 dB (ref. 1 kHz)
Output Voltage (Tone and PA)	(to speaker drivers) 67 V _{rms} (nominal)
Input Impedance	(per amplifier) 100 k Ω
Enclosures	
Control Cabinet	Type 4X
Battery Cabinet	Type 3R
Operating Temperature	-40° to 149°F (-40° to +65°C)
Humidity	0% to 98% non-condensing

NOTE: HTR2 or HTR4 battery heater option is required for a -40°C temperature rating.

Table 6 Physical

UV400 Amplifiers (Height x Width x Depth)	10.5 x 2.0 x 8.5 in (26.7 x 5.1 x 21.6 cm) Weight 4.1 lb (1.9 kg)
Control Cabinet (Height x Width x Depth)	19.0 x 23.5 x 11.2 in (48.3 x 59.7 x 28.4 cm)
Battery Cabinet (Height x Width x Depth)	28.0 x 18.0 x 15.2 in (71.1 x 45.7 x 38.6 cm)
Net Weight	170 lb (77.1 kg)

Table 7 Relay Output (JP11)

Contact Rating	30 Vdc, 15 A
----------------	--------------

Table 8 600 ohm Balanced Line Port

Audio Input Level	0.10 to 2 V_{DD} to make 1 V_{DD} at TP10
Audio Output Level	0.25 to 2.0 V_{DD}

Table 9 Remote Activation, Sensor, and Direction Inputs

Number of Remote Activation Inputs	8
Number of Remote Sensor Inputs	4
Number of Direction Sense Inputs	4
Input Type	Optically Isolated activated by Dry Contact closure < 2 kΩ

Table 10 Audio Power Amplifier Modules Model (UV400)

Input Voltage	24 Vdc nominal 28 Vdc maximum
Input Current Siren Mode	At 24 Vdc with 1 kHz squarewave into 11 Ω : < 20 A
Input Current Voice Mode	At 24 Vdc with 1 kHz tone set to 67 V _{rms} into 11 Ω : < 24 A
Standby Current with Amplifiers Turned Off	< 10 mA
Efficiency	> 90% (siren mode) > 80% (voice mode)
Output Voltage into 11 Ω at 1 kHz and 24 Vdc Nominal Operating Voltage	67 V _{rms} nominal at 400 W (siren mode) 67 V _{rms} nominal at 400 W (voice mode)
Duty Cycle, Continuous Signaling Times	Siren Mode 30 minutes Digital Voice or PA 30 minutes (depending on signal source)
Audio Distortion	< 10% voice mode, below clipping
Frequency Response	+/- 3 dB, 300 to 3000 Hz
Power Low Power Mode	< 5 W per amplifier

Table 11 Signaling Formats

Number of Codes	Up to 200 activation codes maximum
Functions Allowed Stacked Under Each Code	Up to 20
Two-Tone Sequential or Single Tone Frequency Range Tone Timing Inter-tone Gap Tone Accuracy Tone Spacing	282-3000 Hz First tone: 0.5 seconds minimum Second tone: 0.25 seconds minimum 8 seconds maximum for both 400 ms (maximum) +/- 1.5% 5.0% preferred, 3% minimum
Single Tone Frequency Range Tone Timing Tone Accuracy Tone Spacing	282-3000 Hz 0.5-8 seconds maximum +/- 1.5% 5.0% preferred, 3% minimum
DTMF String Length Mark/Space Timing: Decoder Minimum Decoder Maximum Encoder Space Between Stacked Codes	All timings in milliseconds 3-12 standard DTMF characters 50 ms/50 ms (below 50/50 consult factory) 800 ms total mark/space timing per code 100 ms/100 ms mark/space timing minimum 1.25 seconds
AFSK Baud Rate Modem Type Mark Frequency Space Frequency Error Checking	1200 bps MSK (minimal shift key) 1200 Hz 1800 Hz 16 bit CRC
EAS	Supports standard EAS codes and wildcards
POCSAG Not applicable to the UVRI-B.	Supports Binary frequency shift keying 512 Baud numeric messages
Decode Sensitivity	18 dB SINAD for tone (except with CTCSS tones > 200 Hz and decode tones < 400 Hz) and 21 dB SINAD for MSK, EAS, POCSAG and DTMF with 50 ms/50 ms or greater timing
Two-Way Formats	Federal Packet Digital and DTMF

Installation

⚠ DANGER

ELECTROCUTION HAZARD: *Electrocution or severe personal injury can occur when making electrical connections, drilling holes, or lifting equipment. Therefore, experienced electricians in accordance with national and local electrical codes, acting under the direction of the installation crew safety foreman, should perform installation.*

⚠ DANGER

EXPLOSION HAZARD: *Explosive gases and corrosive materials may be present. To prevent explosion or severe personal injury, installation technicians must be experienced with the safe installation of lead-acid type batteries.*

⚠ WARNING

SOUND HAZARD: *The output level of high-powered speakers is capable of causing permanent hearing damage. To prevent excessive exposure, carefully plan placement of siren and post warnings. To prevent excessive exposure to installers and service personnel, adequate measures must be taken to ensure that the sirens are not activated while they are within 150 feet of the speaker array or provide proper ear protection.*

The Yagi and Omni Antennas Installation manual is available for download at the Federal Signal website.

ICM-UV Checklist

Before installing, commissioning, or performing maintenance, download the ICM checklist for the UV:

1. Go to www.fedsig.com.
2. Select Resources.
3. Click Resource Library.
4. Search for ICM-UV Checklist.
5. Click Download.

Recommendations on UV Controller Location

First, consider the mounting location of the UV controller. You can mount the UV controller indoors or outdoors. To avoid losses in speaker power, install the speaker array and UV controller without lengthening the 40-foot interconnecting cable supplied. If it is necessary to make a longer cable run, increase the wire size of the entire cable to 12 AWG or larger.

Install the UV controller out of the reach of vandals and apply any state or local noise control ordinance. The Control Cabinet and Battery Cabinet are both supplied with hasps for padlocking security. The UV controller requires a 120 Vac or 240 Vac 50 to 60 Hz power source (model dependent).

You can use several methods to activate the UV controller. Use the manual activation

switches to activate the UV controller locally. Use landline controls through normally open contact switches. Make connections directly to the backplane motherboard terminal block. Activate the control through the optional radio receiver or an external 600-ohm audio source.

The Control and Battery Cabinets are shipped mounted on an aluminum channel with four mounting holes for 1/2-inch bolts. One 1-1/4 inch hole is a convenient lifting point. The total weight of the UV controller, not including user-provided batteries, is in the following table. Ensure that the mounting surface and fasteners can safely sustain the weight of the assembly. Add each UV400 amplifier to obtain the total weight.

Table 12 UV Weight

Model Number	Weight
UV	170 lb (77.1 kg) Net weight, without user-provided batteries
UV400	4.1 lb (1.9 kg) each

UV Controller Installation

Most siren installations are one of two types: Pole Mount or Flat Surface Mount. These two configurations make it possible to install a siren in almost any situation. If the installations in this manual are not suitable, modification of one of the configurations may be practical.

Many factors affect the propagation of sound over various types of terrain and changing weather conditions. Consult FEMA CPG 1-17 and CPG 1-14 and your local Federal Signal representative to place your outdoor warning equipment properly.

Pole Mounting

A typical pole-mounted siren installation is shown in "Figure 2 Typical Siren Installation Drawing" on page 23. The siren is mounted on a Class 2 utility pole (ANSI type wooden pole or equivalent) with a minimum horizontal ground stress rating of 3,700 pounds (1682 kg). (Ensure that soil loads will conform to this size utility pole.)

NOTE:

- Certain soil conditions may require guying for the pole. Check with proper building authorities.
- The speaker array installation is covered in a separate set of instructions supplied with the array.

To install the UV controller to a wooden utility pole:

1. Uncrate the siren control. Remove the plastic bag attached to the conduit that is connected between the Control Cabinet and the Battery Cabinet.
2. Unlock the Control Cabinet and the Battery Cabinet. Inspect the Control Cabinet and Battery Cabinet for any damage. Report any damage immediately to the shipping company and file a claim. Inform Federal Signal of the damage.
3. Install the wooden utility pole following accepted standards and practices.
4. Install the speaker array on the pole following the instructions supplied with the array.

5. Mark the four mounting holes on the pole for the UV controller. Attach the cabinets to the pole at a height that is accessible to service personnel but discourages vandalism or as specified per contract.
6. Drill a 3/8-inch pilot hole at each of the locations. Drill each hole at least 3-1/2 inches (90 mm) deep.
7. Use a crane or mechanical hoist to lift the UV controller to the desired height along the pole. Attach the UV controller to the pole using four user-supplied 1/2-inch by 5-inch lag bolts. Slide a user-supplied 1/2-inch flat washer onto each bolt before threading the bolt into the pole.
8. Attach the UV controller to the pole using four user-supplied 1/2-inch by 5-inch lag bolts. Slide a user-supplied 1/2-inch flat washer onto each bolt before threading the bolt into the pole.
9. Mount a user-supplied fused disconnect switch on the pole beneath or beside the UV controller.

See "Electrical Connections" on page 25.

Flat Surface Mounting

⚠ WARNING

SOUND HAZARD: Post notices at all roof access points indicating that a roof-mounted siren is installed and may cause hearing damage. When installing the siren on a flat roof, ensure that the loudspeakers clear parapets or other obstructions by at least ten feet.


The total weight of the UV controller is listed in the Specifications section. Make sure that the mounting surface and mounting method selected can safely sustain the weight of the assembly and user-provided batteries. The mounting method used must be able to withstand external mechanical stresses that may be applied to the assembly (such as applicable wind loads for the area). Consult building authorities in your area for recommendations regarding local ground conditions and wind loads.

To install the UV controller to a flat surface:

1. Install the speaker array on the roof, following the instructions supplied with the array.
2. Attach the template to the wall and mark the four mounting holes on the pole for the primary UV controller.
3. Drill a 3/8-inch pilot hole at each of the locations. Drill each hole at least 3-1/2 inches (90 mm) deep.
4. Use a lift to lift the UV controller to the desired height along the pole.
5. Attach the UV controller to the wall using four user-supplied 1/2-inch by 5-inch lag bolts. Slide a user-supplied 1/2-inch flat washer onto each bolt before threading the bolt into the pole.
6. Install a user-supplied, fused, disconnect switch. Use the proper type required by the authority having jurisdiction in your area.
7. If the speaker array is installed on the roof of the building, it may be desirable to install the UV controller inside the building, if practical.



Figure 2 Typical Siren Installation Drawing

TYPICAL SIREN

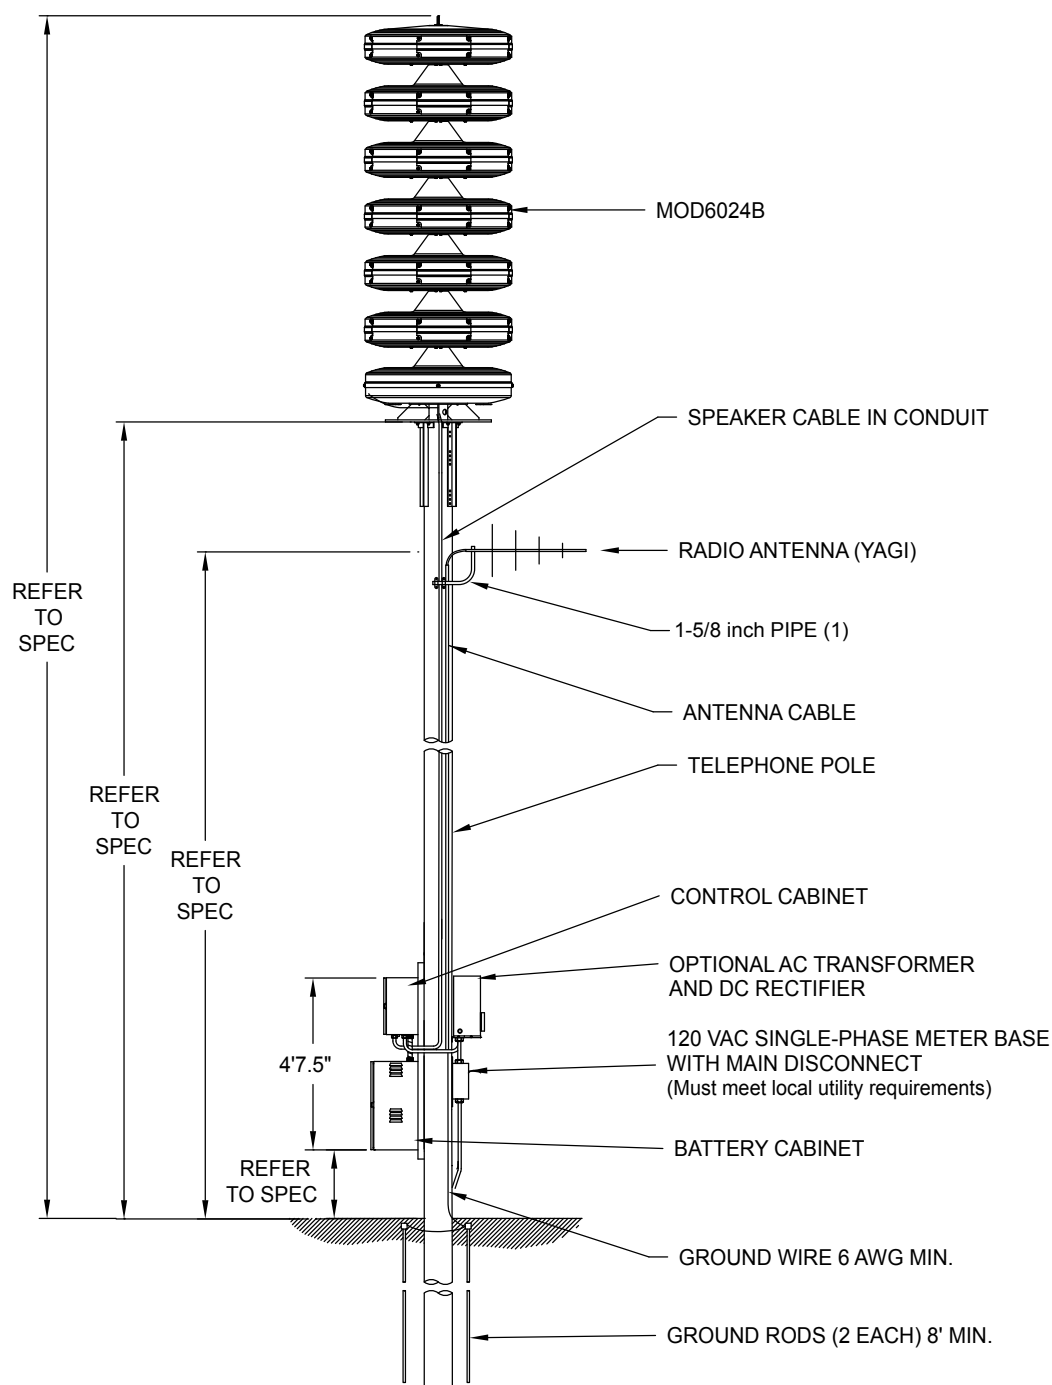

291164D

Figure 3 Flat Surface Mounting

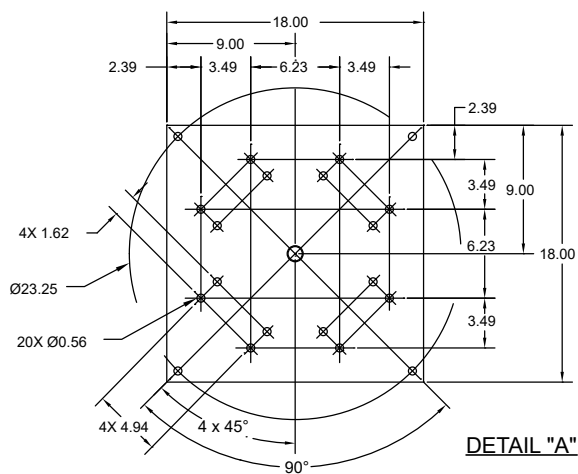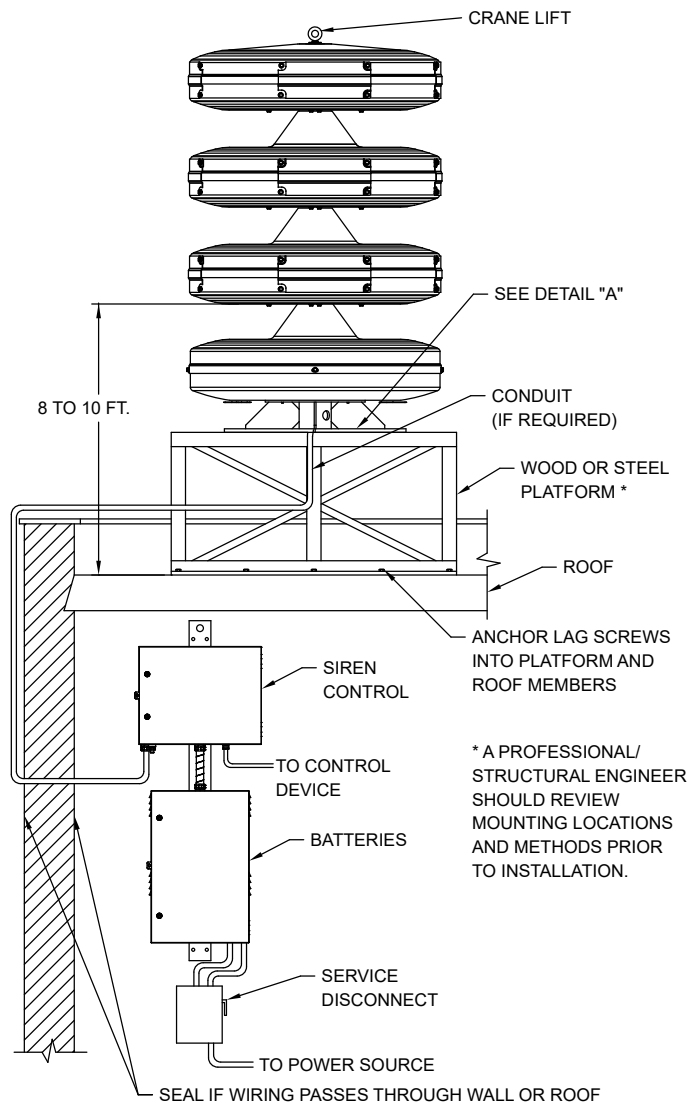

291170D

Electrical Connections

⚠ WARNING

SHOCK HAZARD: *Install the siren electrical system in compliance with local electrical codes and NEC recommendations. Federal Signal also recommends that all user-installed conduit connections enter from the bottom of the cabinet. Disconnect all power and read all warnings at the beginning of this manual and on the batteries before making connections.*

⚠ CAUTION

INSTALLATION PRECAUTIONS: *The siren and control system must be solidly connected to an earth ground. If the siren is installed in a building, ground the system to a metallic object known to be grounded.*

For pole mount installations, drive a metal rod or bar at least 8 feet into the ground, as close as practical to the base of the pole. Use a separate, continuous 6 AWG or larger wire from the siren frame to ground and from the cabinet of each siren control system to ground.

NOTE: Seal and protect conduit connections to prevent water entry and corrosion in the Control Cabinet.

Power Connections

To connect the wires in the Control Cabinet:

1. Route 1/2-inch conduit (steel preferred) between the user-supplied, fused disconnect switch and the conduit-fitting hole in the bottom right of the Control Cabinet enclosure. Use weatherproof switches, electrical boxes, and connectors to prevent water entry and corrosion.
2. Route two user-supplied power wires and a ground wire through the conduit that was just installed between the Control Cabinet and the fuse disconnect box. Use wires no smaller than 14 AWG.
3. Connect the ground wire to the green and yellow DIN mounted terminal block or the cabinet ground stud. Verify the appropriate siren model was purchased. 240 Vac models contain a step-down transformer pre-wired to the DIN rail located on the right side of the Control Cabinet.
4. Connect the two AC power wires to the DIN-mounted terminal blocks labeled L1 and L2.
5. Connect the power wires and the lightning protector to the AC disconnect box per instructions provided with the lightning protector and governing electrical codes.

Signal Connections

Refer to the following table for speaker wire connections. Module locations are 0 at the bottom, 1 next up, etc. See Figures 4 through 6 for AMP location on the backplane motherboard.

If the UV controller is going to replace an existing controller, re-wire the siren as shown in Appendix C, “Wiring Diagrams,” before making the speaker connections. Improper installation can damage the drivers.

Table 13 Modulator Speaker Wiring (MOD1004B-MOD8032B)

Terminal Number	Wire Color	Module Location	Siren Model
JP21-1	White/Brown	1	1004,2008,3012,4016,5020,6024
JP21-2	Brown	1	1004,2008,3012,4016,5020,6024
JP22-1	White/Red	2	2008,3012,4016,5020,6024
JP22-2	Red	2	2008,3012,4016,5020,6024
JP23-1	White/Orange	3	3012,4016,5020,6024
JP23-2	Orange	3	3012,4016,5020,6024
JP24-1	White/Yellow	4	4016,5020,6024
JP24-2	Yellow	4	4016,5020,6024
JP25-1	White/Green	5	5020,6024
JP25-2	Green	5	5020,6024
JP26-1	White/Blue	6	6024
JP26-2	Blue	6	6024
JP27-1	White/Violet	7	8032
JP27-2	Violet	7	8032
JP28-1	White/Grey	8	8032
JP28-2	Grey	8	8032

NOTE: See Appendix C, “Wiring Diagrams,” for drawing examples.

To mount the speaker wiring:

1. Mount a user-supplied junction box between the two Control Cabinets.
2. Run 1-inch flexible conduit from the junction box to the Control Cabinet’s 1-inch conduit hole on the bottom of the top cabinet.
3. Wire the speaker cable into the Control Cabinet as shown in the tables.

Figures 4 through 6 illustrate the AMP location on the backplane motherboard.

Figure 4 UV Backplane Motherboard (AMP1 to AMP 4)

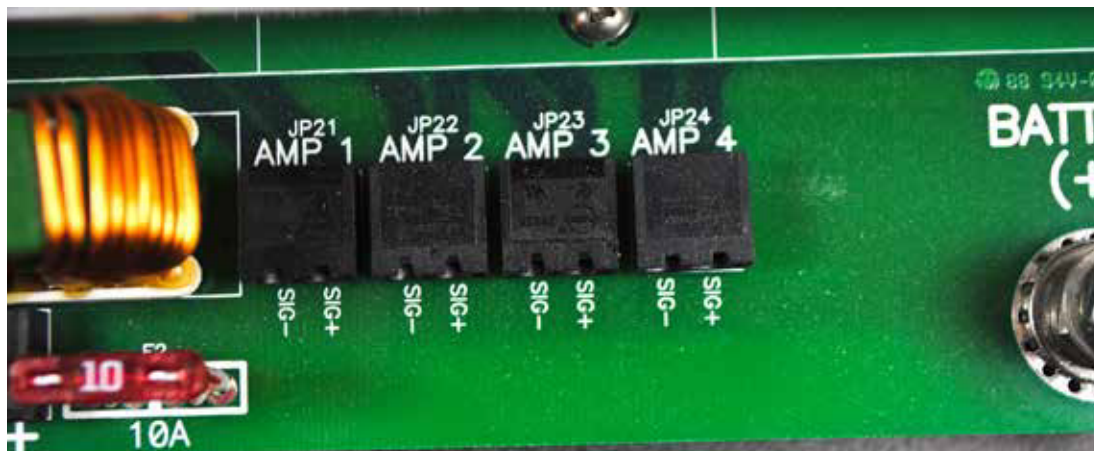


Figure 5 UV Backplane Motherboard (AMP 5)



Figure 6 UV Backplane Motherboard (AMP 6, AMP7, and AMP8)



Speaker Wiring for DSA Series Sirens

DSA speaker arrays range in size from 200 watts to 600 watts. The UV controller may drive multiple combinations of DSA speakers up to 3200 watts of power. Each UV amplifier is designed to drive an 11-ohm impedance, which corresponds to two series pairs of DSA speakers wired in parallel (400 watts).

Because you may use any combination of DSA arrays with a UV controller, all possible wiring diagrams are not shown in this manual. See Appendix C, "Wiring Diagrams," for drawing examples.

The controller's 400-watt amplifier outputs are labeled JP21 through JP28. Position two on these outputs connects to the solid-colored wires from the DSA array. Position one connects to the corresponding striped wire from the DSA array.

Table 14 Wiring example for four DSA6 speaker arrays

Terminal No.	Wire Color	Drivers	Array
JP21-1	White/Brown	A,B,C,D	DSA6 #1
JP21-2	Brown	A,B,C,D	DSA6 #1
JP22-1	White/Brown	A,B,C,D	DSA6 #2
JP22-2	Brown	A,B,C,D	DSA6 #2
JP23-1	White/Brown	A,B,C,D	DSA6 #3
JP23-2	Brown	A,B,C,D	DSA6 #3
JP24-1	White/Brown	A,B,C,D	DSA6 #4
JP24-2	Brown	A,B,C,D	DSA6 #4
JP25-1	White/Red	E,F	DSA6 #1&2
JP25-2	Red	E,F	DSA6 #1&2
JP26-1	White/Red	E,F	DSA6 #3&4
JP26-2	Red	E,F	DSA6 #3&4

Battery Hookup

⚠ DANGER


SHOCK HAZARD: When installing or removing batteries, take care to avoid shorting battery terminals to the metal Battery Cabinet. Failure to do so could result in serious personal injury or death. Batteries that are mis-wired can cause serious personal injury or death. Read and understand the following information before making actual connections.

The end user must obtain batteries to install in the lower cabinet(s) as listed in the Specifications section of this manual.

To wire batteries:

1. Remove the accessory kit from the Battery Cabinet.
2. Connect the wires as shown in the appropriate system wiring diagram for the model of UV purchased. See Appendix D, "Drawings."
3. Apply Battery Terminal Protector spray to battery terminals after wiring to prevent corrosion.

Figure 7 Battery Wiring Diagram

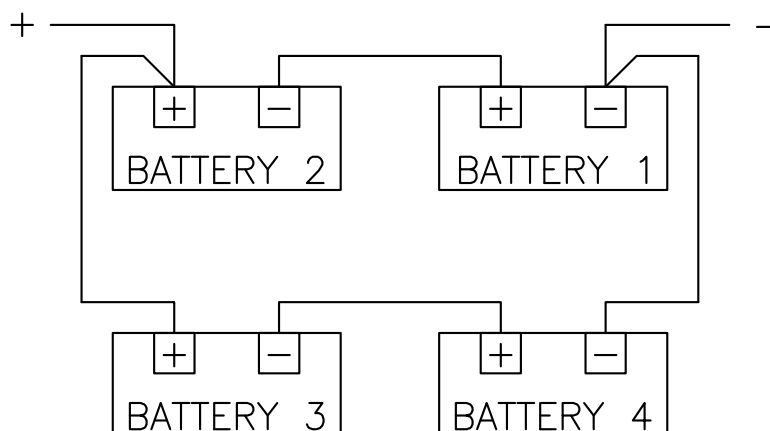

NOTE: Batteries are not required.


Model HTR4 (Battery Warmers)

⚠ CAUTION

VOLTAGE REQUIRED: Battery Warmers require 120 Vac.

In locations where temperatures may drop below freezing for extended periods, optional battery warmers are recommended to maintain battery efficiency. A thermostat provides on/off control of the warmers that senses the inside temperature of the Battery Cabinet. The battery warmer option is equipped with four battery warmers that are wrapped around each of the four batteries in the Battery Cabinet. The warmers are plugged into the cube taps, which plug into the thermostat cube, which is plugged into a 120 Vac outlet that is provided for in the Battery Cabinet. No other connection or mounting is required for this option.

Figure 8 HTR4 Wiring Diagram

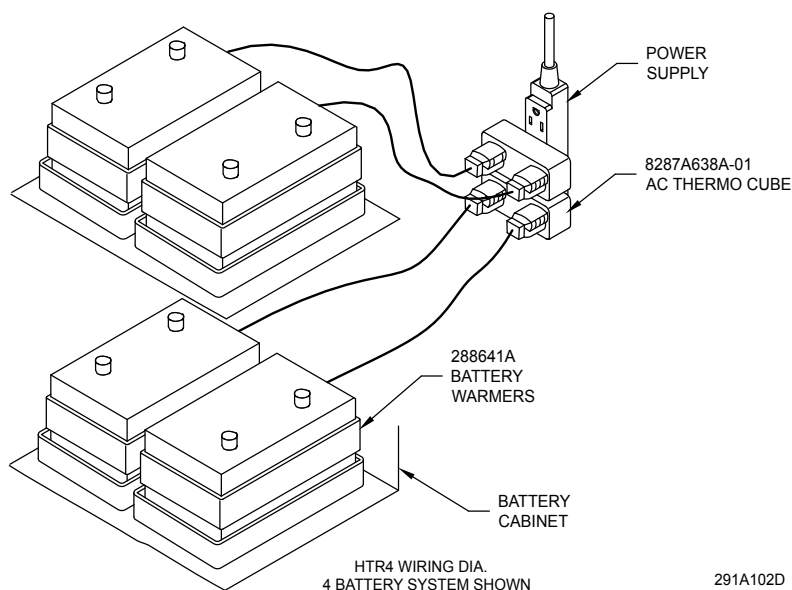

⚠ DANGER

ELECTROCUTION HAZARD: *Electrocution or severe personal injury can occur when making electrical connections, drilling holes, or lifting equipment. Therefore, only experienced electricians should install this product in accordance with national and local electrical codes.*

Solar Power (PVS220W-24)

The solar option allows the siren to operate in areas where power is not available. The PVS2110-24 model for the UV controller includes a solar regulator and solar panel kit. When installed, the batteries are charged by the battery charger through the photovoltaic charging system, instead of a battery charger, to provide operational power to the siren. The Solar Power Option Installation manual is available for download at the Federal Signal website.

Installation of Other Manufacturers' Radio Receivers

⚠ CAUTION

Improper installation of radio control equipment may cause the siren to malfunction or operate intermittently. Installation must only be performed by experienced radio technicians who have thoroughly read this manual.

- TUNING—Tune the radio receiver to the manufacturer's specifications.
- POWER—Determine the radio power requirements. The UV+ Controller provides +12 Vdc on the RADIO connector on the front panel.

Table 15 Radio Connector, 8 pin MOD jack

1	Receive Audio, 300 mV – 10 V _{pp}
2	Transmit Audio, 50 mV – 3 V _{pp}
3	Carrier Detect - active low
4	PTT
5	+12 Vdc
6	GND
7	+12 Vdc
8	GND

Do not use this voltage source for radios that draw more than 1.5 A of current in transmit. Use both grounds and both +12 Vdc connections for current handling. If a higher current output is required, purchase a 24 Vdc to 12 Vdc voltage converter. The UVT series models include this converter. Do not use one of the 12 Vdc batteries to run the radio equipment.

- RX AUDIO—Connect the UV+ Controller Receive Audio Input to the de-emphasized Audio Output of the radio. Use shielded audio grade cable and keep wire runs as short as possible. The Receive Audio level can vary from 300 mV to 3 V_{pp} unclipped.
- TX AUDIO—The Transmit Audio output is adjustable from 50 mV to 3 V_{pp}.

- C.D.—The carrier detect signal from the radio must pull to ground when active. The radio carrier detect signal is useful for controlling live PA announcements. When the C.D. signal is removed from the controller for over 5 seconds, the controller automatically cancels the PA function, which eliminates the need to broadcast the cancel tones over the speakers.
- PTT—The PTT output pulls to ground when active to key the radio.

Pre-operation Checkout and Testing

Before installing, commissioning, or performing maintenance, download the ICM checklist for the UV:

1. Go to www.fedsig.com.
2. Select Resources.
3. Click Resource Library.
4. Search for ICM-UV Checklist.
5. Click Download.

Amplifier and Speaker Pre-Operation Checkout (Non-Active Mode)

With an ohmmeter, measure the speaker terminal strips at the bottom of the backplane motherboard for each amplifier and measure the resistance at the output of that amplifier. The resistance is approximately 4.5 ohms. A different reading indicates a possible wiring error or faulty driver in the speaker array. Since the 400-watt speaker circuits are comprised of two sets of series wired speaker drivers connected in parallel, if one of the drivers in a circuit were to open, you measure approximately 9 ohms. If you are using 200-watt DSA speaker combinations, you measure a 10.8 ohms reading across the 200-watt load.

⚠ WARNING

SOUND HAZARD: The output sound level of a siren is capable of causing permanent hearing damage at short distances; sound levels may exceed 150 dB. Therefore, always wear adequate hearing protection when performing tests or maintenance on the siren.

Supply power to the siren to charge the batteries for a period of 24 hours prior to operation of the siren in order to ensure full charge of the batteries. (Alternatively, charge the batteries externally before installation following the battery manufacturer's recommendations.) The typical battery voltage is 27.2 Vdc when fully charged at room temperature. (See "Specifications" on page 17 for details.)

Testing Battery Charge

After charging the batteries, test siren operation:

1. Disconnect all amplifier terminal strip connectors from the bottom of the backplane motherboard.
2. Press one of the manual activation switches to start one of the pre-programmed functions. Signal A LED and signal B LED light on the control, indicating that the tone is being generated from the control module and the amplifier power and output LEDs are lit.
3. Momentarily insert the terminal strip connectors sequentially for each amplifier. You hear the siren tone from the speaker array for the duration of the time that the connector is installed. (Amplifier output points on the connector read 67 Vac_{rms} nominally; this level reads higher when you remove the speakers.)
4. Cancel the signal tone or wait for it to time out (typically 3 minutes). You can insert all of the terminal strip connectors and activate any or all signals for full-volume siren testing.

Initial Checkout

The siren is now ready to operate as a stand-alone device with control from the front panel. To remotely control this siren through a landline, terminal blocks are located at the bottom of the backplane motherboard labeled REMOTE ACTIVATION INPUTS (JP14). A momentary, dry contact closure between COM and any other JP14 terminal activates the associated function.

The SIG OUTPUT LED indicates that the amplifier output signal level is sufficient for siren signal operation. The audio LED is on when the amplifier is transmitting.

Final Testing

Refer to the factory data sheet and unit programming data sheet that were shipped with the controller.

- If the controller is using two-way communication, calibrate the Quiet Test function by pressing switches 2 and 3 on the front panel at the same time.
- Test all siren signals at this time by momentarily pressing the appropriate switch on the control module front panel or, if possible, by radio activation. If included, test the optional radio interface at this time. Test and verify the proper operation of all functions over the radio system. If there is two-way radio communication, then check the Central UV controller base station reports for failures.
- After the installation is complete and the siren is operating properly, padlock the Control Cabinet and Battery Cabinet to discourage vandalism.
- A factory test data sheet and unit programming data sheet were shipped with the controller. Keep these data sheets for future reference.

Operations


The modular UV controller contains a card cage with ten plug-in cards consisting of the following:

- One controller card slot (UV+)
- One optional accessory slot (UVARM)
- Eight amplifier slots (UV400)

You can vary the number of amplifier cards from one for a 400-watt system up to a maximum of eight for a 3200-watt system. All siren control, audio generation, and remote communication functions are handled by the UV+ controller card. The backplane motherboard contains connectors and terminal blocks for the interconnection of the other system components. Power for the UV Controller and siren is supplied by two or four deep cycle marine batteries. AC and solar battery charger options are available.

UV Controller Front Panel Indicators

Figure 9 UV+ Controller Front Panel Indicators

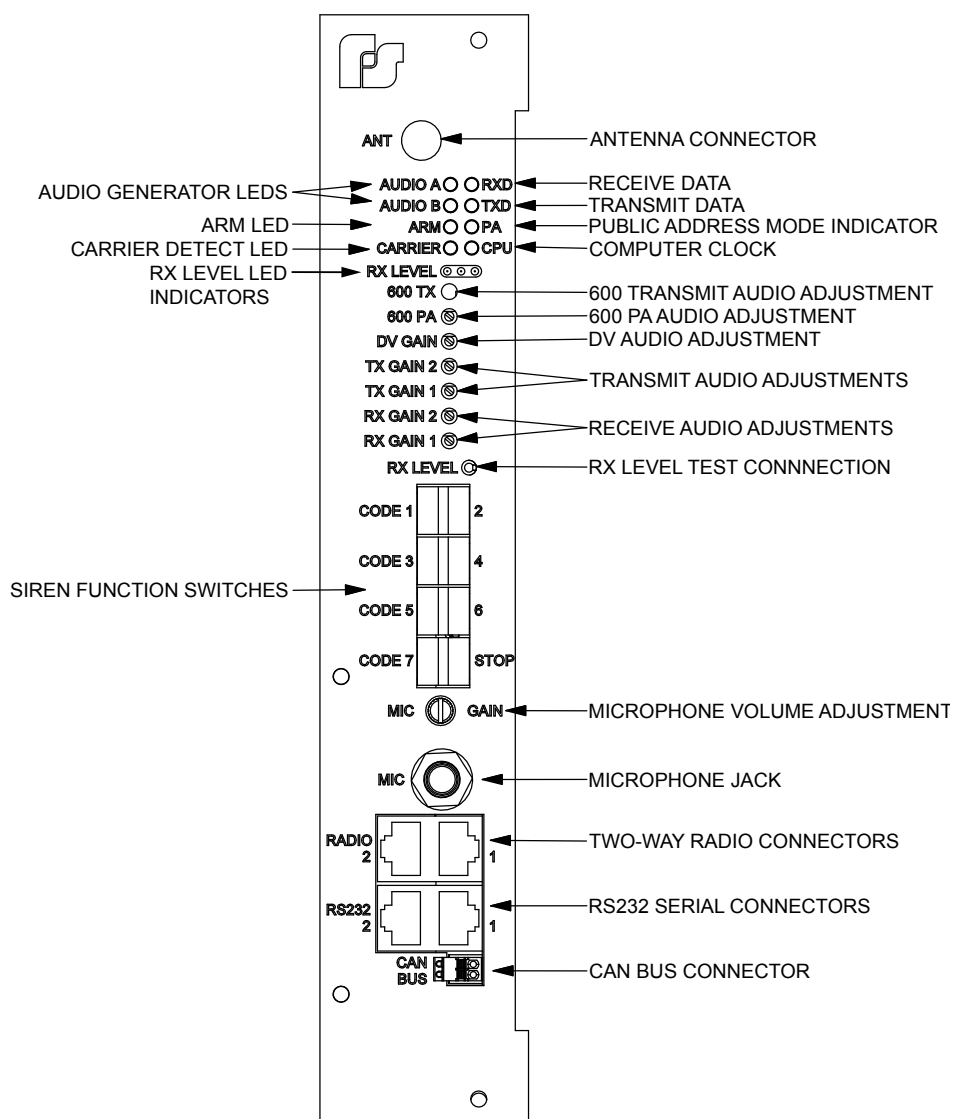

The following table provides the descriptions of the front panel indicators. See Figure 9 on page 33.

Table 16 Front Panel of UV+ Controller Card

Labels	Activate with a hold time > 0.50 seconds
ANT	Antenna connector when used with a one-way radio receiver
AUDIO A LED	Audio present on channel A
AUDIO B LED	Audio present on channel B
ARM LED	Unit Armed indicator
CARRIER LED	Radio frequency (RF) carrier indicator ON with carrier present
RXD LED	Receive serial data, DTMF, and digital
TXD LED	Transmit serial data, DTMF, and digital
PA LED	Public Address mode indicator
CPU LED	Microprocessor heartbeat
RX LEVEL LED	Three-stage LED bar graph


The following table provides the descriptions of the front panel controls. See Figure 9 on page 33.

Table 17 Front Panel Controls for UV+ Controller Card

600 TX LED	600 Ω audio transformer Transmit (TX) level adjustment.
600 PA LED	600 Ω audio transformer Public Address (PA) level adjustment.
DV GAIN LED	Volume adjustment for Digital Voice option. Internal Digital Voice level sufficient to drive TP5 or TP6 into clipping.
TX GAINs LED	Transmitted audio adjustable from 50 mV to 1 V _{pp}
RX GAINs LED	Received audio adjustable from 300 mV to 3.00 V _{pp}
RX LEVEL LED	Test point for the meter probes.
MIC GAIN	Mic level adjustment.
CAN BUS	Input for Controller Area Network (CAN) BUS.

UV400 Amplifier Front Panel Indicators

Figure 10 UV400 Amplifier Front Panel Indicators

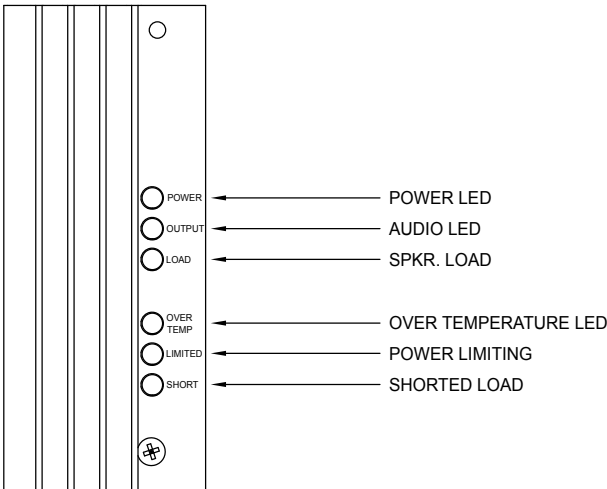

The following table provides the description of the UV400 amplifier front panel indicators.

Table 18 Front Panel Indicators for Model UV400 Amplifier

POWER	Power LED is only on during activation.
OUTPUT	Audio LED is on when the amplifier is transmitting.
LOAD	Speaker load is on during activation with speaker load
OVER TEMP	Over Temperature LED is on when the amplifier reaches an over-temperature condition. Call Technical Support if the light remains on.
LIMITED	Power Limiting is on or flashing during activation when overdriving the amplifier.
SHORT	Shorted Load is on when load appears shorted.

Basic UV+ Controller Programming

The following information is the minimum required configuration of the UV+ Controller. FSPWARE or Commander® is required.

Unit Type

The Unit Type is set to the type of siren this unit is controlling and is usually determined by the number of cells in the speaker array. When setting up the unit type, the user selects from a menu with the following choices.

Table 19 Unit Type Selection Table

Unit type	Quantity	Siren Type	Total Power
UV - 1	One (1) UV400	MOD1004B	400 W
UV - 2	Two (2) UV400	MOD2008B	800 W
UV - 3	Three (3) UV400	MOD3012B	1200 W
UV - 4	Four (4) UV400	MOD4016B	1600 W
UV - 5	Five (5) UV400	MOD5020B	2000 W
UV - 6	Six (6) UV400	MOD6024B	2400 W
UV - 8	Eight (8) UV400	MOD8032B	3200 W

Activation Formats

For Two-Tone activated units, the Two-Tone Timing parameters configure the time duration of the activation tone codes. The three parameters, A-Time, B-Time, and S-Time, set the time duration for the A-tone, B-tone, and Single-Tone respectively.

NOTE: The Two-Tone timing parameters are minimum values only. The actual tone times may be longer than the specified times.

- Single tone, two-tone, DTMF, MSK, EAS, and POCSAG decoders for remote siren control
- DTMF or MSK encoders for remote status monitoring

User Programs

The UV controller has the capacity to store up to fifty user programs. Each user program contains twenty stacked function items.

Assigning more than one function to each activation code or user program allows you to run a sequence of functions without sending additional activation commands.

Activation Functions

Table 20 Activation Functions


Function	Definition
Arm	Arms the siren.
Disarm	Disarms the siren.
Wail	Sound Wail siren tone.
Pulsed Wail	Sound Pulsed Wail siren tone.
Alternate Wail	Sound Alternate Wail siren tone.
Steady	Sound Steady siren tone.
Pulsed Steady	Sound Pulsed Steady siren tone.
Alternate Steady	Sound Alternate Steady siren tone.
Auxiliary (Chime)	Sound Auxiliary siren tone. The Auxiliary tone is normally set for Westminster Chimes.
Digital Voice (1-250 DV messages)	Enter the desired digital voice number to run and click OK. If voice number is not between 1 and 250, an error message box appears.
Dynamic Voice	Plays a sequence of digital voice messages specified at the time of activation. This function is only applicable for sirens equipped with a special vocabulary chip.
Public Address	Broadcast live radio PA. PA remains active until carrier has dropped for ten seconds or until 4-1/2 minutes has elapsed, whichever occurs first.
Play Recorded PA	Play message previously recorded during the "RECORD PA" function. For EAS activation, the message repeats continuously for the duration of time encoded in the TTTT field. For non-EAS activation, the "PLAY RECORDED PA" function plays once without repeats.
Quiet Test	Performs a self-test of the siren's amplifiers and speakers by sounding a 20 kHz tone.
Cancel	Terminates active function.
Report	Send unit status to base.
Master Reset	Terminates active function and clears latched status.
Plus Phase	All functions between "PLUS PHASE" and "MINUS PHASE" repeat for the duration of time encoded in the EAS activation frame (EAS activations only).
Minus Phase	All functions between "PLUS PHASE" and "MINUS PHASE" repeat for the duration of time encoded in the EAS activation frame (EAS activations only).
Phase Off	Turn off the minus and plus phases and return the siren to omni-directional mode.

Function	Definition
Low Power/ High Power	Causes the siren to operate at a greatly reduced volume level. Upon activation of a user program, the siren defaults to High (normal) volume level. This command must follow an ARM command. Reduced volume mode remains in effect for all subsequent functions in a user program that follow the Low Power function or until a High Power function occurs or an ARM command is sent. The Low Power function is one watt per amplifier.
Power	The Power function controls the volume level. You can adjust the volume from 0 to -20 dB in 1 dB steps. Reduced volume mode remains in effect for all subsequent functions in a user program that follow the Power function, or until another Power function occurs, or an ARM command is sent. NOTE: Each 3 dB reduction results in half the power output.
Delay	Causes the siren to pause (wait) for 2 to 500 seconds before starting the next function of the user program currently running. When selecting the delay function, the user is prompted to enter the desired delay time in seconds. A default delay of 4 seconds is present between functions without adding a delay.
Amp/Audio Zone	Allows you to control which amplifiers are to operate. The Amp/Audio Zone function allows you flexibility in building alerting or other zone-dependent systems. You can divide each UV controller into eight different zones. When selecting the Zone Control function, you are prompted to enable or disable each of eight possible zones corresponding to each amplifier in the siren. Upon activation of a user program, the siren defaults to all zones enabled. The ZONE command must follow an ARM command. Zoning remains in effect for all subsequent functions in a user program that follows the zone function or until another ZONE or ARM function occurs.
Record PA	Records a live PA message for later playback using the "PLAY RECORDED PA" function. A recording is terminated by the reception of the EAS-SAME End of Message command or two minutes, whichever occurs first.
Zone A (rotating sirens only)	Position siren head in the A direction.
Zone B (rotating sirens only)	Position siren head in the B direction.
Zone C (rotating sirens only)	Position siren head in the C direction.
Zone D (rotating sirens only)	Position siren head in the D direction.
Relay Functions	All relay functions require the optional UVARM (UltraVoice Audio Relay Module).
Repeat Start	Repeat all functions between Repeat Start and Repeat End <i>n</i> times.
Repeat End	Repeat all functions between Repeat Start and Repeat End <i>n</i> times.

UVARM Option

The UV supports an optional Audio and Relay Output Module (UVARM) that provides three audio outputs and four relay outputs to enable the UV to connect to existing PA systems or other auxiliary devices. The outputs consist of a balanced 33 ohm, a balanced 600 ohm, a selectable 600 ohm balanced or single-ended line level output, and four SPDT relay outputs. The level of each audio output is independently adjustable. Each audio and relay output is individually addressable, allowing each output to be activated at different times.

Figure 11 UVARM Front Panel Indicators

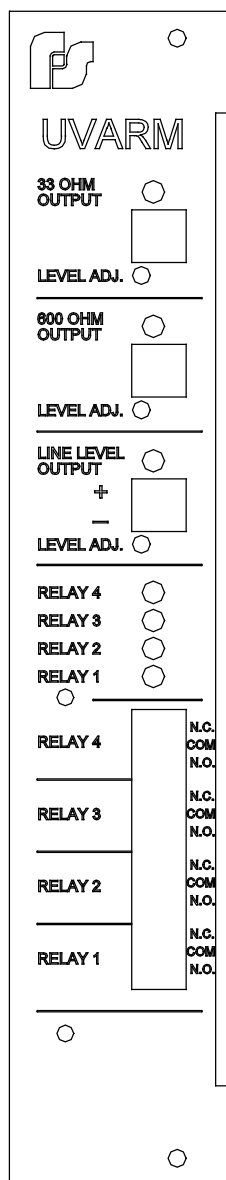

291328A

Specifications for UVARM

Table 21 Audio and Relay Output Card Option

Input Voltage	13.5 V to 30 V
Input Current	200 mA maximum
Balanced 33 Ω Output	Adjustable from 0.2 to 1.9 V _{rms}
Balanced 600 Ω Output	Adjustable from 0.2 to 3 V _{rms} or -12 dB to +11 dB, surge protected
Single-ended or Balanced Line-level/600 Ω Output	Adjustable from 0.2 to 3 V _{rms}
Relay Outputs	4 SPDT
Contact Rating	20 A at 30 Vdc with NO and NC contacts

Table 22 Connectors for the UVARM

Wire Size	All front panel connectors 22 to 14 AWG
P1	Backplane 48 pin EPT male card edge connector
JP1	33 Ω audio output 1 and 2 balanced output
JP3	600 Ω audio output 1 and 2 balanced output
JP7	600 Ω /line level audio output 1 and 2 balanced output or 1 - signal 2 - ground
JP6	Two-pin shorting jumper Shorted makes JP7 unbalanced output Open makes JP7 balanced output
JP2	Three-pin shorting jumper Short pins 1 and 2 to select channel A audio for JP1 output Short pins 2 and 3 to select channel B audio for JP1 output
JP4	Three-pin shorting jumper Short pins 1 and 2 to select channel A audio for JP3 output Short pins 2 and 3 to select channel B audio for JP3 output
JP5	Three-pin shorting jumper Short pins 1 and 2 to select channel A audio for JP7 output Short pins 2 and 3 to select channel B audio for JP7 output

JP8	Relay Outputs 1 - Relay #1, N.O. 2 - Relay #1, COM 3 - Relay #1, N.C. 4 - Relay #2, N.O. 5 - Relay #2, COM 6 - Relay #2, N.C. 7 - Relay #3, N.O. 8 - Relay #3, COM 9 - Relay #3, N.C. 10 - Relay #4, N.O. 11 - Relay #4, COM 12 - Relay #4, N.C.
-----	--

Table 23 Indicators for the UVARM

LED D18	Power
LED D1	33 Ω output active
LED D3	600 Ω output active
LED D5	Line level output active
LED D11	Relay #1 energized
LED D10	Relay #2 energized
LED D9	Relay #3 energized
LED D8	Relay #4 energized

Battery Charger

In the Battery Cabinet is a 24 Vdc charger that monitors battery conditions, temperature, and varies charge rates. See the Battery section under Specifications for the required quantity of batteries. The two or four batteries are wired to provide the 24 Vdc required for controller operation.

The following table describes the wire connections on the charger.

Table 24 Wire Connections on Charger

Wire	Connection
Black AC Plug	Connects to AC power strip in cabinet.
Black Temperature Sense	Connects to any battery.
White Sensor Wire	Connects to JP20 on the motherboard in the Control Cabinet
Black Wire/Red Wire	Black wire connects to Battery 1 (negative). Red wire connects to 200 A fuse.

Battery Charger Status

Charger Status is indicated by the LEDs on the front of the charger.

Figure 12 LEDs on charger



Table 25 LEDs description

LED	Description
CURRENT	The green LED indicates the charge current is being delivered to the battery. LED intensity increases with charge current.
TRICKLE	The yellow LED indicates the battery voltage is below 20 V and that the charger is trickle charging at a low current level.
BULK	The yellow LED indicates the battery voltage has dropped below 90% of the float voltage setting, and the charger is charging at a high current level.
READY	The green LED indicates the battery has reached the float voltage. The charger is float charging at the float voltage setting.
FAULT	The red LED indicates a charger fault. The charger may be delivering abnormally low current, have a blown fuse, or not producing the correct output voltage.

NOTES:

- Battery Voltage is temperature compensated when the temperature is above 86°F (30°C).
- The battery charger described is model Q860000236, which replaces model 120816C. For information regarding updating to the new charger see <https://www.fedsig.com/product/uv-siren-controller> under Product manuals.

UV25ST Option

The UV25ST allows the end user the capability to reduce audio output from the 70 V_{rms} standard to the 25 V_{rms} standard. This option is beneficial when using the UV controller in an indoor warning application.

The UV25ST has a similar form and fit as the UV400 amplifier. In an indoor application, the UV+ can accommodate up to four UV400 amplifiers and four UV25ST. For every UV400 amplifier used, purchase a corresponding UV25ST.

The UV25ST plugs into the unused amplifier slots following the UV400 amplifiers.

UVTD-IP Option

The UVTD-IP includes a network card that provides the capability to communicate over a network and provides audio decoding of digitized audio sent over the network.

The converter is configured with its own fixed IP address and port number. When packets of data are received over the Ethernet port that are addressed to the board's IP and port number, they are converted to serial data and sent out over the serial port. Likewise, any data coming into the serial port is converted to TCP/IP data packets and sent out over the Ethernet port to the server's IP address. The unit also contains a digital to analog converter. This allows specially configured incoming data packets to be converted to audio, which are then filtered and sent out over a 600-ohm audio port.

Ethernet Board Specifications


Table 26 Electrical Ethernet Board Specifications

Input Voltage	10.5 to 95 Vdc
Current Draw	< 150 mA
Serial Port Protocol	RS232C, N, 8, 1 baud rate configurable
Ethernet Port Protocol	IEEE 802.3, 10 Base-T connection
600 ohm Audio Output Port	
Protection	MOV and Transorb surge protection
Impedance	600 Ω
Audio Output Level	Adjustable from 0.30 to 3.00 V _{pp} (-17 dB to +2.7 dB) into 600 Ω

NOTE: To use the 600-ohm input for activation receive audio, place a jumper across pins 2 and 3 at JP6. JP6 is located on the main controller card. Refer to "600-ohm Adjustment Procedure for Activation Audio," in the Maintenance section.

See the SE2000 Manual for connections and specifications.

Figure 13 Serial to Ethernet Board

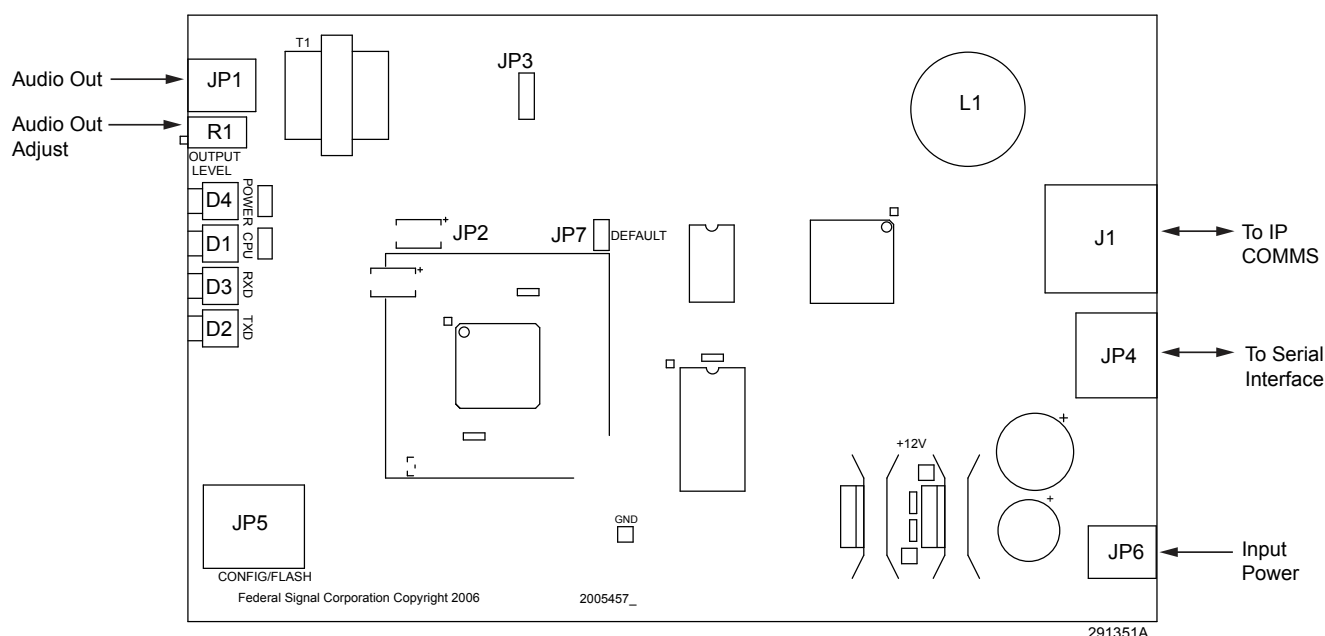

Network Information

Protocols Supported

- TCP/IP
- UDP (optional)
- XML (optional)
- XMPP (optional)

IP Ports Used

16887 (SmartMsg TCP/IP)

80 (HTTP)

3100 (optional UDP Serial Over IP)

3101 (optional UDP Voice Over IP)

IP Address

User selectable

TOS/DSCP (Type of Service)

User selectable

Table 27 Bandwidth Requirements

Voice Over IP	150 K baud per connection
Siren Activation	50 bytes per connection
Siren Poll Response	74 bytes per connection


UV+ Controller Card

The following table provides settings and interface inputs and outputs for the UV+ controller card. See Figure 14 on page 46.

Table 28 UV+ Controller Card Setting I/O

J1	Pins 9 and 10, P1#1 Baud Rate Selection Jumper ON=9600 Baud, OFF=1200 Baud	
J2	Front Panel Microphone jack	
JP1	microSD holder on PCB	
JP2	Special option jumper that requires special firmware	
JP3	Connector pins for one-way radio receiver	
JP4	Options Connector for SINAD	
JP6	600 Ω Input Configuration Jumper Pins: Use shorting plug between pins 2 and 3 Use shorting plug between pins 1 and 2	600 Ω audio in to receiver decoders Audio from 600 Ω to go to amplifiers when 600 Ω PTT is closed
JP7	600 Ω Output Configuration Jumper Pins: Use shorting plug between pins 1 and 2 Use shorting plug between pins 2 and 3	Output siren audio Output radio transmit audio
JP8	CTCSS Connector Pins	
JP9	Transceiver #1 VOX selection Use shorting plug for VOX Carrier Detect	
JP10	Dual receiver priority jumper Jumper EXT side to give external receiver first priority Jumper INT/EXT2 side to give on-board receiver or external receiver second priority Jumper neither side, first carrier detect has priority	
JP11	Jumpered when SINAD option is used	
JP12	Short to force Carrier Detect of External transceiver 1	
JP13	Front Panel External Transceiver (radio) Connector Ports #1 and #2	
JP14	Equalizer setting for public address or digital voice. Setting is normal or treble.	
JP20	Input for Controller Area Network (CAN) BUS.	
P1	Front Panel RS232 Ports #1 and #2 - Use P1 #1 to control and monitor data at 1200 or 9600 baud. Baud rate is selected by J1, 9-10. ON=9600 Baud, OFF=1200 Baud - Use P1 #2 with the 9600 baud scrolling message display option.	
R125	600 TX: 600 Ω audio transformer Transmit (TX) level adjustment.	
R123	600 PA: 600 Ω audio transformer Public Address (PA) level adjustment.	
R57	DV GAIN: Volume adjustment for Digital Voice option. Internal Digital Voice level sufficient to drive TP5 or TP6 into clipping.	
R128	TX GAIN 2: Transmitted audio adjustable from 50 mV to 1 V _{pp}	
R106	TX GAIN 1: Transmitted audio adjustable from 50 mV to 1 V _{pp}	
R182	RX GAIN 2: Received audio adjustable from 300 mV to 3.00 V _{pp}	
R105	RX GAIN 1: Received audio adjustable from 300 mV to 3.00 V _{pp}	

Figure 14 UV+ Controller Card

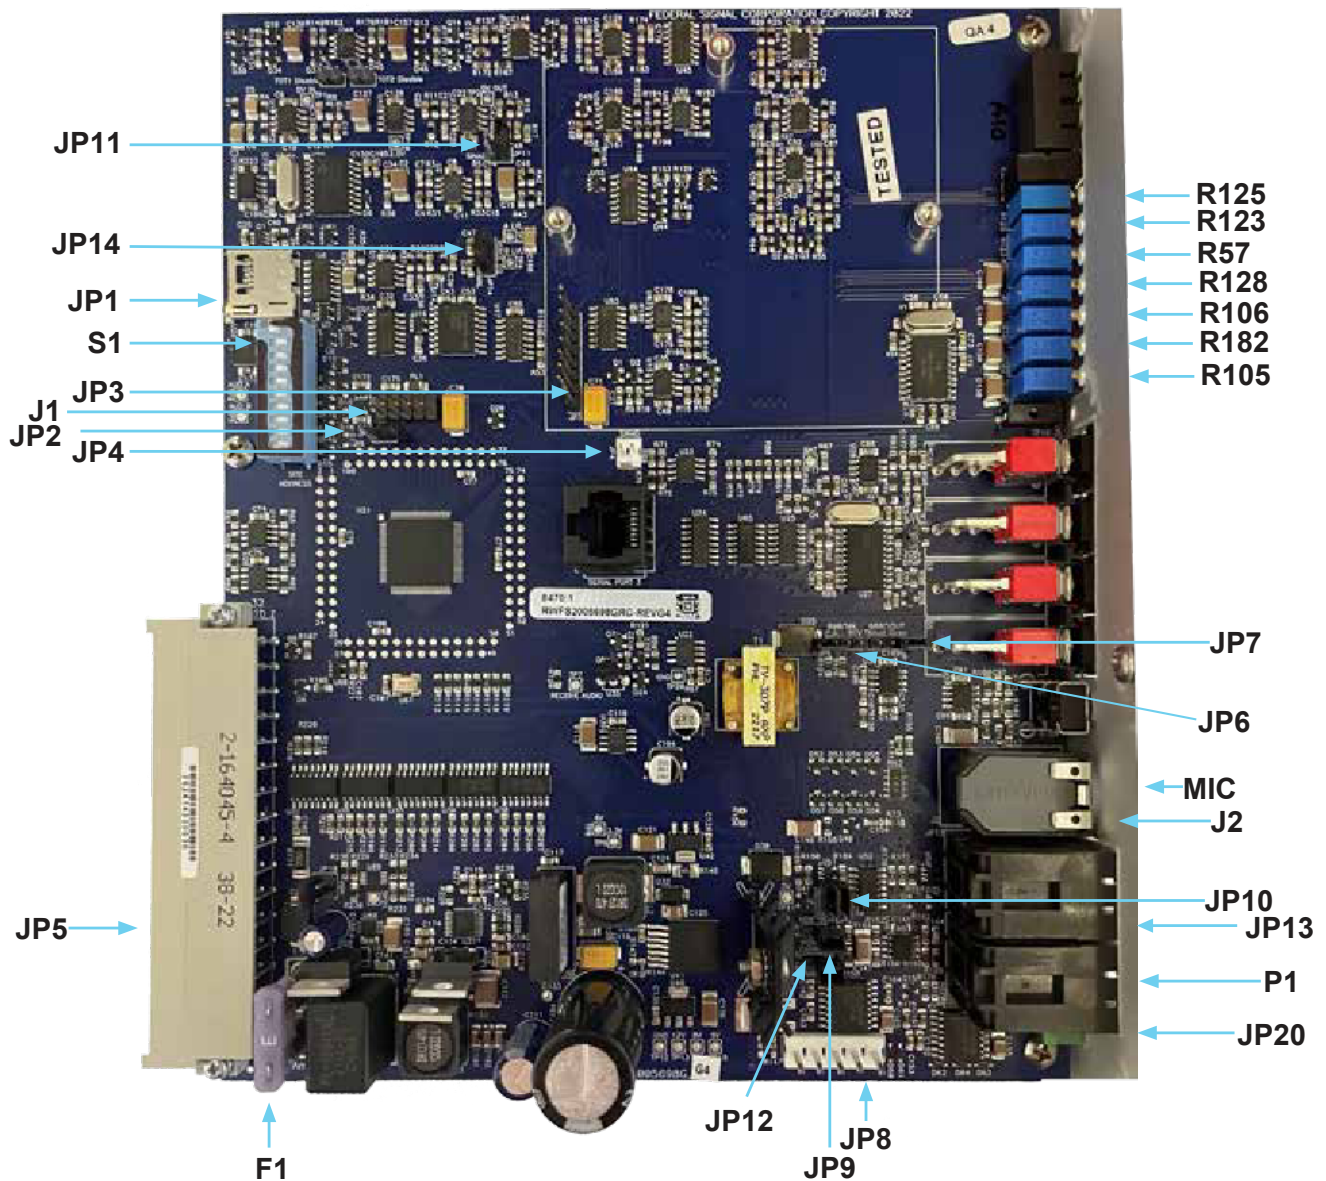

Manual Activation

Use the manual activation switches to activate siren functions. Switches are located on the front panel of the UV+ controller card. In addition, activating switches simultaneously can operate specific testing and calibration features. See Table 29.

Figure 15 UV+ Controller Card Switches



Table 29 Manual Activation Switches on UV+ Controller Card

Function Switch	Function
CODE 1	Activates function 1
CODE 2	Activates function 2
CODE 3	Activates function 3
CODE 4	Activates function 4
CODE 5	Activates function 5
CODE 6	Activates function 6
CODE 7	Activates function 7
STOP	Reset
CODE 1 and CODE 6	Loads default speaker calibration values and transmits DTMF characters (production testing)
CODE 2 and CODE 3	Calibrate speaker load and Xmit DTMF Quiet Test
CODE 5 and CODE 7	Transmits 1200 Hz tone for radio deviation adjustment

NOTE: At any time during a sounding function, push the RESET button to halt all output immediately.

Local Public Address

With the optional microphone (part number MNC-MC), the operator has the ability to locally give a Public Address (PA) message. You can enter the PA mode by plugging the MNC-MC into the microphone receptacle labeled MIC on the UV+ controller card front panel. The PA LED is lit anytime the press-to-talk button on the microphone is pressed. Rotating sirens start rotating to the next zone when PTT is released.


NOTE:

- The microphone volume adjustment knob, labeled MIC GAIN, is located on the UV+ controller card front panel.
- Local PA overrides ALL siren functions activated either remotely or locally.

Relay Output (JP11)

The relay output is terminal block JP11, which is located at the bottom of the backplane motherboard. Relay JP11 closes whenever a siren function is running. In PA mode, the relay is open while the MIC PTT button is pushed and closes when the MIC PTT button is released to enable rotating sirens to change position. Siren rotates to the next zone. The relay is not closed during the remote Quiet Test. See Figure 16.

Figure 16 UV Controller Backplane Motherboard I/O

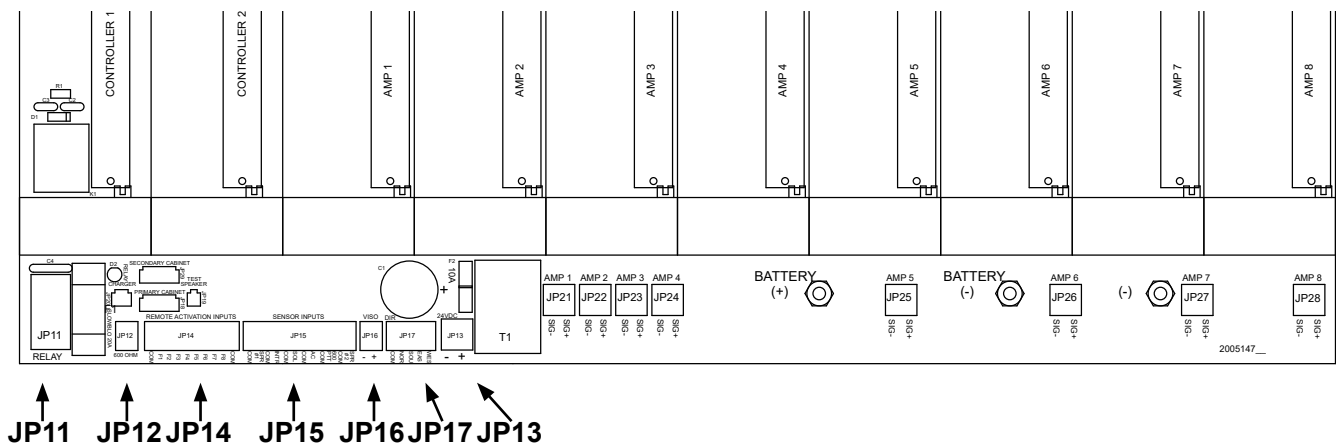

600 ohm Input (JP12)

The 600-ohm input is at JP12 on the backplane motherboard. See Figure 16. Use JP12 for audio input for activation from a radio receiver or from an external voice storage unit. To use the 600-ohm input for activation receive audio, on the UV+ controller card, place a jumper across JP6 pins 2 and 3. See "Figure 14 UV+ Controller Card" on page 46.

To use the 600 ohm input for audio from an external voice storage unit, the UV+ controller card requires a jumper across JP6 pins 1 and 2. See "Figure 14 UV+ Controller Card" on page 46. When used in this mode, use UV+ controller R123 (see Figure 14) to control the volume level. To activate audio mode, place a jumper across JP15 pins 10 and 11 (PTT: Push To Talk, on the backplane motherboard). See Figure 16 and Figure 17. For best results, use a well-filtered audio source. For the audio cable, use a shielded audio grade cable and keep the length as short as possible. Keep away from sources of electrical noise.

24 Vdc Supply (JP13)

Use this output to power external equipment at 24 Vdc maximum 10 A. See "Figure 18 UV Backplane Motherboard (JP15, JP16, JP17, and JP13)" on page 51.

Remote Activation (JP14)

Terminal block JP14 at the bottom of the backplane motherboard is the Remote Activation Inputs. See Figure 17. Optionally, you can operate the UV controller by wired relays or buttons. Use terminal block JP14 for external interface equipment.

You can activate functions 1 through 7 by providing momentary, dry contact closure between COM and the desired JP14 terminal. Shorting F1 to COM activates whatever is programmed for code #1, shorting F2 to COM activates whatever is programmed for code #2, and so on. A half-second momentary contact duration is required.


To terminate an activated signal before it runs for the full duration, do the following: provide a momentary contact closure between JP14 COM and F8 (RESET).

NOTE: No matter how F8 is programmed, F8 is a master reset or a stop switch.

Table 30 Remote Activation Connections (JP14)

JP14 Terminal	Function
1 COM	Common
2 F1	F1 Activates functions 1
3 F2	F2 Activates functions 2
4 F3	F3 Activates functions 3
5 F4	F4 Activates functions 4
6 F5	F5 Activates functions 5
7 F6	F6 Activates functions 6
8 F7	F7 Activates functions 7
9 F8	F8 Activates functions 8
10 COM	Common (Reset)

Figure 17 UV Backplane Motherboard (JP12, JP14, and JP15)

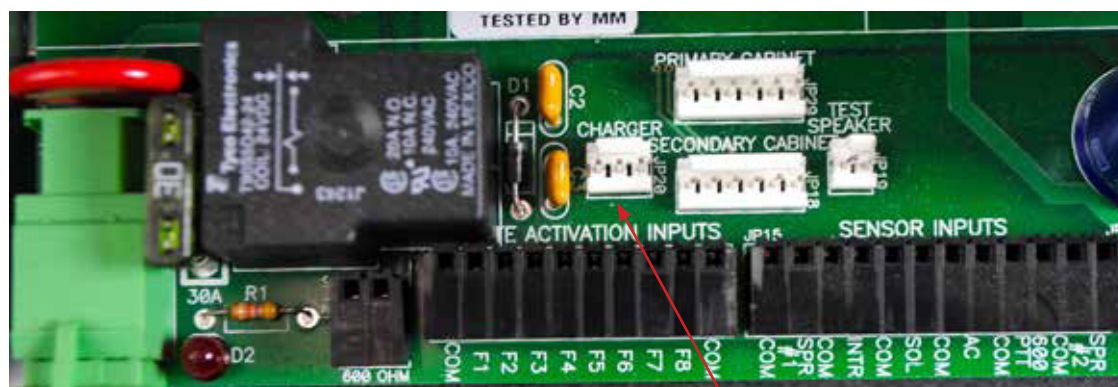

Charger Sense (JP20)

The charger sense (JP20) input is located on the backplane motherboard. It connects from the charger. Greater than 3 Vdc is a pass on JP20 pin 2. See Figure 17.

Sensor Inputs (JP15)

Terminal block JP15 is located at the bottom of the backplane motherboard. Use sensor inputs to detect and notify conditions occurring at an RTU location. See "Figure 17 UV Backplane Motherboard (JP12, JP14, and JP15)" on page 49.

Table 31 Sensor Connections

JP15 Terminal	Function
1 COM	Common
2 SPR #1	Spare #1
3 COM	Common
4 INTR	Intrusion
5 COM	Common
6 SOL	Solar
7 COM	Common
8 AC	AC Power
9 COM	Common
10 600 PTT	600 PTT
11 COM	Common
12 SPR #2	Spare #2

Spare 1 and 2 (JP15: pins 1 and 2)

Use for user-defined application.

Intrusion (JP15: pins 3 and 4)

Alerts the controller when one of the unit's doors has been opened. Low is intrusion pass.

Solar (JP15: pins 5 and 6)

Use to sense operation of a solar power system.

Jumper JP15: pins 5 and 6 when using solar. This jumper enables solar mode, which causes the system not to report a failure during low-light conditions or at nighttime. This is done by locking in a power pass until a master reset. For solar panel testing during the day, initiate a master reset, wait 15 seconds, and then poll.

AC Power/Solar (JP15: pins 7 and 8)

Jumper JP15 pins 7 and 8 when using solar only. If using AC, connect the blue wire from DIN rail-mounted AC Sensor to pin 7.

600 ohm PTT (JP15: pins 9 and 10)

Shorting pins 9 and 10 puts the UV+ controller card in local PA mode.

User-Defined Application (JP15: pins 11 and 12)

Use spare JP15: pins 11 and 12 for user-defined application.

+5 Vdc Supply (JP16)

The UV+ backplane motherboard can supply +5 Vdc for external use up to 150 mA. See Figure 18.

Table 32 External Sensors

JP16 Terminal	Function
1 (-)	Isolated Supply (ground)
2 (+)	Isolated Supply (+5 V)


Rotation Sensor (JP17)

Terminal block JP17 at the bottom of the backplane motherboard is for Rotation Sensor Inputs. See Figure 18. Activate these by a short to common. Only use these inputs with a rotating electronic siren. When a zone function is run, the speaker array rotates until the corresponding direction sensor input detects that the array is facing the proper direction. A rotation time-out timer stops the siren from rotating after 20 seconds if the sensor is not connected.

Table 33 Rotation Sensor Connections

JP17 Terminal	Function
1 COM	Common
2 NOR	North
3 SOU	South
4 EAS	East
5 WES	West

Figure 18 UV Backplane Motherboard (JP15, JP16, JP17, and JP13)

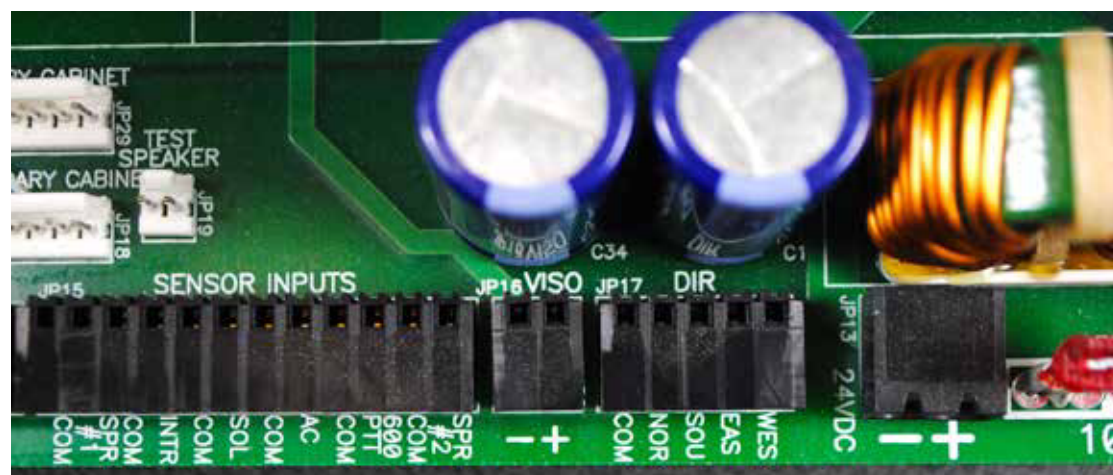


Site Address Switch (S1)

For digital systems only: For the siren to report back with its identity, define the site address by setting DIP switches located on the board. The DIP switches have values of 1, 2, 4, 8, 16, 32, 64, 128, 256, and 512. Add appropriate DIP switch values to define the site number address.

Example

To define the board for Site #1, toggle the first DIP switch to the left. All other DIP switches are to the right. For Site #2, toggle the second DIP switch to the left. For Site #3, toggle the first and second DIP switch to the left. For Site #4, toggle the third DIP switch to the left. For Site #5, toggle the first and third DIP switch to the left. Continue this method to define other site number addresses.

Figure 19 Setting the Switch Number Example

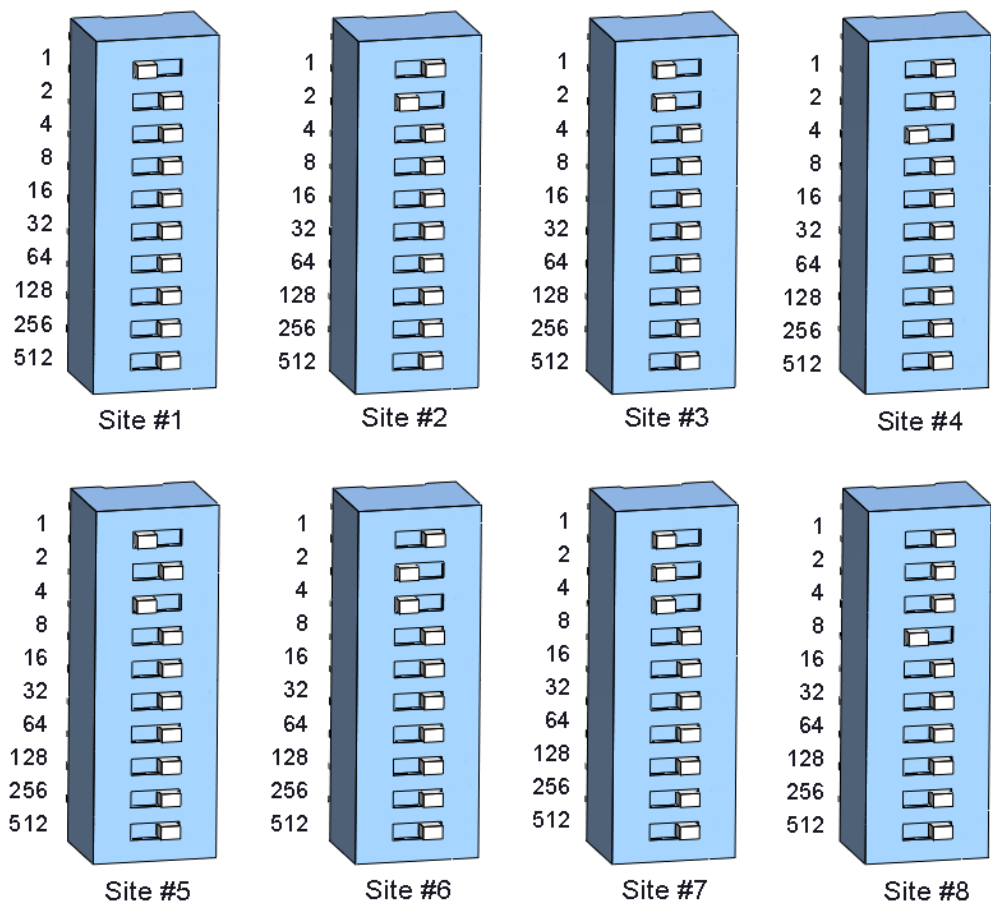

Switch number	1	2	3	4	5	6	7	8	9	10
Binary number	1	2	4	8	16	32	64	128	256	512

Example: Switch numbers 1, 2, and 3 are binary numbers 1, 2, and 4.

Add 1 + 2 + 4 = 7; 7 is the unit address

NOTES:

- Programming details are in the software manual.
- Set the site address to one to program UV+ controller card with firmware (HEX code).
- To program a non-digital unit using FSPWARE Software, set the site address to one. When programming is completed, change the DIP switch setting to the actual site address.
- The site address is stored at power-up of the controller. If the site address is changed, the power (battery and AC) must be turned off and then on.

Radio Control

You can activate the siren by a radio signal when the optional radio receiver is incorporated into the UV controller. Activation by radio control has the advantage that control lines are not required between the siren control site and the siren location. A suitable receiver in the UV controller can control voice and tone signals. Federal Signal offers a full line of radios which cover the VHF bands and UHF bands.

Federal Signal receivers for one-way communications (receive only) are connected to a sealed female PL259 (SO239) cabinet-mounted bulkhead connector. The antenna cable connection is made to the female PL259 (SO239) connector outside the cabinet. Protect this connection from moisture. Mount the antenna facing the activating radio antenna per instructions provided with the antenna. See the Maintenance section for the radio adjustment procedure.

Federal Signal transceivers for two-way communications are connected to a sealed female N-Type cabinet-mounted lightning protection connector. The antenna cable connection is made to the female N-Type cabinet-mounted lightning protection connector outside the cabinet. Protect this connection from moisture. Mount the antenna facing the activating radio antenna per instructions provided with the antenna. See the Maintenance section for the radio adjustment procedure.

Two-Way Sensor Package

The two-way sensor package uses a variety of sensors in the UV controller, which, when equipped with a two-way radio, allow the remote units to communicate their status back to the base station. This reduces station downtime by quickly alerting operating personnel to potential problems at remote units.

The package itself consist of sensors to provide information on the following conditions:

- AC Power
- Battery Voltage (built in)
- Charger Operation (built in)
- Activation Current (built in)
- Signal A (built in)
- Signal B (built in)
- Quiet Test (amplifiers and drivers built in)

- Intrusion
- Local activation/False Alarm
- Amplifier Condition
- Rotation (Rotating sirens only)

All sensors are optically coupled to provide protection in electrical interface conditions. Consult Federal Signal for further information.

Local Quiet Test

The Local Quiet test allows performing Quiet Tests on the siren control and siren speaker array. Quiet Test uses a 20 kHz tone to inaudibly test the tone generators, amplifiers, and speaker drivers. To perform this test, program the Quiet Test under one of the activation codes. If it is one of the first seven codes, then you can activate it manually through the switches on the front panel or with the remote activation inputs. Normally once the Quiet Test is programmed under one of the activation codes, the code is activated over the radio channel, the panel switches, or with a local laptop computer running SFCDWARE.

Operation

Obtain the results of a Quiet Test remotely using the SS2000+ printout or the SFCDWARE control and status monitoring software. You can also obtain the status locally at the siren site with a portable computer running SFCDWARE. The actual amplifier voltage and current are monitored with Quiet Test providing a true indication of each amplifier and load performance.

Perform calibration of the Quiet Test by pressing switches 2 and 3 on the front panel at the same time. Prior to performing a calibration, the speakers must be known good, as per the Maintenance section.

Finding Faults

The siren automatically resets when running a Quiet Test. Reset prior to a Quiet Test is not required. After a test, poll the siren from the SS2000+. The SS2000+ printout indicates the present siren status.

When using SFCDWARE, the controller automatically updates the Quiet Test status each time a new Quiet Test is run. Obtain the status from the status detail screen and from the Reports menu.

Digital Voice Recording

When purchased, the Digital Voice option adds a microSD card that is capable of storing up to 4,093 voice or tone messages that total up to 17 hours of total recording time.

File Format

The digital voice message format is 8000 samples per second, 8 bit, mono. Save these messages with a DV#.wav naming format, or the messages are not recognized. This naming format results in messages DV1.wav through DV4093.wav.

Voice Levels Within Files

Voice sections of a recording should be “Normalized” so that the peaks are at the limits. After Normalization, increase the gain by 4 dB to deliver full nominal output power at the peaks and about 3.5 dB down on average during a word.

Tone Levels Within Files

Tone signals in the recording (such as siren sounds, horn sounds, and music) should be at no more than 36% of the maximum level (-9 dB) to prevent them from overdriving the amplifiers and overpowering the drivers. These can be normalized to set them at the maximum level and then reduced to 36% or -9 dB. Voice maximum level is +4 dB.

These levels assume that the UV attenuation is not programmed and the DV GAIN on the UV+ Controller is turned fully up. See "Figure 9 UV+ Controller Front Panel Indicators" on page 33. This delivers -1.8 dB compared to the square wave siren tones or about $54 V_{rms}$. For UVRI-Bs, this delivers -2 dB compared to the square wave siren tones.

Filtering Files

You need to filter the files to reduce content below 300 Hz. This prevents low-frequency tones in a recording from saturating the output transformer and the speaker drivers.

NOTICE

SPEAKER DAMAGE: The speaker drivers can not reproduce these frequencies and can be damaged by them.

Checking/Setting UV+ Controller DV Levels

These levels assume that the UV attenuation is not programmed and the DV GAIN on the UV+ Controller is turned fully up.

To check the UV+ Controller DV levels, with the speakers unplugged from the amplifiers:

1. Turn the DV GAIN pot fully (25 turns) counterclockwise.
2. Play the stored tone function (-9 dB).
3. Monitor the amplifier's output level.
4. Turn up the DV GAIN pot until $69 V_{rms}$ is reached.

NOTE: It is important to start by turning the DV GAIN pot down to a low level and work your way up to prevent overdriving the amplifiers.

Alternatively, with the speakers plugged into the amplifiers:

1. Turn the DV GAIN pot fully (25 turns) counterclockwise.
2. Play the stored tone function.
3. Monitor the amplifier's output level.
4. Turn up the DV GAIN pot until $54 V_{rms}$ is reached.

NOTE: It is important to start by turning the DV GAIN pot down to a low level and work your way up to prevent overdriving the amplifiers and speakers.

These methods leave the tone 0.4 to 1.8 dB low, depending on frequency, but limit the current to a safe level.

Converting the Files

To convert the files:

1. Adjust the amplitude to ensure that the peaks are at or slightly into the limits. If converting from 16 bit to 8 bit, ensure that dithering is disabled.
2. To program activation codes with Digital Voice Messages under them, follow the instructions in the programming software. It is possible to assign codes to the functions DIG VOICE 1 through DIG VOICE 4093. As in all sounding functions, the unit must first receive the ARM command followed by one of the DIG VOICE commands to activate the stored message. The Digital Voice Volume is adjustable through a potentiometer located on the controller front panel, called DV Gain.

Maintenance

⚠ WARNING

Service or maintenance should be performed by qualified personnel familiar with the siren, associated controls, and power sources being used and in conjunction with the authorities having jurisdiction.

Before servicing or maintaining, ensure that remote activation cannot occur and disconnect power to the siren and its controls.

⚠ WARNING

SOUND HAZARD: The sound output of sirens is capable of causing permanent hearing damage at short distances. Therefore, always wear hearing protection when performing tests or maintenance on the siren and avoid excessive exposure.

To prevent the siren from sounding, always turn off the power to the siren at the ac disconnect switch and remove any DC power being supplied by the Battery Box before inspecting or maintaining the siren.

UV Controller Preventive Maintenance

Test the siren for proper operation at least once a month. A daily test at noon, curfew, or other selected time is preferred. This not only enhances the usefulness of the siren and verifies that it remains ready for use in an emergency but also instills public confidence in the reliability of the warning system.

In order to minimize the possibility of siren failure, annual inspection and maintenance are recommended. See "Amplifier and Speaker Pre-Operation Checkout (Non-Active Mode)" on page 31.

Driver Replacement and Inspection

Each amplifier drives four 100-watt speakers. To measure the resistance of a given speaker:

1. With an ohmmeter, measure the outputs on the terminal strip (JP21-JP28) (at the bottom of the backplane motherboard).
2. Observe the DC resistance of the speakers. The normal DC resistance of a speaker set of four drivers is approximately 4.5 ohms. A DC resistance measurement of less than 3.5 ohms indicates that one or both of the speakers is probably shorted. A reading of approximately 9 ohms or more indicates that at least one of the speakers in the set is open; a reading of infinity indicates that both speaker sets are open.
3. If resistance is abnormal, perform resistance checks on each speaker individually at the speaker array. Refer to the signal connections section for speaker locations. Each driver is 4.5 ohms.
4. To replace a defective driver, remove the four hex head 1/4-inch mounting bolts that are holding the inspection plate. Make sure the flat washers and split washers are not misplaced. Note the color and location of the wires going to the driver. Remove the driver by turning it counterclockwise. Make sure that the male threads are lightly greased, and then install the new driver. Reconnect the wires as previously noted. Reinstall the inspection plate. Repeat the resistance check above.
5. Test the siren to verify the driver was properly installed.

Checking the Signal

To check the signal operation:

1. When checking for proper control module output, unplug the terminal strip connectors to the speakers (at the bottom of the backplane motherboard) to eliminate output from the speaker array.
2. Activate each of the signals and observe the signal indicators on the control module and the amplifiers.
3. If desired, you can connect an oscilloscope or digital multi-meter (DMM) to the amplifier module output terminal strip to observe the amplifier output. This output is at least 67 V_{rms} during a signal. To limit sound output, plug in one amplifier terminal strip connector at a time during this test.
4. Plug all of the amplifier terminal strip connectors to enable amplifier outputs.

Checking the Battery

To check the battery:

1. The voltage of a fully charged set of batteries is approximately 27.2 Vdc, and the charger current is less than 2 A. The charger is set for 27.2 +/- 0.1 Vdc at room temperature.
2. Load test the batteries per the manufacturer's specifications.

3. Some batteries are equipped with a built-in hydrometer. When the hydrometer's eye is green, the battery is charged. If the eye is dark, the battery needs to be charged. If the eye is light in color, the battery is low on fluid and needs to be inspected for leaks. Maintain or replace the battery as recommended by its manufacturer; obey local or state laws governing the disposal of lead-acid batteries.
4. Check the battery terminals for corrosion. Clean and grease connectors and terminals if necessary.

Checking the Charger

To check the charger:

1. Turn off the AC power to the Control Cabinet.
2. Measure the overall battery voltage between Battery 1 (negative) and Battery 2 (positive). The battery voltage should be 25 to 27 Vdc (nominal).
3. Turn on the AC power to the Control Cabinet.
4. Measure the overall charger voltage between Battery 1 (negative) and Battery 2 (positive). Ensure the voltage is rising up to 27 Vdc (nominal).

NOTE: If your GUEST charger is not working, you may need to replace it. Call Federal Signal for the Battery Charger Retrofit Kit Q860000236 for UV Cabinet (manual number 25500365).

Adjusting Two-Way Radio Receiver

This procedure is completed at the factory. Only complete this procedure if radio re-alignment is required or the radio is installed in the field.

Qualifications

Radio shop and/or a properly trained radio technician.

Equipment Required

1. Service Monitor
2. Oscilloscope

Setup

Connect the Unit Under Test (UUT) to the service monitor.

Adjusting the receive audio

To adjust the receive audio:

1. Using a service monitor, modulate the correct RF signal into the receiver with a 1 kHz tone
 - If bandwidth is 12.5 kHz (typical), then modulate at a 1.5 kHz deviation. If using a private line, add 0.375 kHz private line deviation to the signal.
 - If bandwidth is 25 kHz, then modulate at a 3 kHz deviation. If using a private line, add 0.75 kHz private line deviation to the signal.
2. Adjust the level at TP16 (UV+ controller card) for 1 V_{pp} using the REC gain adjustment R105 (UV+ controller card front panel). See "Figure 14 UV+ Controller Card" on page 46.

Adjusting the transmit deviation

To adjust the transmit deviation:

1. Simultaneously flip switches 5 and 7 on the UV+ controller board. This causes the controller to transmit a calibration tone for approximately 8 seconds.
2. Measure the deviation level using a radio service monitor set to the correct RF.
3. Adjust the TX level (UV+ controller card front panel) for the following deviation level on the radio service monitor.
 - If bandwidth is 12.5 kHz (typical), then adjust for a 1.5 kHz deviation. If using a private line, add 0.375 kHz private line deviation to the signal.
 - If bandwidth is 25 kHz, then adjust for a 3 kHz deviation. If using a private line, add 0.75 kHz private line deviation to the signal.
4. If this step fails to solve the issue, then check base station deviation levels as per the base station documentation and manual. Also if used, check the repeater.

Recommended Cables for Radio

The Federal Signal part number, communication control cable, and power cable are on the Recommended Cables for Radio sheet (SYS5060).

To download the Recommended Cables for Radio sheet:

1. Go to www.fedsig.com.
2. Search for SYS5060.

600-ohm Adjustment Procedure for Activation Audio

To use the 600-ohm input for activation receive audio, at JP6, place a jumper across pins 2 and 3. JP6 is located internally on the main controller card.

1. RX adjustment

Transmit a tone from the base station.

- Ensure that the base station TX level was previously adjusted properly.
- Ensure that the tone is not clipped by viewing the waveform with an oscilloscope.
- Verify that the nominal base station TX level is $1 V_{pp}$.

Adjust the level at TP16 (UV+ controller card) for $1 V_{pp}$.

- Use the REC gain adjustment R105 (UV+ controller card front panel).
- Ensure that the tone is not clipped by viewing the waveform with an oscilloscope.

2. TX adjustment (If one-way communication, then skip this step)

- Simultaneously press buttons 5 and 7 on the UV+ controller card. This causes the controller to transmit for approximately 8 seconds.
- Determine the proper siren TX level required: the nominal UV TX level is $1 V_{pp}$. The TX levels for all of the siren controllers must be the same. Once you adjust one siren's TX level, adjust all other sirens to the same level. Measure at the base station.

- Adjust the TX level (UV+ controller card front panel) for the correct level determined above.
- Ensure that the tone is not clipped or distorted by viewing the waveform with an oscilloscope.

600-ohm Adjustment Procedure for External Audio Source Input

To use the 600-ohm input for the external audio, at JP6, place a jumper across pins 1 and 2. JP6 is located internally on the main controller card.

Audio source adjustment for external audio source.

- Transmit a tone from the external audio source.
- Ensure that the tone is not clipped or distorted by viewing waveform with an oscilloscope.
- Verify that the nominal external audio source level is $1 V_{pp}$.
- If required, adjust the external audio source.

Audio source adjustment for UV controller.

- Transmit a tone from the external audio source.
- Contact closure at JP15 pins 10 and 11 (PTT: Push To Talk) is required to activate the audio mode.
- Adjust the level using the external audio gain adjustment R123. (R123 is located on the UV+ controller card. See "Figure 14 UV+ Controller Card" on page 46.)

NOTE: The preferred method of setting this level is to use a dB meter or by ear.

- Activate the siren through an external audio source.
- Set for the same level as the standard siren sounds.
- Ensure that the sound is not distorted.

Table 34 Troubleshooting

Problem	Action
No radio decode	• Unit was not armed before sending a DTMF function code, or the unit is not programmed to recognize that particular code sequence or signal is not being received properly. • Verify programming is correct. Check the received audio signal quality at the RX test pin on the front of the control card.
No two-tone decode	Decoder is not programmed. Check radio connections if external. (See the wiring diagram.) Check for proper C/D polarity setting. Ensure that the radio is working properly by using a service monitor to inject a strong, clean signal. Check transmitter deviation.
Low output from speaker array	Check the battery voltage. Check speaker impedance. (See the Maintenance section.) Also check signal indicators on amplifiers during a function. If indicators are off, remove the amplifier for service.

Problem	Action
Function stops before normal timeout	Batteries may require further charging. Check battery voltage under load. Check charger output.
Local PA feeds back	Lower PA volume using knob above MIC connector.
Local PA has little or no output	Hold MIC close to mouth. Increase PA volume using knob above MIC connector.
Batteries not holding charge	Check that charger fuses are intact and check charger output. Load test batteries.
EOWS*612 does not rotate	Check that the rotation relay on the backplane motherboard is operating (indicated by LED D2). Also check fuses F1 and F2 on the backplane motherboard.
Radio PA takes too long to timeout	Check radio for proper operation of squelch. CD LED should light while carrier is present.
Landline activation inputs do not function	Verify minimum 0.5-second contact closure is applied to JP14 on the backplane motherboard.

Getting Technical Support and Service

For Technical Support, contact:

Federal Signal Technical Support
Phone: 800-524-3021 or 708-534-4790
Email: techsupport@fedsig.com
www.fedsig.com

For Customer Support, contact:

Federal Signal Customer Support
Phone: 800-548-7229 or 708-534-3400 extension 367511
Email: customersupport@fedsig.com
www.fedsig.com

Appendix A Stainless Steel Care and Maintenance

Type 316 Stainless Steel is a durable material with strong anti-corrosion properties. With proper care and maintenance, it maintains an optimal appearance over a long service life. Exposure to high-saline environments, chlorides, abrasive chemicals, or carbon steel diminishes its anti-corrosion properties and increase the risk of damage.

⚠ CAUTION

Improper care of stainless steel diminishes its anti-corrosion properties and may result in surface damage.

- Use only stainless steel components (that is, washers, bolts, etc.) and tools when installing stainless steel products.
- Never use carbon steel or galvanized fasteners to install stainless steel products.
- Do not use cleaning products containing chlorides (that is, hydrochloric acid) or other abrasive chemicals.
- When power washing nearby surfaces, wrap stainless steel to prevent contact with concrete detergents.
- If chloride solutions or concrete detergents contact stainless steel, immediately rinse away with water.
- Always wear clean gloves when handling stainless steel products.
- Do not use abrasive brushes or scouring pads to wipe stainless steel.
- Unless otherwise specified, apply all cleaners and polishers with a soft, lint-free cloth or soft nylon brush. For heavier rust deposits, a nylon scouring pad may be required; however, buffing with nylon pads may alter stainless steel finishes. To minimize alteration, use only “ultra-fine” nylon pads and rub with the grain. Avoid excessive scrubbing.
- Do not clean stainless steel in direct sunlight or excessive temperatures.
- Do not weld, cut, drill, or grind carbon steel near stainless steel. Resulting particles will contaminate and rust stainless steel.
- Stainless steel care and maintenance may require the use of harmful chemicals. Follow all use and safety instructions provided with cleaning or polishing agents. Ensure personal protective equipment is worn in accordance with occupational health and safety guidelines stipulated by your local governing authority.

Cleaning

Routine cleaning with soap and water is usually sufficient to maintain the corrosion resistance and appearance of 316 Stainless Steel. Use a soft nylon brush to remove any accumulated dirt. Wash with mild soap or detergent, then rinse in clean water and wipe dry with a soft cloth.

Iron or Carbon Steel Contamination

Passivated stainless steel surfaces can be compromised by contact with iron or carbon steel products. This can result from exposure to nearby welding, cutting, drilling, or grinding of carbon steel. Grit from iron or carbon steel will quickly rust in the presence of moisture. If left unattended, contaminants may compromise passivation, leading to stainless steel rust. To remove contaminants from stainless steel surfaces, use a soft cloth to apply a solution of Oxalic Acid. Leave solution on surface for a few minutes to dissolve contaminating particles. Once clean, thoroughly rinse away all residual solution with clean water.

Corrosion

Type 316 Stainless Steel does not corrode with proper care. If signs of corrosion appear, clean immediately.

- **Minor**—Use an all-purpose lubricant, such as WD-40®, to wipe affected stainless steel. Domestic stainless steel cleaners containing calcium carbonate or citric acid, such as Citisurf® 77 Plus, can also be used. Rinse thoroughly with clean water. If rust remains, treat as moderate. If rust returns in a short time, treat for iron or carbon steel contamination.
- **Moderate**—Use E-NOX CLEAN™ or another phosphoric acid based stainless steel cleaner. Spread the cleaner evenly over the surface, wait 30-60 minutes, and then neutralize the acid with an alkaline cleaner like UNO S F. Thoroughly rinse away all residue with clean water. If rust remains, the stainless steel may need to be treated for severe corrosion or be replaced. If rust returns in a short time, treat for iron or carbon steel contamination.
- **Severe**—Due to the highly corrosive nature of severe rust treatments and the inherent risks to personnel and surrounding environments, a professional service provider is recommended. Severe rust is treated with a pickling bath, typically containing highly corrosive hydrofluoric acid. Once treated, stainless steel can be passivated with mild nitric acid.

Mortar and Cement Spatter

If mortar or cement comes into contact with stainless steel, remove it immediately. Use E-NOX CLEAN or another phosphoric acid based stainless steel cleaner. Spread the cleaner evenly over the surface, wait 30-60 minutes, and then neutralize the acid with an alkaline cleaner like UNO S F. Thoroughly rinse away all residue with clean water.

Graffiti Removal

Remove graffiti from stainless steel with a biodegradable graffiti-cleaning spray or wipe. Avoid using knives or hard scraping tools to remove graffiti, as these may damage stainless steel surfaces.

Oil and Grease Marks

Remove oil or grease from stainless steel with hydrocarbon solvents such as methylated spirit (Bartoline is a common brand), isopropyl alcohol (that is, rubbing alcohol) or acetone. Apply solvent several times with a clean, non-scratching cloth until all oil or grease is removed.

Heavily Neglected or Tarnished Surfaces

Use domestic metal polish to improve the appearance of tarnished stainless steel. Chrome polishes for automotive parts are suitable for stainless steel and are widely available. Treat entire stainless-steel surface to avoid discolored patches.

Heavily Damaged Products

To avoid progression of damage, identify and address problems as early as possible. Heavy damage includes structural compromises such as visible dents, cracks, breaks, and rust that can undermine the integrity of a product. Heavily damaged products should be removed from service until a repair or replacement can be made. To prevent worsening of damage, remove any significant rust as soon as possible.

NOTICE

This content is provided for informational purposes only. Any mention of a specific product is not a guarantee of quality or effectiveness. Federal Signal is not responsible for any improper use or handling of hazardous chemicals.

Appendix B Wiring Diagrams

Figure 20 DSA Retrofit Wiring for UV Controllers


REVISED DSA AND DSA RETROFIT WIRING FOR ULTRAVOICE CONTROLLERS

NOTE: IMPROPER INSTALLATION WILL RESULT IN DAMAGE TO THE DRIVERS.
IN THE REVISED AND RETROFIT DSA CONFIGURATIONS, DRIVERS ARE IN A SERIES RESISTIVE CONFIGURATION.
EACH SET OF SERIAL CONFIGURATION DRIVERS CAN HANDLE HALF OF THE WATTAGE OUTPUT. THEREFORE EACH
SET OF SERIAL CONFIGURATION OF DRIVERS CAN BE PUT IN PARALLEL, WITH ANOTHER SET OF SERIAL
CONFIGURATION DRIVERS, UP TO 4 DRIVERS PER AMPLIFIER.
* ODD NUMBER DSA REQUIRES ANOTHER ODD NUMBER DSA TO ACHIEVE THE EXTRA REQUIRED DRIVER.


WRAP ANY UNUSED DRIVER LEADS WITH ELECTRICAL TAPE.




DSA2
DSA-UV-KIT
(RETROFIT KIT)

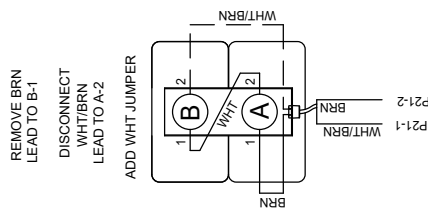


DSA3
DSA-UV-KIT
(RETROFIT KIT)

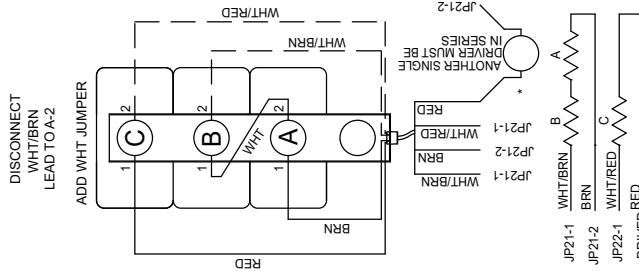


DSA4
DSA4-UV-KIT
(RETROFIT KIT)

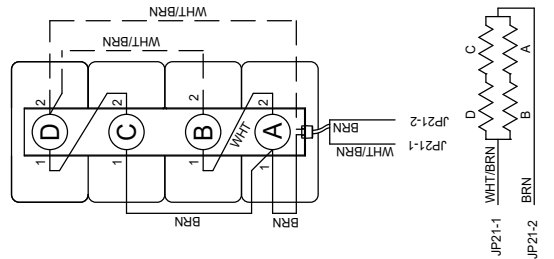

DSA5
DSA5(6)-UV-KIT
(RETROFIT KIT)

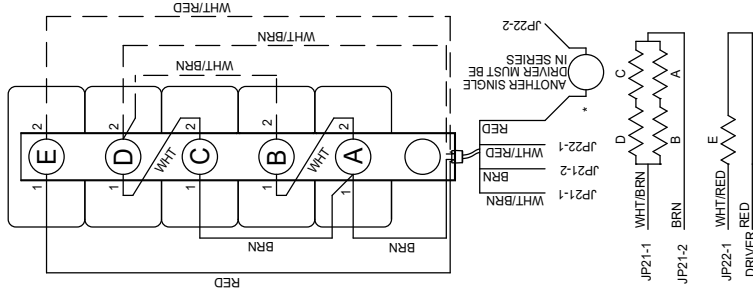

DSA6
DSA5(6)-UV-KIT
(RETROFIT KIT)

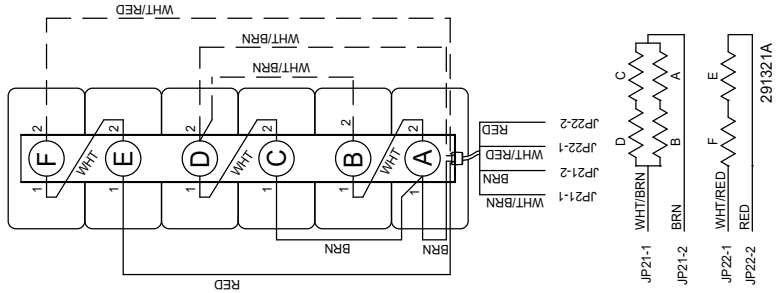

ORIGINAL DSA WIRING FOR ULTRA VOICE CONTROLLERS NOT USING THE RETROFIT KIT

NOTE: IMPROPER INSTALLATION WILL RESULT IN DAMAGE TO THE DRIVERS.

IMPROPER INSTALLATION WILL RESULT IN DAMAGE TO THE DRIVERS.
IN THE ORIGINAL OBSOLETE DSA CONFIGURATIONS, DRIVERS ARE IN PARALLEL RESISTIVE CONFIGURATION. EACH SET OF PARALLEL CONFIGURATION DRIVERS CAN HANDLE HALF OF THE AMP OUTPUT VOLTAGE. THEREFORE EACH SET OF PARALLEL CONFIGURATION DRIVERS CAN BE PUT IN SERIES, WITH ANOTHER SET OF PARALLEL CONFIGURATION DRIVERS, UP TO 4 DRIVERS PER AMPLIFIER.

ODD NUMBER DSA REQUIRES ANOTHER ODD NUMBER DSA TO ACHIEVE THE EXTRA REQUIRED DRIVER.

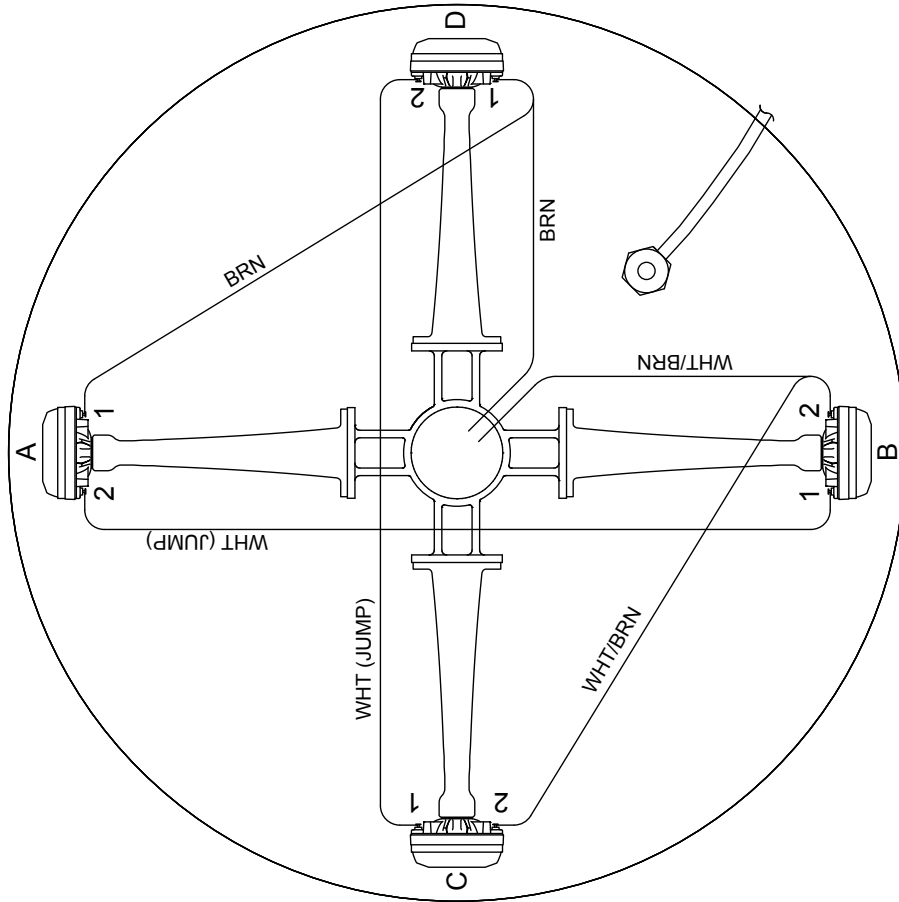


Figure 22 Modulator Speaker Array Retrofit Wiring

MODULATOR SPEAKER ARRAY RETROFIT WIRING FOR PRE-2002 MC & MCP CONTROLLERS TO ULTRAVOICE CONTROLLERS - MOD-UV-KIT (RETROFIT KIT)

ACTIVE MODULE	DRIVER- TERMINAL	WIRE COLOR
1 CUT RED & WHT/RED	A - 1 / A - 2	BROWN /WHT(JUMP)
	B - 1 / B - 2	WHT(JUMP)/WHT/BRN
	C - 1 / C - 2	WHT(JUMP)/ WHT/BRN
	D - 1 / D - 2	BROWN /WHT(JUMP)
2 CUT YEL & WHT/YEL	E - 1 / E - 2	ORG /WHT(JUMP)
	F - 1 / F - 2	WHT(JUMP)/WHT/ORG
	G - 1 / G - 2	WHT(JUMP)/ WHT/ORG
	H - 1 / H - 2	ORG /WHT(JUMP)
3 CUT BLU & WHT/BLU	I - 1 / I - 2	GRN /WHT(JUMP)
	J - 1 / J - 2	WHT(JUMP)/ WHT/GRN
	K - 1 / K - 2	WHT(JUMP)/ WHT/GRN
	L - 1 / L - 2	GRN /WHT(JUMP)
4 CUT GRY & WHT/GRY	M - 1 / M - 2	VIO /WHT(JUMP)
	N - 1 / N - 2	WHT(JUMP)/ WHT/VIO
	O - 1 / O - 2	WHT(JUMP)/ WHT/VIO
	P - 1 / P - 2	VIO /WHT(JUMP)
5 CUT WHT & BLK/WHT	Q - 1 / Q - 2	TAN /WHT(JUMP)
	R - 1 / R - 2	WHT(JUMP)/ WHT/TAN
	S - 1 / S - 2	WHT(JUMP)/ WHT/TAN
	T - 1 / T - 2	TAN /WHT(JUMP)
6 CUT PINK & WHT/PINK	U - 1 / U - 2	BLK /WHT(JUMP)
	V - 1 / V - 2	WHT(JUMP)/ WHT/BLK
	W - 1 / W - 2	WHT(JUMP)/ WHT/BLK
	X - 1 / X - 2	BLK /WHT(JUMP)

NOTE: EACH ACTIVE MODULE REQUIRES TWO WHITE JUMPERS (#T300214-09-009)



TOP VIEW MODULE 1
DRIVER ORIENTATION

291283C

Figure 23 Modulator Speaker Array Retrofit Wiring

MODULATOR SPEAKER ARRAY RETROFIT WIRING FOR PRE-2002 MC & MCP CONTROLLERS TO ULTRAVOICE CONTROLLERS (**WITHOUT** USING MOD-UV-KIT)

MODEL	WIRES EXTENDING FROM MODULATOR	
MOD1004	WHITE/BROWN	TO JP21-1 (MOTHERBOARD)
	BROWN	JUMPER
	WHITE/RED	
MOD2008	RED	TO JP21-2 (MOTHERBOARD)
	WHITE/ORANGE	TO JP22-1 (MOTHERBOARD)
	ORANGE	JUMPER
	WHITE/YELLOW	
MOD3012	YELLOW	TO JP22-2 (MOTHERBOARD)
	WHITE/GREEN	TO JP23-1 (MOTHERBOARD)
	GREEN	JUMPER
	WHITE/BLUE	
	BLUE	
MOD4016	WHITE/VIOLET	TO JP23-2 (MOTHERBOARD)
	VIOLET	JUMPER
	WHITE/GRAY	
	GRAY	
MOD5020	BLACK/WHITE	TO JP24-2 (MOTHERBOARD)
	WHITE	TO JP25-1 (MOTHERBOARD)
	WHITE/TAN	JUMPER
	TAN	TO JP25-2 (MOTHERBOARD)
MOD6024	WHITE/BLACK	TO JP26-1 (MOTHERBOARD)
	BLACK	JUMPER
	WHITE/PINK	
	PINK	

291324B

Figure 24 UV Controller Two-way Radio Wiring Diagram

Figure 24 UV Controller Two-way Radio Wiring Diagram


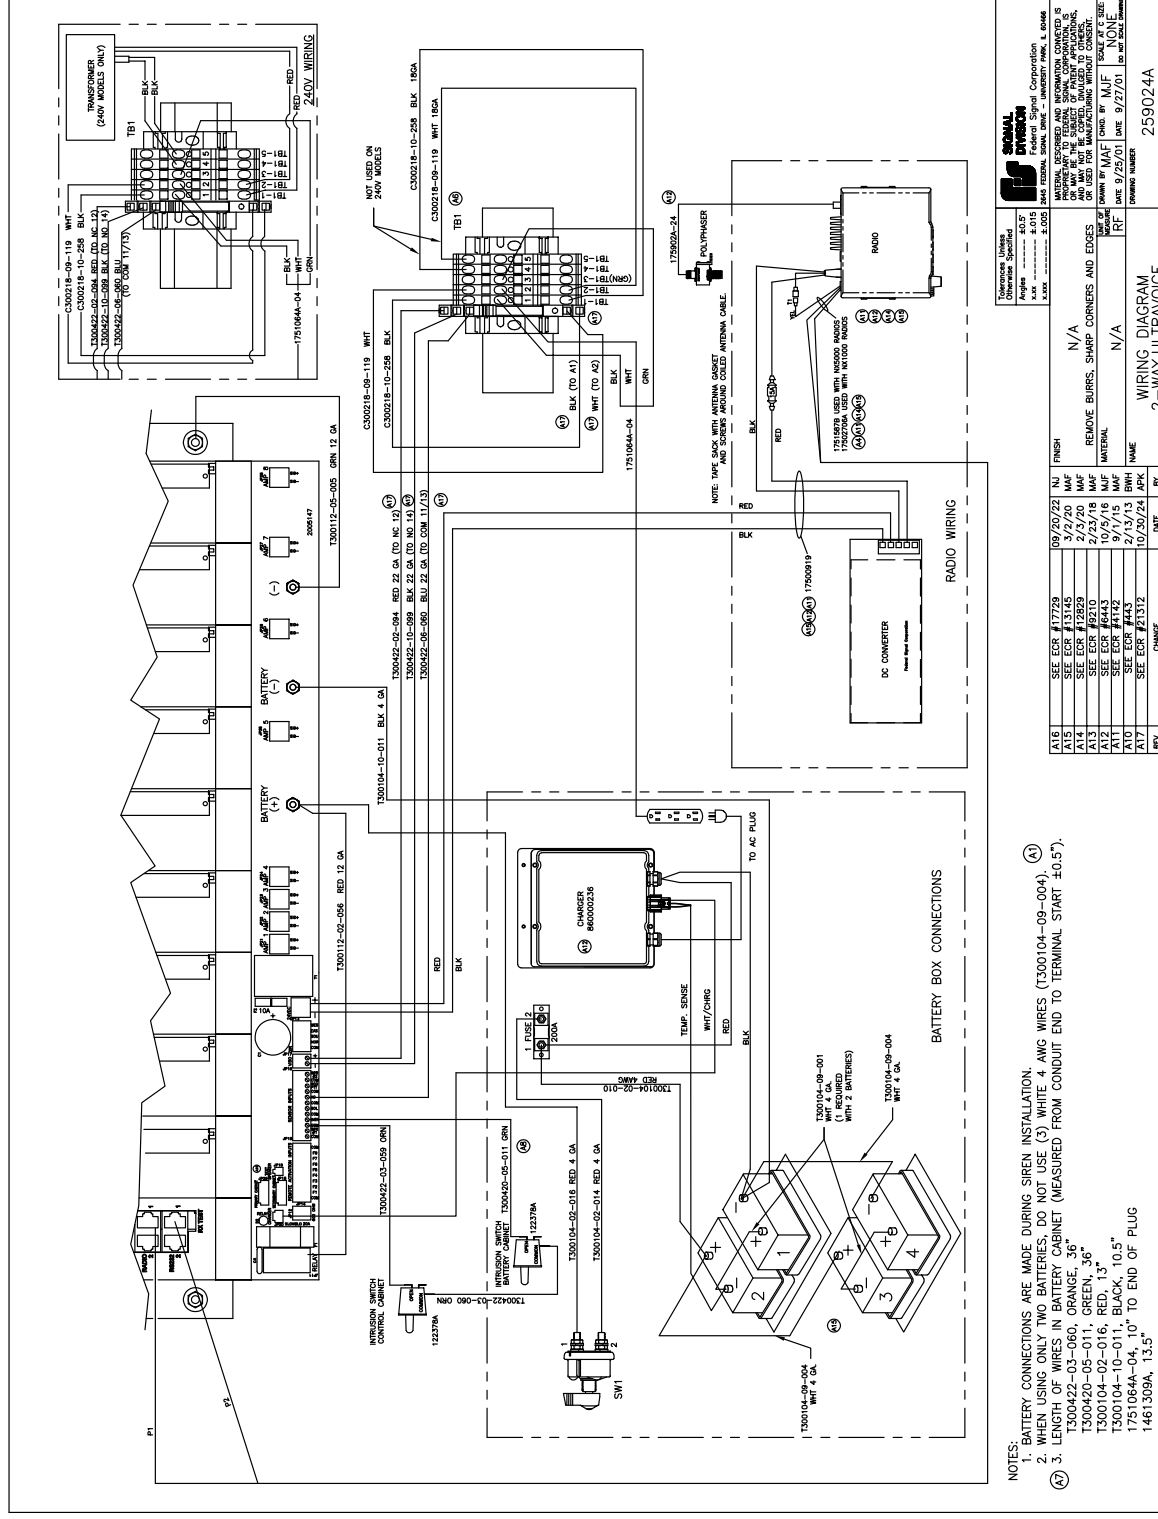


Figure 25 UVTD-IP Broadband Wiring Diagram

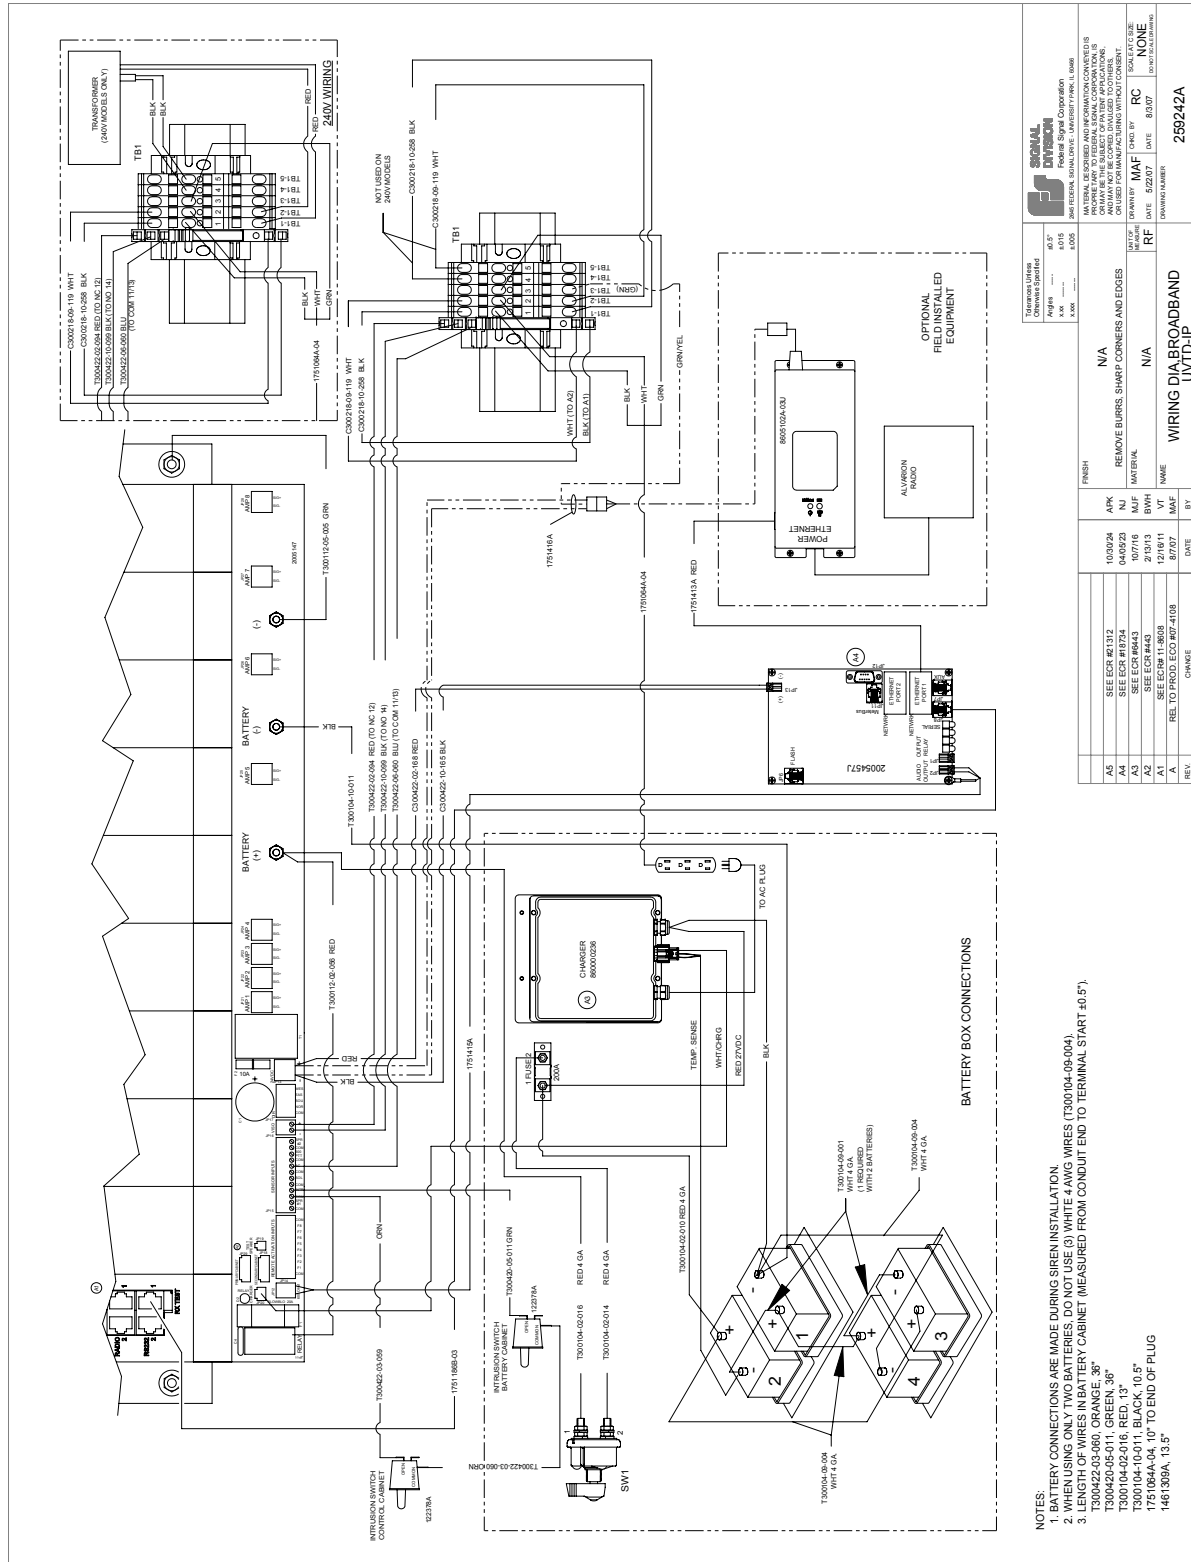

- NOTES:
1. BATTERY CONNECTIONS ARE MADE DURING SIREN INSTALLATION.
 2. BATTERY WIRING SHOULD BE MADE USING 12 AWG WIRE.
 3. LENGTH OF WIRES IN BATTERY CABINET (MEASURED FROM CONDUIT END TO TERMINAL START 40 FT).
 4. T300104-09-001, GREEN, 35'
 5. T300104-09-002, ORANGE, 35'
 6. T300104-09-003, RED, 13'
 7. T300104-09-004, 10' TO END OF PLUG
 8. 146 135A, 13.5'



TABLE 1: PARTS LIST

QTY	PART #	DESCRIPTION	UNIT
1	175-14-0A	CABLE 12 CONDUCTOR SHIELD	FT
1	175-14-0B	CABLE 12 CONDUCTOR SHIELD	FT
1	175-14-0C	CABLE 12 CONDUCTOR SHIELD	FT
1	175-14-0D	CABLE 12 CONDUCTOR SHIELD	FT
1	175-14-0E	CABLE 12 CONDUCTOR SHIELD	FT
1	175-14-0F	CABLE 12 CONDUCTOR SHIELD	FT
1	175-14-0G	CABLE 12 CONDUCTOR SHIELD	FT
1	175-14-0H	CABLE 12 CONDUCTOR SHIELD	FT
1	175-14-0I	CABLE 12 CONDUCTOR SHIELD	FT
1	175-14-0J	CABLE 12 CONDUCTOR SHIELD	FT
1	175-14-0K	CABLE 12 CONDUCTOR SHIELD	FT
1	175-14-0L	CABLE 12 CONDUCTOR SHIELD	FT
1	175-14-0M	CABLE 12 CONDUCTOR SHIELD	FT
1	175-14-0N	CABLE 12 CONDUCTOR SHIELD	FT
1	175-14-0O	CABLE 12 CONDUCTOR SHIELD	FT
1	175-14-0P	CABLE 12 CONDUCTOR SHIELD	FT
1	175-14-0Q	CABLE 12 CONDUCTOR SHIELD	FT
1	175-14-0R	CABLE 12 CONDUCTOR SHIELD	FT
1	175-14-0S	CABLE 12 CONDUCTOR SHIELD	FT
1	175-14-0T	CABLE 12 CONDUCTOR SHIELD	FT
1	175-14-0U	CABLE 12 CONDUCTOR SHIELD	FT
1	175-14-0V	CABLE 12 CONDUCTOR SHIELD	FT
1	175-14-0W	CABLE 12 CONDUCTOR SHIELD	FT
1	175-14-0X	CABLE 12 CONDUCTOR SHIELD	FT
1	175-14-0Y	CABLE 12 CONDUCTOR SHIELD	FT
1	175-14-0Z	CABLE 12 CONDUCTOR SHIELD	FT

TABLE 2: WIRING CONNECTIONS

WIRING	DESCRIPTION	UNIT
1	175-14-0A	FT
1	175-14-0B	FT
1	175-14-0C	FT
1	175-14-0D	FT
1	175-14-0E	FT
1	175-14-0F	FT
1	175-14-0G	FT
1	175-14-0H	FT
1	175-14-0I	FT
1	175-14-0J	FT
1	175-14-0K	FT
1	175-14-0L	FT
1	175-14-0M	FT
1	175-14-0N	FT
1	175-14-0O	FT
1	175-14-0P	FT
1	175-14-0Q	FT
1	175-14-0R	FT
1	175-14-0S	FT
1	175-14-0T	FT
1	175-14-0U	FT
1	175-14-0V	FT
1	175-14-0W	FT
1	175-14-0X	FT
1	175-14-0Y	FT
1	175-14-0Z	FT

Technical drawing showing the interior of the cabinet and the labels on the cabinet door. The interior view includes labels 1 through 14, indicating various components and shelves. The door view shows labels 15 through 20, indicating specific labels on the door. A label 'LABELS ON CABINET DOOR' is also present.

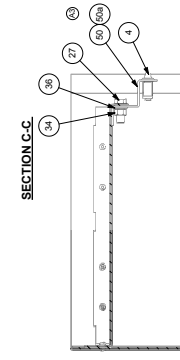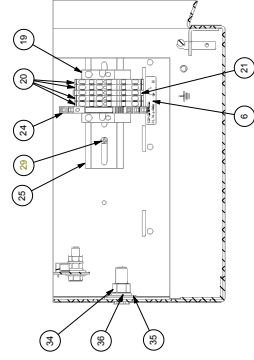

CITY	PART #	WARRANT DESCRIPTION
0	25621-1A	WRING DRAINAGE DRAIN
0	1755-00A-00	CABLE CAR, AIR VEHICLES
1	1755-00A-00	CABLE CAR, AIR VEHICLES
2	30021-09-001	WIRE 100' 12N 12N 12N
3	30021-09-001	WIRE 100' 12N 12N 12N
4	30042-02-001	WIRE 100' 12N 12N 12N
5	30042-02-001	WIRE 100' 12N 12N 12N
6	30042-02-001	WIRE 100' 12N 12N 12N
7	30042-02-001	WIRE 100' 12N 12N 12N
8	30042-02-001	WIRE 100' 12N 12N 12N
9	30042-02-001	WIRE 100' 12N 12N 12N
10	30042-02-001	WIRE 100' 12N 12N 12N
11	30042-02-001	WIRE 100' 12N 12N 12N
12	30042-02-001	WIRE 100' 12N 12N 12N
13	30042-02-001	WIRE 100' 12N 12N 12N
14	30042-02-001	WIRE 100' 12N 12N 12N
15	30042-02-001	WIRE 100' 12N 12N 12N
16	30042-02-001	WIRE 100' 12N 12N 12N
17	30042-02-001	WIRE 100' 12N 12N 12N
18	30042-02-001	WIRE 100' 12N 12N 12N
19	30042-02-001	WIRE 100' 12N 12N 12N
20	30042-02-001	WIRE 100' 12N 12N 12N
21	30042-02-001	WIRE 100' 12N 12N 12N
22	30042-02-001	WIRE 100' 12N 12N 12N
23	30042-02-001	WIRE 100' 12N 12N 12N
24	30042-02-001	WIRE 100' 12N 12N 12N
25	30042-02-001	WIRE 100' 12N 12N 12N
26	30042-02-001	WIRE 100' 12N 12N 12N
27	30042-02-001	WIRE 100' 12N 12N 12N
28	30042-02-001	WIRE 100' 12N 12N 12N
29	30042-02-001	WIRE 100' 12N 12N 12N
30	30042-02-001	WIRE 100' 12N 12N 12N
31	30042-02-001	WIRE 100' 12N 12N 12N
32	30042-02-001	WIRE 100' 12N 12N 12N
33	30042-02-001	WIRE 100' 12N 12N 12N
34	30042-02-001	WIRE 100' 12N 12N 12N
35	30042-02-001	WIRE 100' 12N 12N 12N
36	30042-02-001	WIRE 100' 12N 12N 12N
37	30042-02-001	WIRE 100' 12N 12N 12N
38	30042-02-001	WIRE 100' 12N 12N 12N
39	30042-02-001	WIRE 100' 12N 12N 12N
40	30042-02-001	WIRE 100' 12N 12N 12N
41	30042-02-001	WIRE 100' 12N 12N 12N
42	30042-02-001	WIRE 100' 12N 12N 12N
43	30042-02-001	WIRE 100' 12N 12N 12N
44	30042-02-001	WIRE 100' 12N 12N 12N
45	30042-02-001	WIRE 100' 12N 12N 12N
46	30042-02-001	WIRE 100' 12N 12N 12N
47	30042-02-001	WIRE 100' 12N 12N 12N
48	30042-02-001	WIRE 100' 12N 12N 12N
49	30042-02-001	WIRE 100' 12N 12N 12N
50	30042-02-001	WIRE 100' 12N 12N 12N
51	30042-02-001	WIRE 100' 12N 12N 12N
52	30042-02-001	WIRE 100' 12N 12N 12N
53	30042-02-001	WIRE 100' 12N 12N 12N
54	30042-02-001	WIRE 100' 12N 12N 12N
55	30042-02-001	WIRE 100' 12N 12N 12N
56	30042-02-001	WIRE 100' 12N 12N 12N
57	30042-02-001	WIRE 100' 12N 12N 12N
58	30042-02-001	WIRE 100' 12N 12N 12N
59	30042-02-001	WIRE 100' 12N 12N 12N
60	30042-02-001	WIRE 100' 12N 12N 12N
61	30042-02-001	WIRE 100' 12N 12N 12N
62	30042-02-001	WIRE 100' 12N 12N 12N
63	30042-02-001	WIRE 100' 12N 12N 12N
64	30042-02-001	WIRE 100' 12N 12N 12N
65	30042-02-001	WIRE 100' 12N 12N 12N
66	30042-02-001	WIRE 100' 12N 12N 12N
67	30042-02-001	WIRE 100' 12N 12N 12N
68	30042-02-001	WIRE 100' 12N 12N 12N
69	30042-02-001	WIRE 100' 12N 12N 12N
70	30042-02-001	WIRE 100' 12N 12N 12N
71	30042-02-001	WIRE 100' 12N 12N 12N
72	30042-02-001	WIRE 100' 12N 12N 12N
73	30042-02-001	WIRE 100' 12N 12N 12N
74	30042-02-001	WIRE 100' 12N 12N 12N
75	30042-02-001	WIRE 100' 12N 12N 12N
76	30042-02-001	WIRE 100' 12N 12N 12N
77	30042-02-001	WIRE 100' 12N 12N 12N
78	30042-02-001	WIRE 100' 12N 12N 12N
79	30042-02-001	WIRE 100' 12N 12N 12N
80	30042-02-001	WIRE 100' 12N 12N 12N
81	30042-02-001	WIRE 100' 12N 12N 12N
82	30042-02-001	WIRE 100' 12N 12N 12N
83	30042-02-001	WIRE 100' 12N 12N 12N
84	30042-02-001	WIRE 100' 12N 12N 12N
85	30042-02-001	WIRE 100' 12N 12N 12N
86	30042-02-001	WIRE 100' 12N 12N 12N
87	30042-02-001	WIRE 100' 12N 12N 12N
88	30042-02-001	WIRE 100' 12N 12N 12N
89	30042-02-001	WIRE 100' 12N 12N 12N
90	30042-02-001	WIRE 100' 12N 12N 12N
91	30042-02-001	WIRE 100' 12N 12N 12N
92	30042-02-001	WIRE 100' 12N 12N 12N
93	30042-02-001	WIRE 100' 12N 12N 12N
94	30042-02-001	WIRE 100' 12N 12N 12N
95	30042-02-001	WIRE 100' 12N 12N 12N
96	30042-02-001	WIRE 100' 12N 12N 12N
97	30042-02-001	WIRE 100' 12N 12N 12N
98	30042-02-001	WIRE 100' 12N 12N 12N
99	30042-02-001	WIRE 100' 12N 12N 12N
100	30042-02-001	WIRE 100' 12N 12N 12N

AMPLIFIER TABLE							
NO. OF AMPS	1	2	3	4	5	6	7
8,600115A	8	7	6	5	4	3	2
							1


NOVEL		HAWK		ITEM	QTY	DESCRIPTION
NOV	HAWK					
1	1	1223A-01	SWITCH DISCONNECT PLATED			
2	1	1223A-02	WAGE PLATE DISCONNECT 15W			
3	1	1223A-03	WAGE PLATE DISCONNECT 30W			
4	2	461A-01	WIRE JOINTS 1/4IN-20			
5	1	11235B-01	CABLE 10N 1/4IN-1/2IN			
6	1	11235B-02	CABLE 10N 1/2IN-1/4IN			
7	1	11235B-03	CABLE 10N 1/4IN-3/8IN			
8	1	11235B-04	CABLE 10N 3/8IN-1/2IN			
9	2	16189A-01	SCREW 1/4IN-20			
10	2	16189A-02	SCREW 1/4IN-20			
11	1	16145A-01	SCREW 1/4IN-20			
12	1	16145A-02	SCREW 1/4IN-20			
13	1	16145A-03	SCREW 1/4IN-20			
14	1	10232A-30SS	CABINET CONTROLS 1/4IN-20			
15	1	XXXXXX-XXXX	CABINET CONTROLS 1/4IN-20			
16	1	XXXXXX-XXXX	CABINET CONTROLS 1/4IN-20			
17	1	XXXXXX-XXXX	CABINET CONTROLS 1/4IN-20			
18	1	XXXXXX-XXXX	CABINET CONTROLS 1/4IN-20			
19	1	XXXXXX-XXXX	CABINET CONTROLS 1/4IN-20			
20	1	XXXXXX-XXXX	CABINET CONTROLS 1/4IN-20			
21	1	XXXXXX-XXXX	CABINET CONTROLS 1/4IN-20			
22	1	XXXXXX-XXXX	CABINET CONTROLS 1/4IN-20			
23	1	XXXXXX-XXXX	CABINET CONTROLS 1/4IN-20			
24	1	XXXXXX-XXXX	CABINET CONTROLS 1/4IN-20			
25	34	7004A-19-08	SCREW 1/4IN-20			
26	34	7004A-19-08	SCREW 1/4IN-20			
27	10	7004A-19-08	SCREW 1/4IN-20			
28	10	7004A-19-08	SCREW 1/4IN-20			
29	10	7004A-19-08	SCREW 1/4IN-20			
30	10	7004A-19-08	SCREW 1/4IN-20			
31	10	7004A-19-08	SCREW 1/4IN-20			
32	1	XXXXXX-XXXX	CABINET CONTROLS 1/4IN-20			
33	1	XXXXXX-XXXX	CABINET CONTROLS 1/4IN-20			
34	1	XXXXXX-XXXX	CABINET CONTROLS 1/4IN-20			
35	1	XXXXXX-XXXX	CABINET CONTROLS 1/4IN-20			
36	1	XXXXXX-XXXX	CABINET CONTROLS 1/4IN-20			
37	1	XXXXXX-XXXX	CABINET CONTROLS 1/4IN-20			
38	1	XXXXXX-XXXX	CABINET CONTROLS 1/4IN-20			
39	2	462A-00A	WIRE JOINTS 1/4IN-20			
40	2	462A-00A	WIRE JOINTS 1/4IN-20			
41	1	XXXXXX-XXXX	CABINET CONTROLS 1/4IN-20			
42	2	46010B-01	WIRE JOINTS 1/4IN-20			
43	1	XXXXXX-XXXX	CABINET CONTROLS 1/4IN-20			
44	1	XXXXXX-XXXX	CABINET CONTROLS 1/4IN-20			
45	2	46010C-01	WIRE JOINTS 1/4IN-20			
46	200	46010A	WIRE JOINTS 1/4IN-20			
47	20	46010A	WIRE JOINTS 1/4IN-20			
48	20	46010A	WIRE JOINTS 1/4IN-20			
49	20	46010A	WIRE JOINTS 1/4IN-20			
50	20	46010A	WIRE JOINTS 1/4IN-20			
51	20	46010A	WIRE JOINTS 1/4IN-20			
52	20	46010A	WIRE JOINTS 1/4IN-20			
53	20	46010A	WIRE JOINTS 1/4IN-20			
54	20	46010A	WIRE JOINTS 1/4IN-20			
55	20	46010A	WIRE JOINTS 1/4IN-20			
56	20	46010A	WIRE JOINTS 1/4IN-20			
57	20	46010A	WIRE JOINTS 1/4IN-20			
58	20	46010A	WIRE JOINTS 1/4IN-20			
59	20	46010A	WIRE JOINTS 1/4IN-20			
60	20	46010A	WIRE JOINTS 1/4IN-20			
61	20	46010A	WIRE JOINTS 1/4IN-20			
62	20	46010A	WIRE JOINTS 1/4IN-20			
63	20	46010A	WIRE JOINTS 1/4IN-20			
64	20	46010A	WIRE JOINTS 1/4IN-20			
65	20	46010A	WIRE JOINTS 1/4IN-20			
66	20	46010A	WIRE JOINTS 1/4IN-20			
67	20	46010A	WIRE JOINTS 1/4IN-20			
68	20	46010A	WIRE JOINTS 1/4IN-20			
69	20	46010A	WIRE JOINTS 1/4IN-20			
70	20	46010A	WIRE JOINTS 1/4IN-20			
71	20	46010A	WIRE JOINTS 1/4IN-20			
72	20	46010A	WIRE JOINTS 1/4IN-20			
73	20	46010A	WIRE JOINTS 1/4IN-20			
74	20	46010A	WIRE JOINTS 1/4IN-20			
75	20	46010A	WIRE JOINTS 1/4IN-20			
76	20	46010A	WIRE JOINTS 1/4IN-20			
77	20	46010A	WIRE JOINTS 1/4IN-20			
78	20	46010A	WIRE JOINTS 1/4IN-20			
79	20	46010A	WIRE JOINTS 1/4IN-20			
80	20	46010A	WIRE JOINTS 1/4IN-20			
81	20	46010A	WIRE JOINTS 1/4IN-20			
82	20	46010A	WIRE JOINTS 1/4IN-20			
83	20	46010A	WIRE JOINTS 1/4IN-20			
84	20	46010A	WIRE JOINTS 1/4IN-20			
85	20	46010A	WIRE JOINTS 1/4IN-20			
86	20	46010A	WIRE JOINTS 1/4IN-20			
87	20	46010A	WIRE JOINTS 1/4IN-20			
88	20	46010A	WIRE JOINTS 1/4IN-20			
89	20	46010A	WIRE JOINTS 1/4IN-20			
90	20	46010A	WIRE JOINTS 1/4IN-20			
91	20	46010A	WIRE JOINTS 1/4IN-20			
92	20	46010A	WIRE JOINTS 1/4IN-20			
93	20	46010A	WIRE JOINTS 1/4IN-20			
94	20	46010A	WIRE JOINTS 1/4IN-20			
95	20	46010A	WIRE JOINTS 1/4IN-20			
96	20	46010A	WIRE JOINTS 1/4IN-20			
97	20	46010A	WIRE JOINTS 1/4IN-20			
98	20	46010A	WIRE JOINTS 1/4IN-20			
99	20	46010A	WIRE JOINTS 1/4IN-20			
100	20	46010A	WIRE JOINTS 1/4IN-20			

* SEE WIRING DIAGRAM
** ITEM NOT SHOWN



X.X.X. 2008		Federal Acquisition Regulation	
X.X.X. 2008		X.X.X. 2008	
A11	SEE CCR #13507	61/20 MAF PERS	
A10	SEE CCR #07595	112/21 T/ALO	NA
A9	SEE CCR #07595	112/21 T/ALO	NA
A8	SEE CCR #07595	112/21 T/ALO	NA
A7	SEE CCR #14331	REMOVE BURRS, SHARP CORNERS AND EDGES	
A6	SEE CCR #14331	103/13 R/MI	NA
A5	SEE CCR #14331	103/13 R/MI	NA
A4	SEE CCR #14331	103/13 R/MI	NA
A3	SEE CCR #14331	103/13 R/MI	NA
A2	SEE CCR #14331	103/13 R/MI	NA
A1	SEE CCR #14331	103/13 R/MI	NA
A12	SEE CCR #14331	103/13 R/MI	NA
A13	SEE CCR #14331	103/13 R/MI	NA
A14	SEE CCR #14331	103/13 R/MI	NA
A15	SEE CCR #14331	103/13 R/MI	NA
A16	SEE CCR #14331	103/13 R/MI	NA
A17	SEE CCR #14331	103/13 R/MI	NA
A18	SEE CCR #14331	103/13 R/MI	NA
A19	SEE CCR #14331	103/13 R/MI	NA
A20	SEE CCR #14331	103/13 R/MI	NA
A21	SEE CCR #14331	103/13 R/MI	NA
A22	SEE CCR #14331	103/13 R/MI	NA
A23	SEE CCR #14331	103/13 R/MI	NA
A24	SEE CCR #14331	103/13 R/MI	NA
A25	SEE CCR #14331	103/13 R/MI	NA
A26	SEE CCR #14331	103/13 R/MI	NA
A27	SEE CCR #14331	103/13 R/MI	NA
A28	SEE CCR #14331	103/13 R/MI	NA
A29	SEE CCR #14331	103/13 R/MI	NA
A30	SEE CCR #14331	103/13 R/MI	NA
A31	SEE CCR #14331	103/13 R/MI	NA
A32	SEE CCR #14331	103/13 R/MI	NA
A33	SEE CCR #14331	103/13 R/MI	NA
A34	SEE CCR #14331	103/13 R/MI	NA
A35	SEE CCR #14331	103/13 R/MI	NA
A36	SEE CCR #14331	103/13 R/MI	NA
A37	SEE CCR #14331	103/13 R/MI	NA
A38	SEE CCR #14331	103/13 R/MI	NA
A39	SEE CCR #14331	103/13 R/MI	NA
A40	SEE CCR #14331	103/13 R/MI	NA
A41	SEE CCR #14331	103/13 R/MI	NA
A42	SEE CCR #14331	103/13 R/MI	NA
A43	SEE CCR #14331	103/13 R/MI	NA
A44	SEE CCR #14331	103/13 R/MI	NA
A45	SEE CCR #14331	103/13 R/MI	NA
A46	SEE CCR #14331	103/13 R/MI	NA
A47	SEE CCR #14331	103/13 R/MI	NA
A48	SEE CCR #14331	103/13 R/MI	NA
A49	SEE CCR #14331	103/13 R/MI	NA
A50	SEE CCR #14331	103/13 R/MI	NA
A51	SEE CCR #14331	103/13 R/MI	NA
A52	SEE CCR #14331	103/13 R/MI	NA
A53	SEE CCR #14331	103/13 R/MI	NA
A54	SEE CCR #14331	103/13 R/MI	NA
A55	SEE CCR #14331	103/13 R/MI	NA
A56	SEE CCR #14331	103/13 R/MI	NA
A57	SEE CCR #14331	103/13 R/MI	NA
A58	SEE CCR #14331	103/13 R/MI	NA
A59	SEE CCR #14331	103/13 R/MI	NA
A60	SEE CCR #14331	103/13 R/MI	NA
A61	SEE CCR #14331	103/13 R/MI	NA
A62	SEE CCR #14331	103/13 R/MI	NA
A63	SEE CCR #14331	103/13 R/MI	NA
A64	SEE CCR #14331	103/13 R/MI	NA
A65	SEE CCR #14331	103/13 R/MI	NA
A66	SEE CCR #14331	103/13 R/MI	NA
A67	SEE CCR #14331	103/13 R/MI	NA
A68	SEE CCR #14331	103/13 R/MI	NA
A69	SEE CCR #14331	103/13 R/MI	NA
A70	SEE CCR #14331	103/13 R/MI	NA
A71	SEE CCR #14331	103/13 R/MI	NA
A72	SEE CCR #14331	103/13 R/MI	NA
A73	SEE CCR #14331	103/13 R/MI	NA
A74	SEE CCR #14331	103/13 R/MI	NA
A75	SEE CCR #14331	103/13 R/MI	NA
A76	SEE CCR #14331	103/13 R/MI	NA
A77	SEE CCR #14331	103/13 R/MI	NA
A7			

Figure 33 Transformer Rectifier Wiring to Control Cabinet

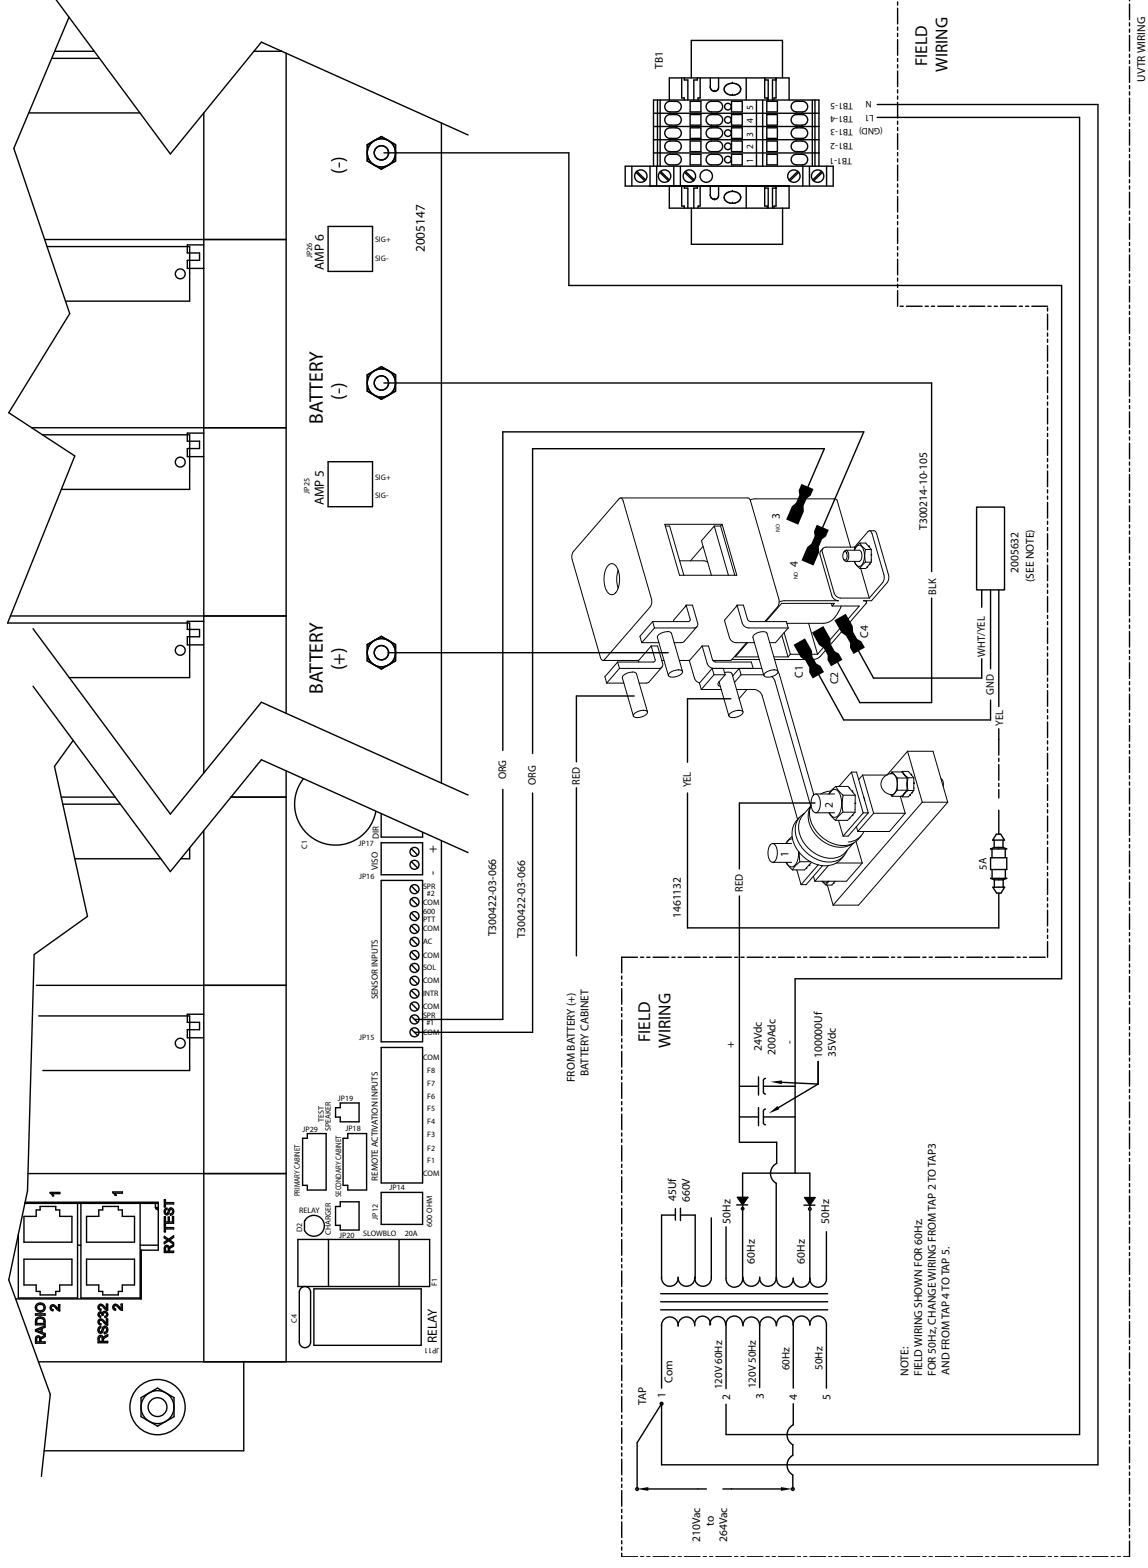

Top View Dimensions:

- Overall width: 11.50
- Overall height: 15.35
- Internal width: 10.50
- Internal height: 1.75
- Mounting hole diameter: $\phi 1.25$
- Mounting hole spacing: 2.66
- Mounting hole diameter: 6X $\phi .56$
- Access plate width: 27.00
- Access plate height: 29.00
- Access plate thickness: 5.00
- Access plate spacing: 5.00
- Access plate width: 27.00
- Access plate height: 29.00
- Access plate thickness: 5.00
- Access plate spacing: 5.00

Side View Dimensions:

- Overall height: 33.00
- Mounting hole diameter: $\phi 1.25$
- Mounting hole spacing: 2.66
- Mounting hole diameter: 6X $\phi .56$
- Access plate width: 27.00
- Access plate height: 29.00
- Access plate thickness: 5.00
- Access plate spacing: 5.00
- Access plate width: 27.00
- Access plate height: 29.00
- Access plate thickness: 5.00
- Access plate spacing: 5.00

Specifications:

- REMOVE BURRS, SHARP CORNERS AND EDGES.
- 5052-H32 ALUMINUM HOUSING
- PC
- UNIT OF MEASURE
- SCALE AT A SIZE: 1.00
- FINISH: N/A
- 2X ACCESS PLATES
- $\phi .31$ GND.

Transformer Details:

- Model #UVTR
- Class AA
- Weight: 230 LBS.
- 60 HZ OPERATION
- CONNECT 210-264VAC LINE TO 1 & 5
- CONNECT 120VAC, 700VA LOAD TO 1 & 2
- CONNECT 45UF CAP TO 6 & 8
- CONNECT 50HZ LEADS TO DIODES
- CONNECT 60HZ LEADS TO DIODES
- ISOLATE UNUSED SECONDARY LEADS

Wiring Diagram:

- 1 Com
- 2 120V top
- 3 5BA 700Vg max.
- 4 Input
- 5 210-264V
- 6 50HZ
- 7 60HZ
- 8 60HZ
- 9 24Vdc 200A/dc
- 10 100000UF 35VDC

Signal Division Federal Signal Corporation

120892A

67