

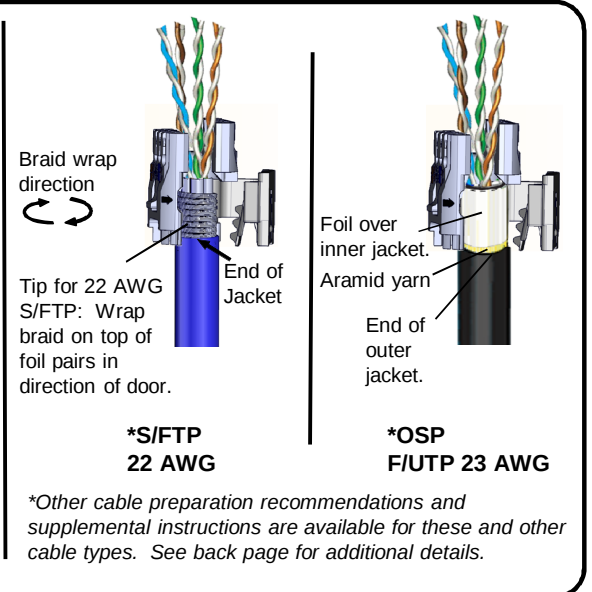
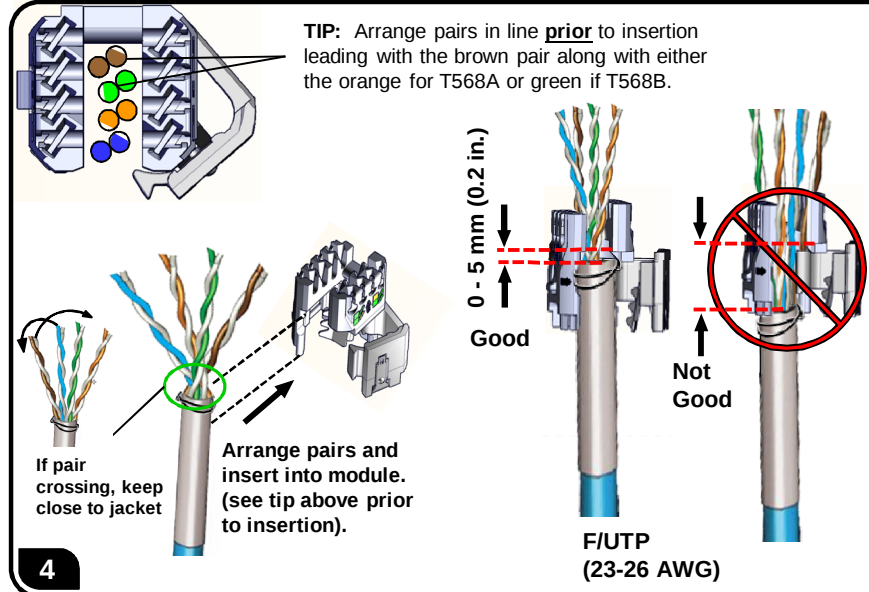
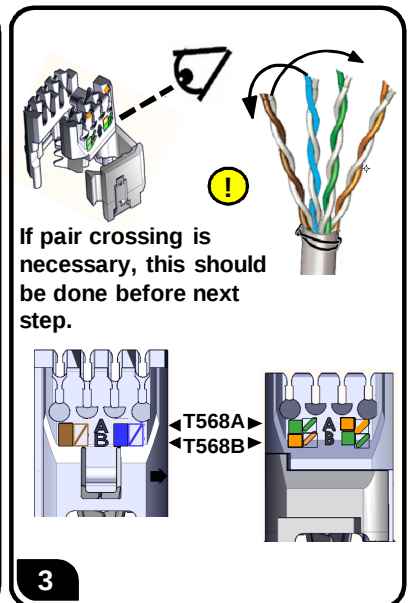
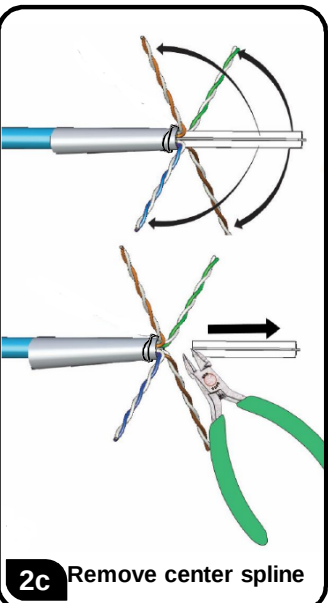
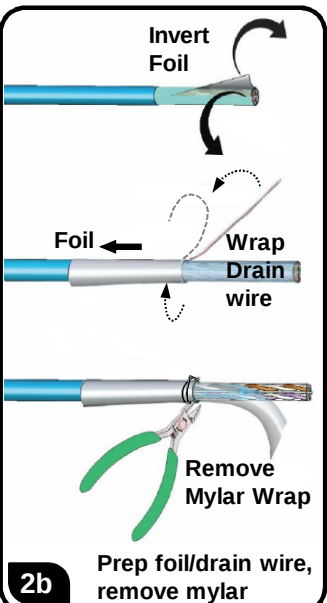
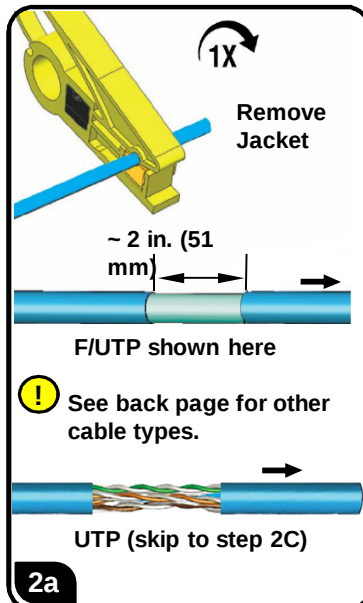
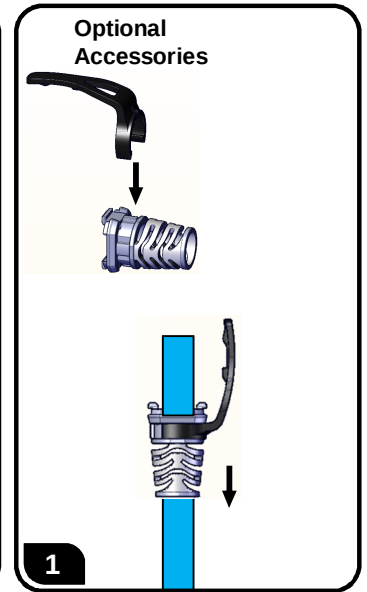
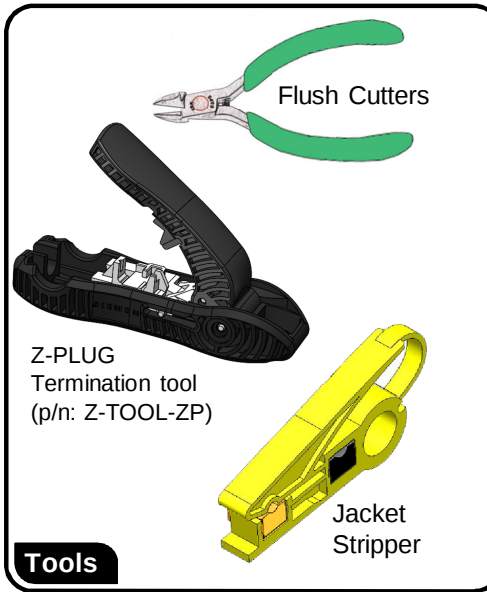
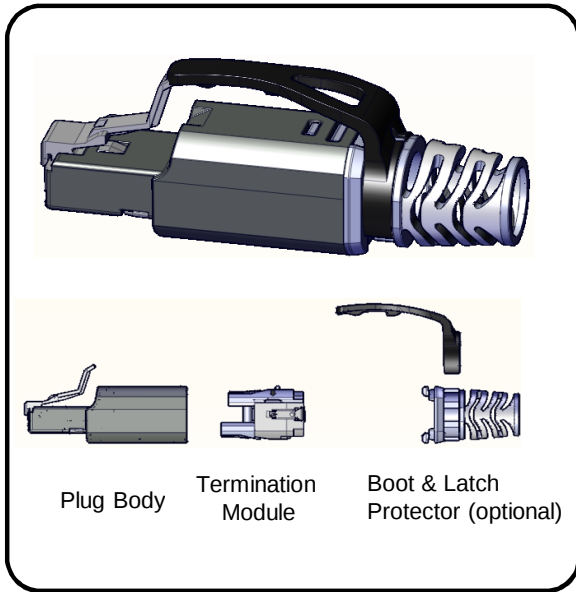
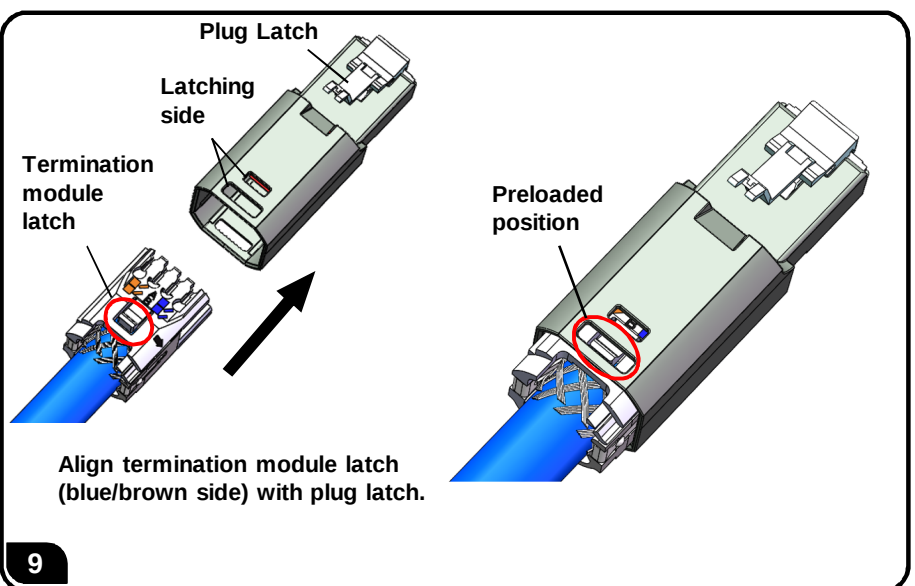
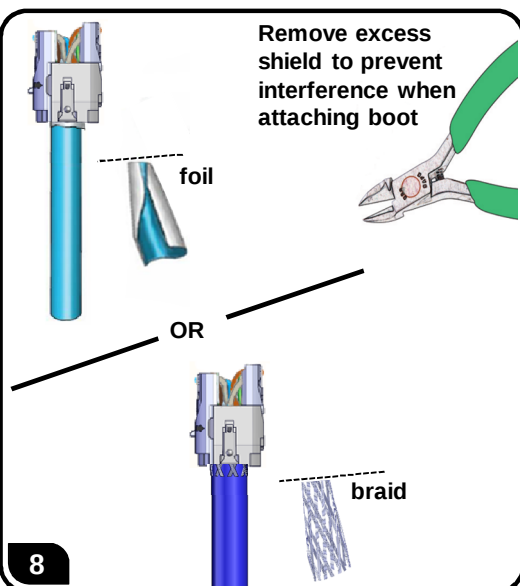
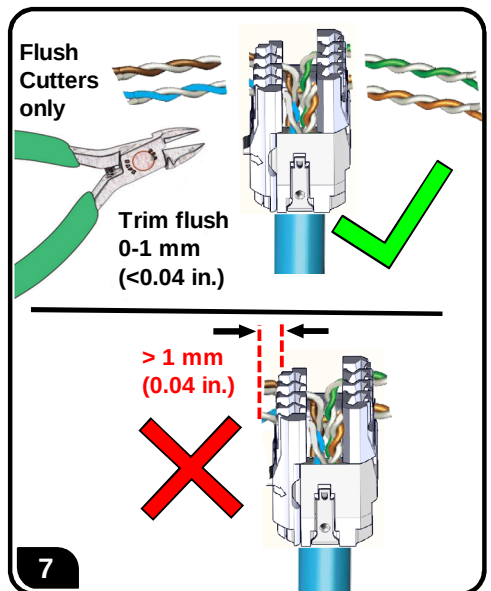





Z-PLUG Termination Instructions

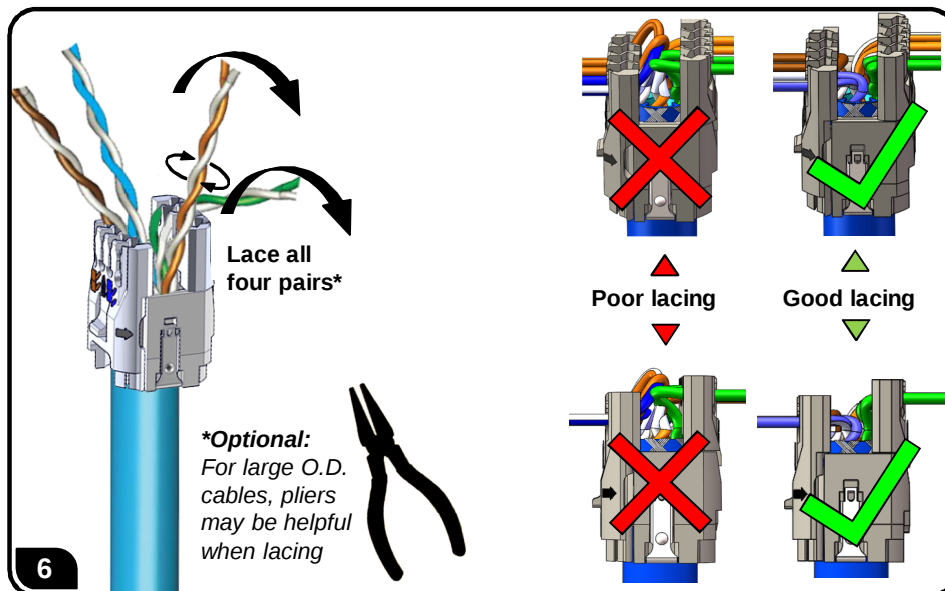





Z-PLUG Termination Instructions

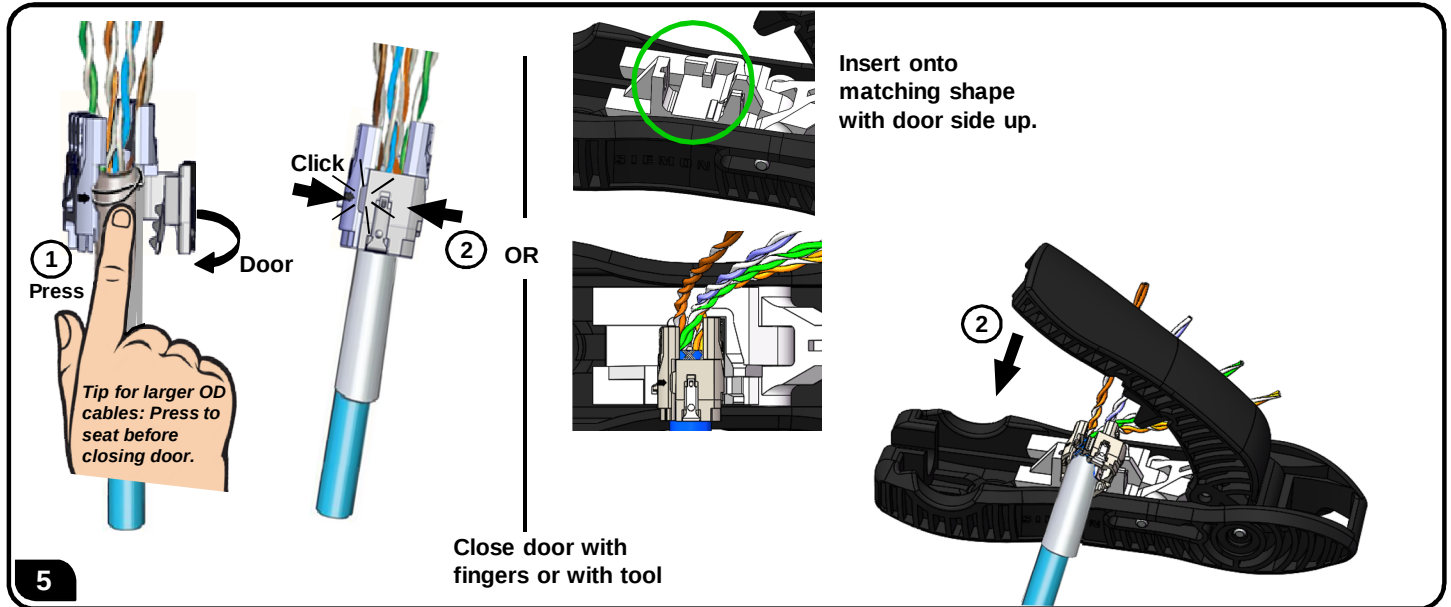

Z-PLUG Termination Instructions

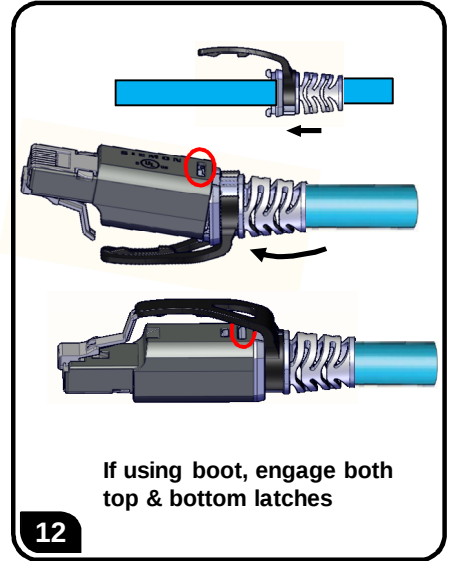
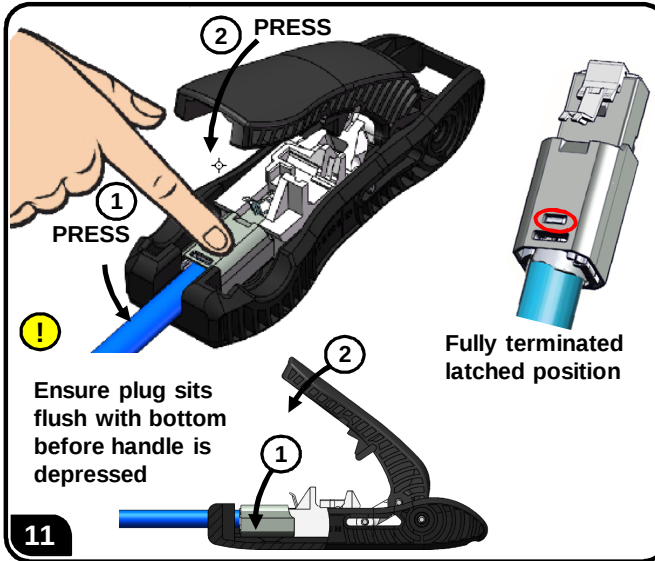
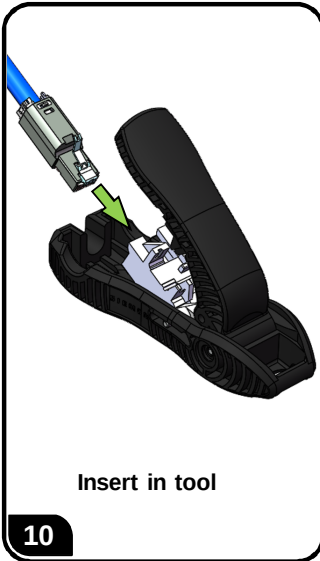


Unassembling for re-termination..

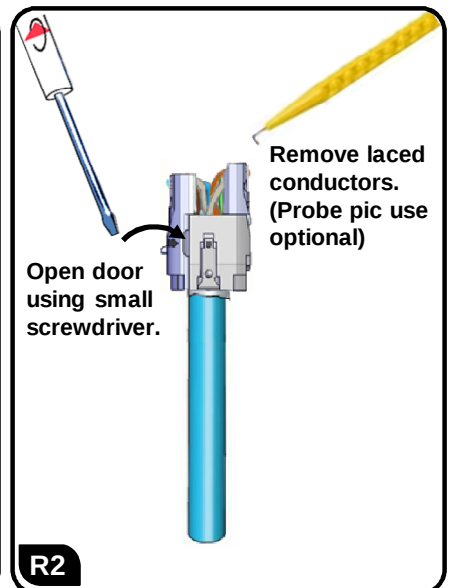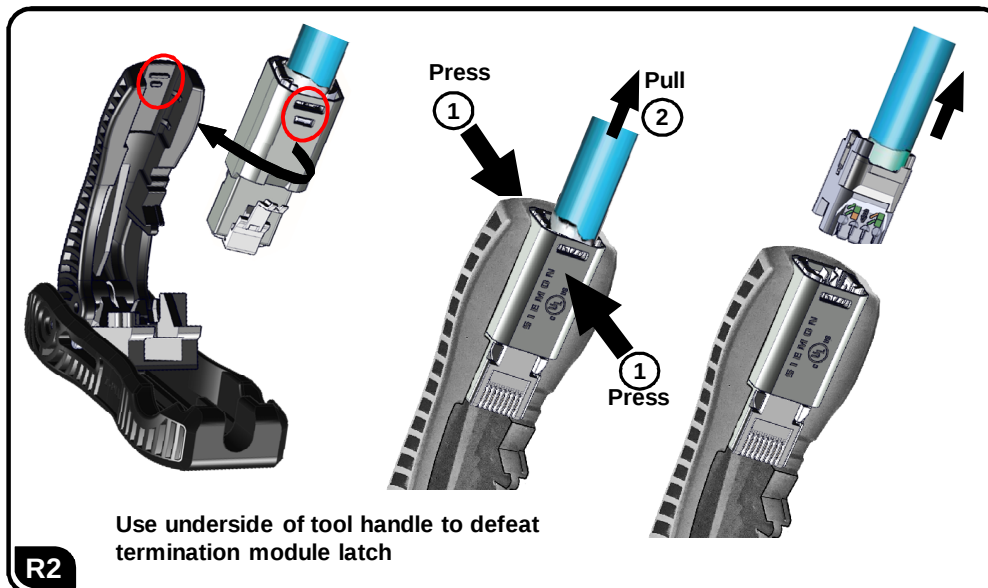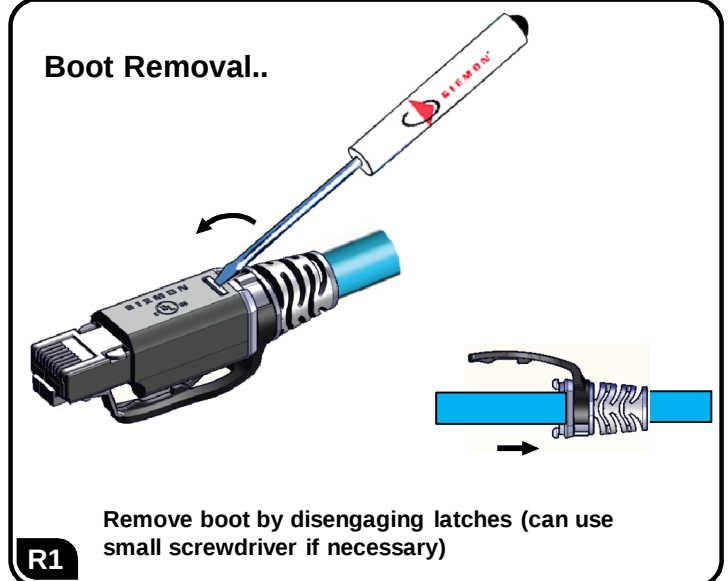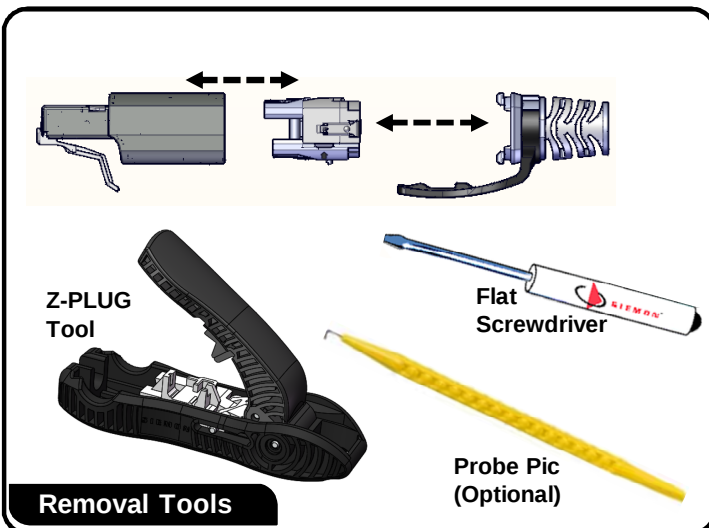





Z-PLUG Termination – Alternate Cable types

S/FTP and F/FTP Solid (23 AWG)

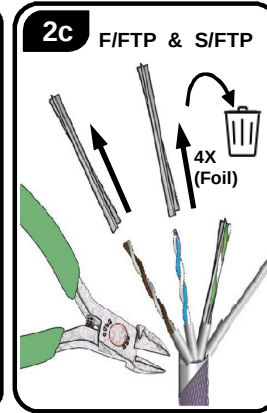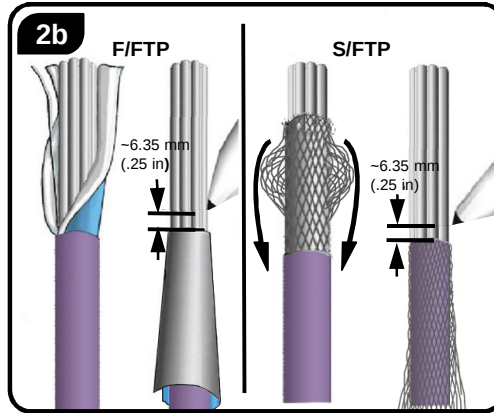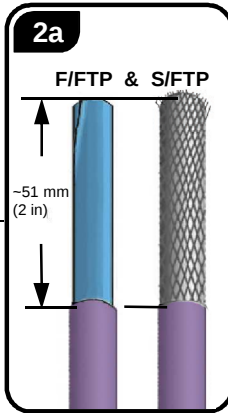






Continue To Step 3

S/FTP Solid (22 AWG)

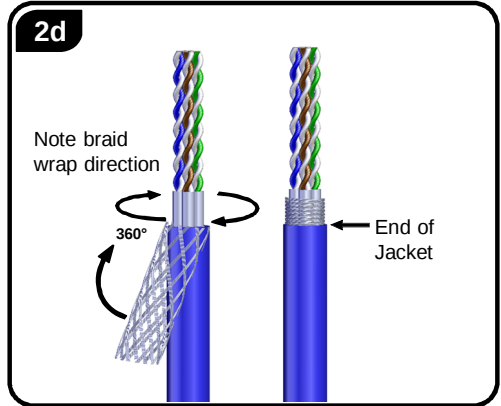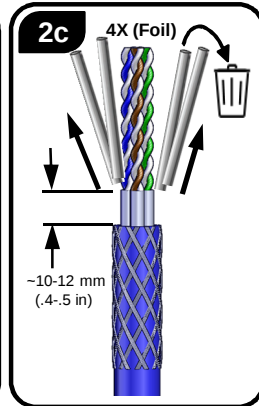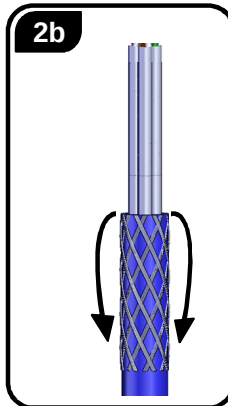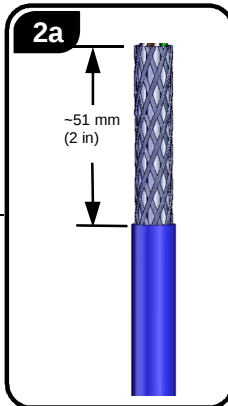



Continue To Step 3

S/FTP Stranded (26 AWG)

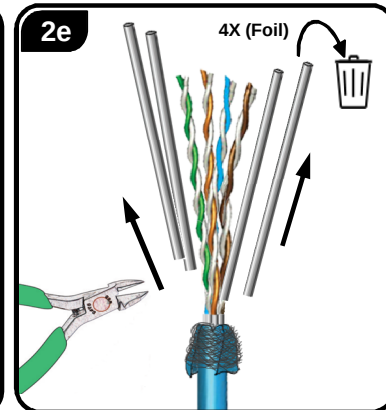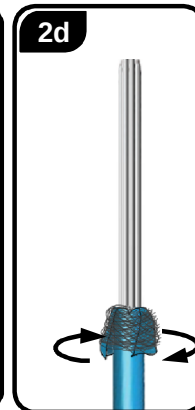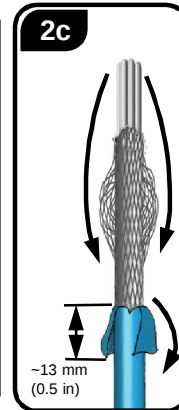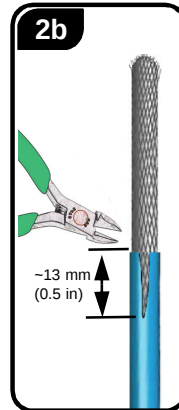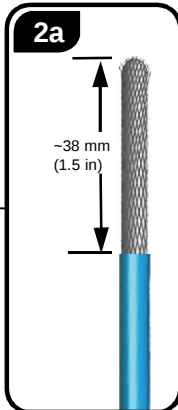

Continue To Step 3

U/FTP Solid

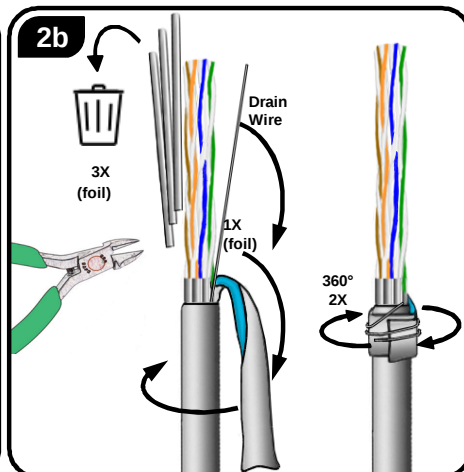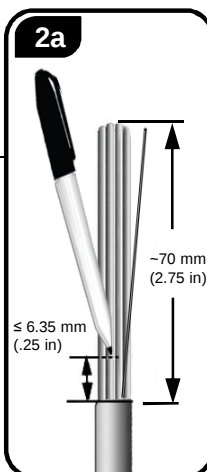

Continue To Step 3

***Note for OSP Category 6A shielded cable:**

Please refer to the supplemental cable preparation instructions available at: www.siemon.com/us/download/installation.aspx and click on **WORK AREA**.

To assist safe installations, comply with the following:

- A. Use caution when installing or modifying telecommunications circuits.
- B. Never touch uninsulated wire terminals unless the circuit has been disconnected.
- C. Never install this device in a wet location.
- D. Never install wiring during a lightning storm.

Lors de l'installation, respectez les consignes de sécurité suivantes:

- A. Utiliser avec prudence lors de l'installation ou de la modification circuits de télécommunications.
- B. Ne jamais toucher les bornes de fil métallique non isolés sauf si le circuit a été débranché.
- C. Ne jamais installer cet appareil dans un endroit humide.
- D. Ne jamais installer pendant un orage.