

This product follows under the UL1481 Fire Alarm Systems, UL603 Burglary Alarm Systems and UL294 Access Control Systems. The HP600ULX unit is to be installed in a fail safe mode unless authorized by the local AHJ. This product must be installed in compliance with Article 760 of the National Electrical Code, NFPA70, as well as NAPA72 National Fire Alarm Code and all applicable local codes.

## 1 Description

The HP600ULX is a 12VDC or 24VDC power supply with AC fail and Battery fail supervision. The unit has not been evaluated as elevator equipment, and is not authorized for bell output in Mercantile applications.

## 2 Specifications

1. Input voltage: 120VAC 60Hz; Current: 2.50A max.
2. Output Voltage: 12VDC or 24VDC, jumper selectable; Current: 6.0A continuous output maximum plus battery charger (not supervised).
3. Fail safe dry contact output on AC Failure (within one minute).
4. Built-in charger for sealed lead acid or gel cell type batteries.
5. Instantaneous transfer to stand-by battery on AC failure.
6. Battery presence detection (within 1 minute).
7. Battery low disconnect at 9.90VDC or 19.90VDC.
8. High voltage disconnect at 15VDC or 30VDC.
9. Yellow LED (L3) indication for battery disconnected and battery low.
10. Fail safe dry contact output for Battery trouble (Fail Safe).
11. Battery polarity reversal protection.
12. Thermal overload and short circuit protection.
13. DC output PTC activated indication by Red LED (L2).
14. DC output failure indication by Red LED ( L4 ).
15. AC presence indication by Green LED ( L1 ).
16. DC output indication by Red LED ( L5 ).
17. Battery Leads included.
18. Power Board Dimensions: 6.2"L x 4.7"W x 2.5"H.
19. Enclosure Dimension: 17.5"H x 13"W x 4.5"D. Accommodates two 12 Volt 12AH batteries. When using larger batteries, a UL approved enclosure must be used.

## 3 Installation Instructions

### 1. Mounting

The power supply should be installed in accordance with all Governing National Electrical and Local Codes. Mount the power supply securely in the desired location using the four (4) mounting holes.

### 2. Power Supply Input Connection

Before connecting power review the entire wiring diagram for correct installation (see Fig. 1). With the AC power disconnected, connect 120VAC to the Fuse Block as follows; L=Black (HOT), N=WHITE (Neutral), G=GREEN (Ground). Select the output voltage 12VDC or 24VDC using Jumper J1 of the Power Board J1 OFF=12VDC, J1 ON=24VDC. Voltage is Factory set and Re-Adjusting will void **Warranty**.

### 3. Output Connections

Connect the load to the DC (+) and DC (-) terminals observing polarity.

### 4. Alarm/Trouble Output

- a) **AC Fail:** Connect the “AC Fail” output “Form C” dry contacts to the monitoring device. In case of AC loss the relay, which is Fail Safe, will de-energize within one (1) minute.
- b) **Battery Fail:** Connect the Battery Fail output “Form C” dry contacts to the monitoring device. If a Battery is not connected or improperly connected, the Yellow LED (L3) will turn ON within one (1) minute and the Battery Fail output relay, which is Fail Safe, will de-energize.

### 5. Power Up

When all wiring is complete and checked, switch ON the AC Power. The Green Led (L1) will come ON indicating AC presence and the AC relay will be energized. Connect Battery observing the correct polarity. For 24VDC use the battery link provided to connect the two (2) 12 Volt Batteries in series. Secure the enclosure with the 4 screws and with the Key Lock provided.

*NOTE: For UL603 or UL294 applications use a Tamper Switch (Catalog number HPVM3 available separately), and included enclosure key lock. Connect the tamper switch NC outputs to monitoring device to notify of enclosure tampering.*



**WARNING: To reduce risk of electric shock, do not expose unit to rain or excess moisture, and disconnect power before servicing unit.**

For continuous protection against hazard, replace fuses only with exact type and rating. A readily accessible switched circuit breaker must be available to disconnect main power as required. All power limited wiring should be routed so that it cannot touch non-power limited wiring; minimum spacing 1/4". Installation and servicing should only be made by qualified personnel; contains no user-serviceable parts. Install in accordance with all local regulations and the National Electrical Code.

## 4 LED Operations

LED Number	Power Board (status when lit)
L1	Green LED - AC present
L2	Red LED - PTC activated
L3	Yellow LED - Battery low or disconnected
L4	Red LED - Dc power failure
L5	Red LED - DC output present

*Continued on next page...*

## 5 Battery Stand-By Mode Specification Chart


Output Battery Capacity	STBY/ALRM	4Hr Stand-By 15Mins/ALRM	24Hr Stand-By 15Mins/ALRM	60Hr Stand-By 5Mins/ALRM
17Ah-12V	STBY	2.00A	200mA	N/A
	ALRM	6.00A	6.00A	N/A
55Ah-12V	STBY	6.00A	1.50A	300mA
	ALRM	6.00A	6.00A	6.00A
17Ah-24V	STBY	2.00A	200mA	300mA
	ALRM	6.00A	6.00A	6.00A
55Ah-24V	STBY	6.00A	1.50A	300mA
	ALRM	6.00A	6.00A	6.00A
UL Listing		UL294 UL603	UL294 UL603 UL1481	UL1481

*Continued on next page...*

# HONEYWELL HP600ULX

REGULATED POWER SUPPLY CHARGER  
 UL LISTED AS FOLLOWS:  
 UL294 ACCESS CONTROL SYSTEMS  
 UL603 POWER SUPPLIES FOR BURGLAR ALARM SYSTEMS  
 UL1481 POWER SUPPLIES FOR FIRE PROTECTIVE SIGNALING SYSTEMS  
 NOTE: PLEASE REFER TO HP600ULX INSTALLATION MANUAL  
 FOR WIRING DIAGRAM, OPERATING INSTRUCTIONS, ETC. (PART NO: 52392 REV.A)

DATE OF MFG:  
 \_\_\_\_\_

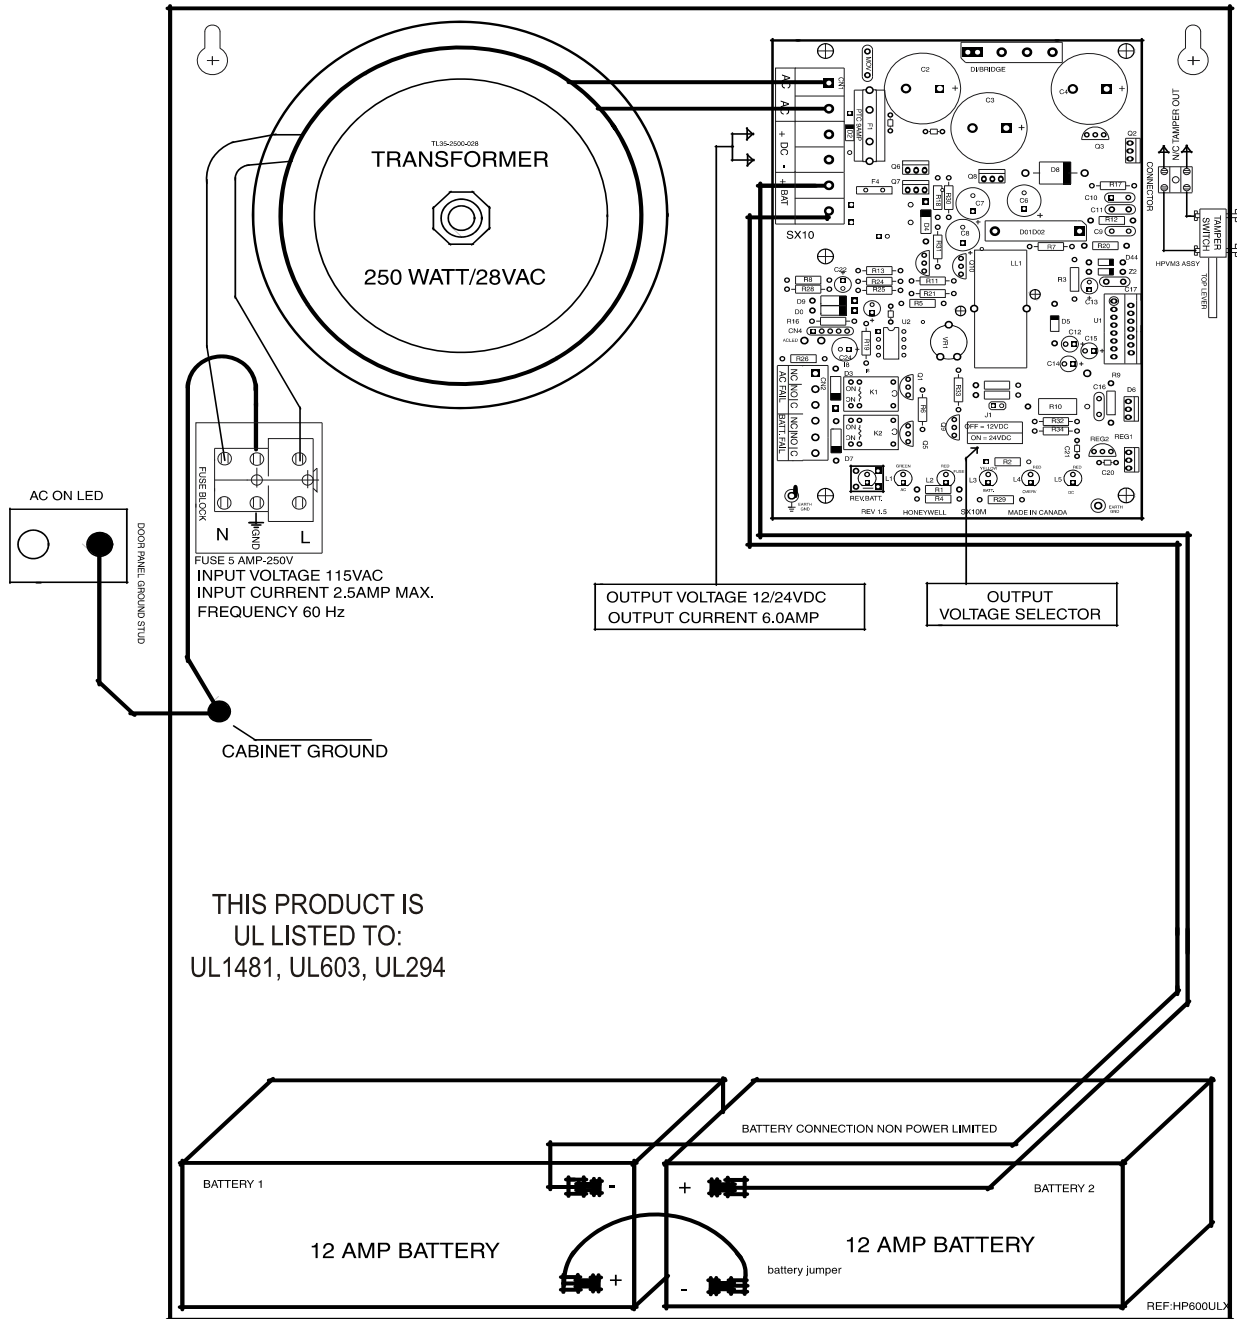

KEEP POWER LIMITED WIRING AT .25" MINIMUM SPACING FROM NON-POWER LIMITED

For additional information:

- Visit our website at <http://www.honeywellpower.com>
- Contact Technical Support at 1(877) HPP-POWER
- E-mail us at [hpp.techserv@honeywell.com](mailto:hpp.techserv@honeywell.com)